



MHI-RB

External control module

The module allows to start/stop AC through dry contact. Also you get ALARM output from the device.

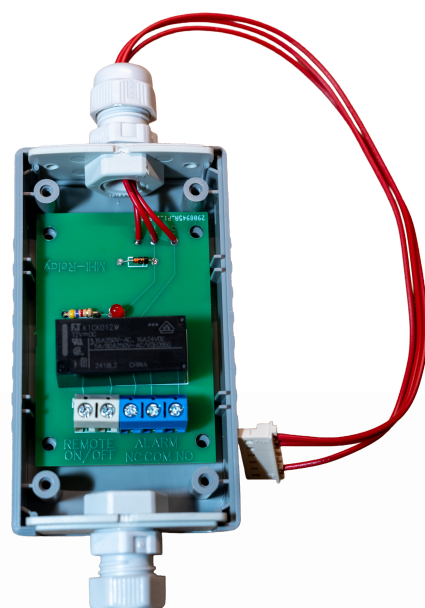

- 1 Connect plug to CNT-contact in PCB.
- 2 If needed pulse signal, turn SW2-1 to OFF mode in PCB.
- 3 To eliminate external ON/OFF control put SW2-3 to OFF in PSB.

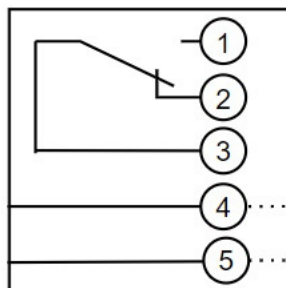

ALARM output
DC12/24V 2A or
230-240V 2A

External ON/OFF
dry contact

