

DATA BOOK

INVERTER CEILING CONCEALED TYPE RESIDENTIAL AIR-CONDITIONERS

(Split system, air to air heat pump type)


SRR50ZS-W/SRC50ZSX-W3 SRR60ZS-W/SRC60ZSX-W3

MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

CONTENTS

1. SPECIFICATIONS	2
2. EXTERIOR DIMENSIONS	4
(1) Indoor units	4
(2) Outdoor units	5
(3) Remote control	6
3. ELECTRICAL WIRING	9
(1) Indoor units	9
(2) Outdoor units	10
4. NOISE LEVEL	11
5. CHARACTERISTICS OF FAN	29
6. PIPING SYSTEM	30
7. RANGE OF USAGE & LIMITATIONS	31
8. CAPACITY TABLES	33
9. APPLICATION DATA	. 34
(1) Installation of indoor unit	34
(2) Installation of outdoor unit	. 38
(3) Safety precautions in handling air-conditioners with flammable refrigerant	42
10. OPTION PARTS	46
(1) Wired remote control (RC-EX3A, RC-E5)	46
(2) Interface kit (SC-BIKN2-E)	59
(3) Superlink E board (SC-ADNA-E)	63
(4) Bottom air inlet kit (UT-BAT2EF)	65
(5) Remote sensor kit (SC-THB-E3)	66
11. TECHNICAL INFORMATION	68
12. REFERENCE	70

■How to read the model name

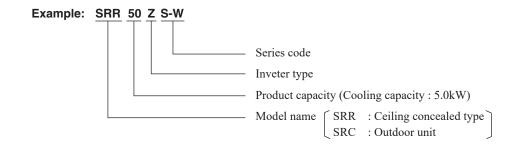

1. SPECIFICATIONS

				Model	<u></u>			SRR	50ZS-W	
Item					In	door unit	SRR50	DZS-W	Outdoor unit SRC50ZSX-W3	
Power sou		oling capacity	(range)	kW					0V, 50Hz/220V, 60Hz n.) - 6.0 (Max.))	
		eating capacity		kW					n.) - 8.2 (Max.))	
	Heating car		,·gu/	kW				, ,	-	
			Cooling						.22 - 2.02)	
	Power cons	sumption	Heating	kW				1.39 (0.	.20 - 2.86)	
	May power	Heating (H2) Max power consumption						2	2.90	
			Cooling	+			6.5		(220/ 230/ 240 V)	
	Running cu	unning current Heating		A					(220/ 230/ 240 V)	
	Inrush curre	ent, max curre		1			Max. 15			
	Power facto	Power factor Cooling				99 99				
Operation data	EER		Heating Cooling	+		3.52				
data			Heating	1			3.88			
	COP		Heating (H2)	1					-	
	Sound pow	er level	Cooling	4			9		63	
	· ·		Heating Cooling	+	Hi: 4		10:34	ULo: 29	62 51	
	Sound pres	ssure level ①	Heating	┨	Hi: 43			ULo: 32	49	
	Cound proc	naura laval (2)	Cooling	dB(A)				ULo: 25	51	
	Sound pres	ssure level 2	Heating] `´	Hi: 38			ULo: 28	49	
	Sound pres	ssure level ③	Cooling Heating	-	Hi: 4			ULo: 29	51	
		e sound press		-	Hi: 46	ivie: 43	LO: 40 -	ULo: 34	49 Cooling:42 / Heating:43	
Exterior di		leight x Width		mm		200 x 9	50 x 50	0	640 x 800(+71) x 290	
Exterior ap	pearance						_		Stucco white	
	t color: Mun	isell , RAL)		1	24				Munsell: (4.2Y 7.5/1.1), RAL: 7004	
Net weight	์ or type & Qเ	ıantity		kg			<u>'4</u> -		45 RMT5113SWE11(Twin rotary type) x 1	
		arting method)	kW			-		1.50 (Inverter driven)	
	t oil (Amoun			L		- 0.45 (DIAMOND FREEZE MB				
		ount, pre-cha	rge length)	kg	F	R32 1.30 in outdoor unit (Incl. the amount for the piping of 15m				
Heat exch					Louve	Louver fins & inner grooved tubing M fins & inner grooved tubin				
Refrigeran Fan type 8				+					ctronic expansion valve Propeller fan x 1	
	(Starting me	ethod)	-	W					34 x1 (Direct drive)	
Air flow	(Ottaiting in	otilodj	Cooling	m³/min		Me: 11.0	Lo: 10	.0 ULo: 7.5	39.0	
AIr flow			Heating	m³/min				.0 ULo: 8.5	33.0	
External st	atic pressur	re		Pa		tandard: 5		lote(5) air filter:5Pa)	, 0	
Outside ai	r intake			+	(IIIIIIai Si		ossible	ali iliter.sPa		
	uality / Quar	ntity		1		Polypropy	lene ne	t x 1	-	
	bration abso	orber			Cus	hion rubbe	r (for fa	n motor)	Rubber sleeve (for fan motor & compressor)	
Electric he		ntual		-	- Wireless remote control					
Operation	Remote cor	ntroi perature contro	nl .	+					uter thermostat	
control	Operation of		J1	†	F	RUN: Greei	n, TIME		I POWER: Green, ECONO: Green	
					Compressor overheat protection, Overcurrent protection, Drain error protection					
Safety equ	ııpments				Frost protection, Serial signal error protection, Indoor fan motor error protection					
<u> </u>	Refrigerant	piping size (O.D.)	mm	Heating overload protection(High pressure control), Cooling overload protection Liquid line: φ 6.35 (1/4") Gas line: φ 12.7 (1/2")					
	Connecting	method				Flare co			Flare connection	
Installation	Attached le	ngth of piping		m						
data	Insulation for	or piping : line (one wa	v) length	m			Nece		sides), independent - 30	
		aht diff. betwee		J m	l N	lax.20 (∩ı	ıtdoor ı) / Max.20 (Outdoor unit is lower)	
	Drain hose					se connec			Hole size ϕ 20 × 5 pcs.	
	p, max lift he			mm		Built-in,		0	-	
	nded breake			A					20	
	cked rotor a		Coro nomel	A	1 Em?	× 1 2222	/ Inclu		5.0	
Interconne IP number	cting wires	Size	Core number	I	1.5mm²		(Includ	iing earth cal	ble) / Terminal block (Screw fixing type)	
P number Standard accessories			+		IP.		unting kit .Io	int for drain piping		
Option parts				Wi	ed remote			it (SC-BIKN2-E), Bottom air inlet kit		
Notes (*	Notes (1) The data are measured at the following con			ing cond	ditions.	The p	ipe len	gth is 5m.	(6) Mike position of measureing sound	
ĺ	Item	Indoor air tem	perature Out	door air te	emperature			N	pressure level of indoor unit is	
	Operation DB WB DB			WB	Standard	3	Note	shown below.		
	Cooling	27°C	19°C 3	5°C	24°C	ISO5151-7	1		1 Air - Unit - Air - Air - Air -	
	Heating 20°C – 7°C		7°C	6°C	ISO5151-H	111	on-duct air fillter)	Unit Unit Surply dust		
Heating (H2) 20°C – 2°C				2°C	1°C	ISO5151-H	12 (********	an mile)	1.5m	
	(2) This air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound level indicates the value in an anechoic chamber. During operation these									
·	values are somewhat higher due to ambient conditions. (4) Select the breaker size according to the own national standard.									
(2	ון ספופטנ נחפ ה)The maxim	num external s	according to static pressur	แเย own e can he	nauonai s e used un	to 50Pa. h	ut the a	ir flow will he	e reduced. Refer to page 29.	
	(a)									


				Mo	odel					R60Z		
Item				_		Inc	loor unit	SRR60		1011	Outdoor unit SRC60ZSX-W3	
Power sou			to . /		1-1-1/						50Hz/220V, 60Hz	
	Nominal cod				kW		5.6 (1.2 (Min.) - 6.5 (Max.)) 6.7 (1.0 (Min.) - 8.6 (Max.))					
	Nominal hea		ity (range)		kW kW				0.7 (1.0 (1	/IIII.) -	- 8.6 (IVIAX.))	
	Heating cap	acity (HZ)	Coolin		ΚVV				1 70 /	U 33	- 2.57)	
	Power consumption Heating Heating (H2)										- 2.89)	
					kW				1.09 (0.20	- 2.09)	
	Max power	consumptio		(112)						2.90		
	Running current Cooling										0/ 230/ 240 V)	
			Heatin	ng	Α			8.7		$\overline{}$	0/ 230/ 240 V)	
	Inrush curre	Inrush current, max current					5.0 Max. 15				k. 15	
	Power facto	r	Coolin		%	99 99						
Operation data	EER		Heatin Coolin				3.29					
uala	EEK		Heatin							3.54		
	COP		Heating							3.54	•	
			Coolin				6	0		Ť	65	
	Sound power	er level	Heatin					3			65	
			Coolin			Hi: 44			ULo: 30		52	
	Sound press	sure level (1	Heatin				Me: 41				53	
	Saurad	ouro la 1 /6	Coolin		IB(A)		Me: 34			\neg	52	
	Sound press	sure level (2	Heatin		` '				ULo: 29		53	
	Sound press	eura leval @	Coolin			Hi: 42			ULo: 30		52	
	Souria pres	oure rever 3	Heatin			Hi: 47			ULo: 35		53	
	Silent mode							-			Cooling:42 / Heating:43	
	mensions (H	eight x Widt	th x Depth)) 1	mm		200 x 9	50 x 500)		640 x 800(+71) x 290	
	ppearance	all DALL						-			Stucco white	
	nt color: Muns	sell , RAL)			lea.			1		+	Munsell: (4.2Y 7.5/1.1), RAL: 7004	
Net weight	sor type & Qu	ontitu			kg			4		-	45 RMT5113SWE11(Twin rotary type) x 1	
	sor motor (Sta		\d\		kW	-				- -	1.50 (Inverter driven)	
			ju)		L	-					0.45 (DIAMOND FREEZE MB75)	
	Refrigerant oil (Amount, type) Refrigerant (Type, amount, pre-charge length)		h)	kg	R32 1 30 in outdoor unit (Incl. th			r unit (Inc	l the	the amount for the piping of 15m)		
Heat exch		Julit, pre-cii	arge lerigii	.11)	кy							
Refrigeran						Louver fins & inner grooved tubing M fins & inner grooved tubing Capillary tubes + Electronic expansion valve				nic expansion valve		
	& Quantity			_			Centrifugal fan x 3 Propeller fan x 1					
	(Starting me	thod)			W		85 x1 (Di			\dashv	34 x1 (Direct drive)	
	(Otarting me	tilou)	Coolin	na		Hi: 14 5	Me: 11.5			10	41.5	
Air flow			Heatin		n³/min		Me: 13.0				39.0	
External s	tatic pressure		11.000		Pa	S	tandard: 5	*N	ote(5)		0	
						(Initial Sta	atic pressu		air fiiter:5F	'a)		
Outside ai	uality / Quan	.tit.						ssible	v 1	-	-	
	ibration abso					Polypropylene net x 1 Cushion rubber (for fan motor) Rubber:				- Rubber sleeve (for fan motor & compressor)		
Electric he		ibci				- Rubbel sleeve (for fair fillow)					-	
	Remote con	itrol				Wireless remote control						
Operation	Room temp		trol								thermostat	
control	Operation d					RUN: Green, TIMER: Yellow, HI POWER: Green, ECONO: Green						
Cofoty on	inmente					Com	pressor ove	rheat pro	otection, O	vercur	rrent protection, Drain error protection	
Safety equ	upmems					Frost protection, Serial signal error protection, Indoor fan motor error protection Heating overload protection (High pressure control), Cooling overload protection						
	Refrigerant	pipina size i	(Q.D)		mm					Gas line: ϕ 12.7 (1/2")		
	Connecting		/			Flare connection Flare connection				- /		
L	Attached ler		ng		m					\neg	-	
Installation data	Insulation for	or piping						Neces	sary (Bot	h sid	es), independent	
uata	Refrigerant				m					3 - 30	~	
	Vertical heig	ht diff. betwe	en O/U and	d I/U	m					er) / /	Max.20 (Outdoor unit is lower)	
	Drain hose					Но	se connec				Hole size ϕ 20 × 5 pcs.	
	np, max lift he				mm		Built-in,	MAX60	0		-	
	nded breake				Α					20		
	cked rotor an	'			Α					5.0		
	ecting wires	Size	x Core nur	mber		1.5mm ²		`	ing earth o	cable) / Terminal block (Screw fixing type)	
IP number				IPX0 IPX4								
Standard accessories				147					for drain piping			
Option parts Wired remote control, Interface kit (SC-BIKN2-E), Bottom air inlet kit Notes (1) The data are measured at the following conditions. The pipe length is 5m. (6) Mike position of measureing sound						<i>,</i>						
Notes (The p	ipe leng	th is 5m.	(6)) Mike position of measureing sound pressure level of indoor unit is	
	Item Indoor air temperature Outdoor air t				Standards	1	Note		pressure level of indoor unit is shown below.			
[0	Operation	DB	WB	DB		WB				(1)		
Cooling 27°C 19°C 35°C		24°C	ISO5151-T	— no	n-duct	•	Air+					
	Heating	20°C	-	7℃		6°C	ISO5151-H	11	n-duct air fillter)		1.5m Paturn duct	
Ī	Heating (H2)	20°C	-	2°C		1°C	ISO5151-H	2 ******	an mici /	_	1.5m	
(3	(2) This air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions. (4) Select the breaker size according to the own national standard.											
								ut the ai	r flow will	be re	duced. Refer to page 29.	

RWA000Z282 🛕

2. EXTERIOR DIMENSIONS

(1) Indoor units

Models SRR50, 60ZS-W

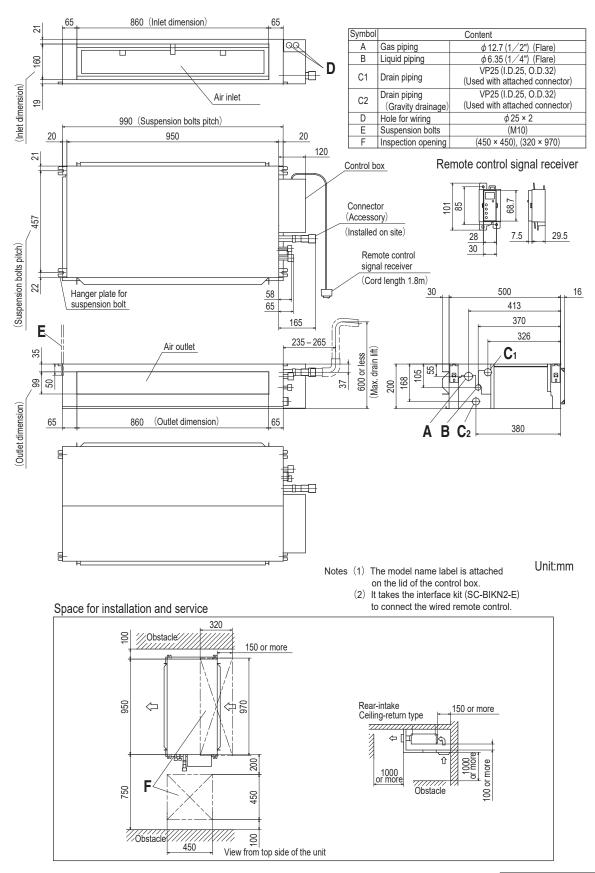

Unit:mm

(2) Outdoor units

Models SRC50ZSX-W3, 60ZSX-W3

φ6.35(1/4") (Flare) M10-12 × 4 places ϕ 20 × 5 places Service valve connection (Liquid side) Content Service valve connection (Gas side) Pipe/cable draw-out hole Drain discharge hole Anchor bolt hole ပ В

Notes

(1) The unit must not be surrounded by walls on the four sides.
(2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
(3) If the unit is installed in the location where there is a possibility of strong winds, place the unit such that the direction of air from the

outlet gets perpendicular to the wind direction.
Leave 200mm or more space above the unit.
The wall height on the outlet side should be 1200mm or less.
The model name label is attached on the front side of the unit. 400 -.

Service) space) 4 \mathbb{C}^{3} /Inlet 7


Ф
sbac
tion (
tallai
n ins
muu
Min


Terminal block

l i	18	do)8	do
Ħ	280	Open	08	250
Ħ	280	75	80	Open
н	Open	100	100	250
Examples installation Size	L1	L2	F7	L4

Sen Sen

Exam	L	L2	F3	L4					
/ :									
				,0°					
O		<	_	,0	40°		◁		
1		_	_	7	\geq		<u> </u>		33.5
		•			1				8
Ψ_	-	_	_			*	<u> </u>	lk K	148.4

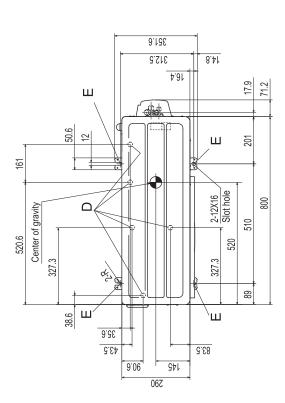


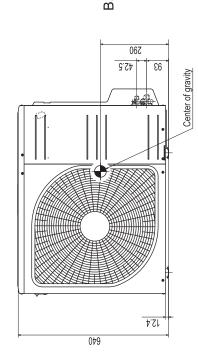


(3) Remote control

(a) Wireless remote control

Unit : mm

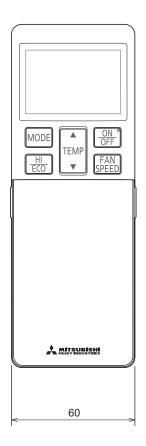


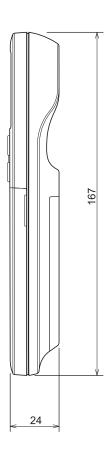


(b) Wired remote control (Option parts) Interface kit (SC-BIKN2-E) is required to use the wired remote control.

Model RC-EX3A

Dimensions (Viewed from front)

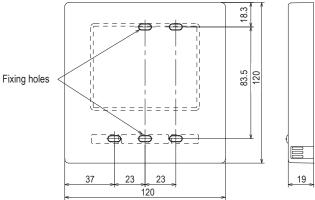

Installation space

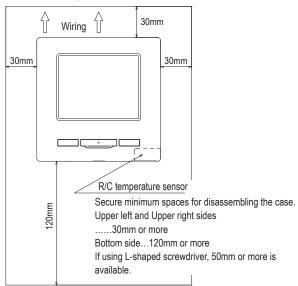

• Do not install the remote control at following places.

- (1) It could cause break-down or deformation of remote control.
 - · Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0 °C or below, or 40 °C or above
 - · Where the surface is not flat
 - · Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
 - · Place with high humidity where condensation occurs on the remote control
 - · Where the remote control gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
 - Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - · Place affected by outside air in opening/closing the door
 - · Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large
- (4) When you are using the automatic grille up and down panel in the IU, you may not be able to confirm the up and down motion.
 - · Where the IU cannot be visually confirmed

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.


The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

R/C cable:0.3mm² x 2 cores

When the cable length is longer than 100m, the max size for wires used in the R/C case is 0.5mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≦ 200m	0.5mm ² × 2 cores
≦ 300m	0.75mm ² × 2 cores
≦ 400m	1.25mm² × 2 cores
≤ 600m	2.0mm ² × 2 cores

Adapted RoHS directive

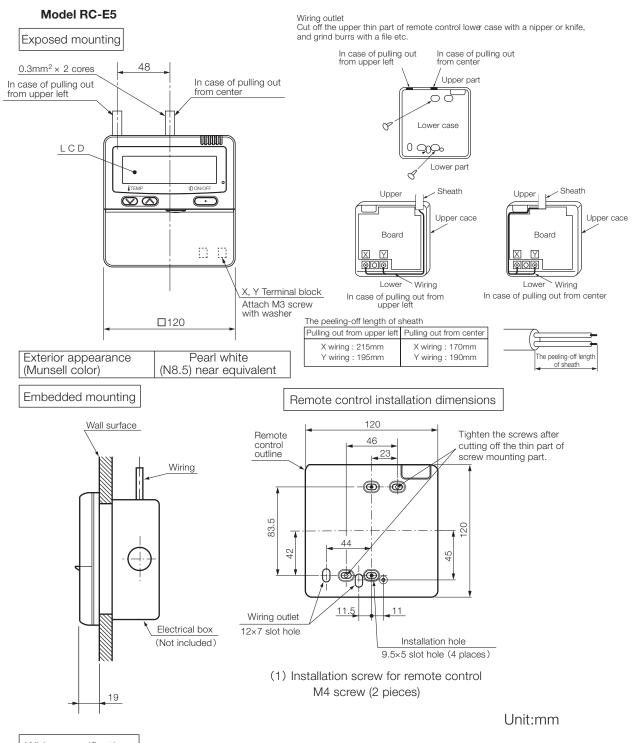

Wiring specifications

(1) If the prolongation is over 100m, change to the size below.

But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.


Length	Wiring thickness
100 to 200m	0.5mm ² × 2 cores
Under 300m	0.75mm ² × 2 cores
Under 400m	1.25mm ² × 2 cores
Under 600m	2.0mm ² × 2 cores

PJZ000Z295

3. ELECTRICAL WIRING

(1) Indoor units


Models SRR50, 60ZS-W

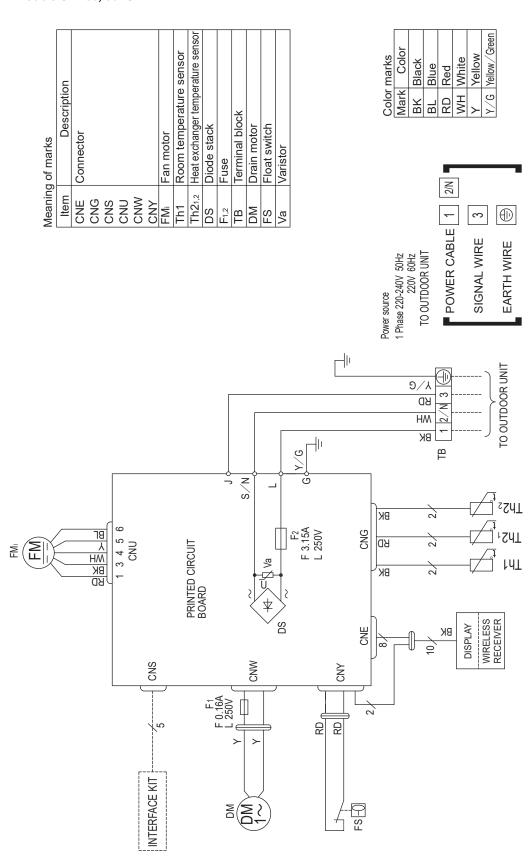

(2) Outdoor units

Power source

Models SRC50ZSX-W3, 60ZSX-W3

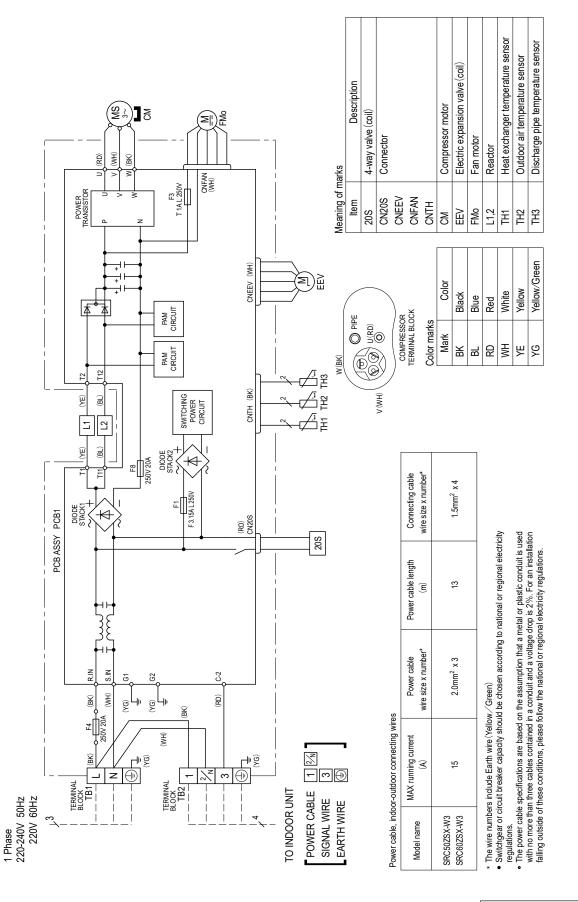

4. NOISE LEVEL

(1) Sound power level

Model SRR50ZS-W


●Non duct

(Indoor unit)

Model	SRR50ZS-W				
Noise	Cooling	59 dB(A)			
level	Heating	61 dB(A)			


Condition	ISO5151 T1/H1
MODE	Rated capacity value (Hi)



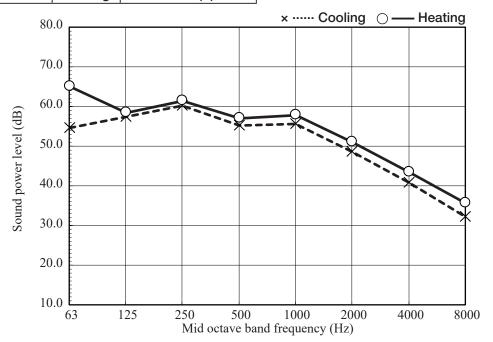

(Outdoor unit)

(Caracor anny						
Model	SRC50ZSX-W3					
Noise	Cooling	63 dB(A)				
level	Heating	62 dB(A)				

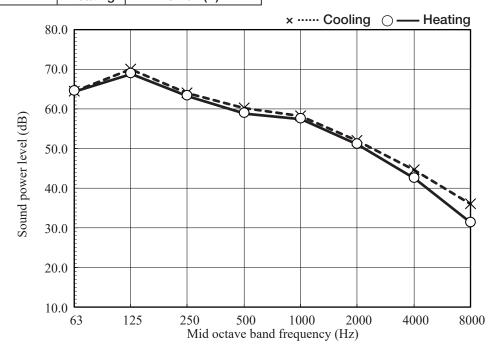


•With duct


(Indoor unit)

,							
Model	SRR50ZS-W						
Noise	Cooling	59 dB(A)					
level	Heating	61 dB(A)					

Condition	ISO5151 T1/H1
MODE	Rated capacity value (Hi)

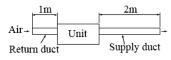

External static pressure: 10Pa

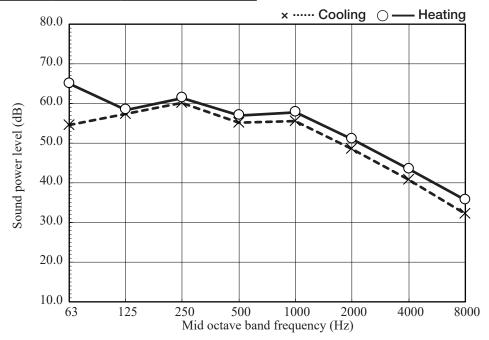


Model SRR60ZS-W


Non duct

(Indoor unit)

Condition	ISO5151 T1/H1	
MODE	Rated capacity value (Hi)	


•		
Model	SRR60ZS-W	
Noise	Cooling	60 dB(A)
level	Heating	63 dB(A)

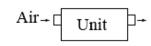

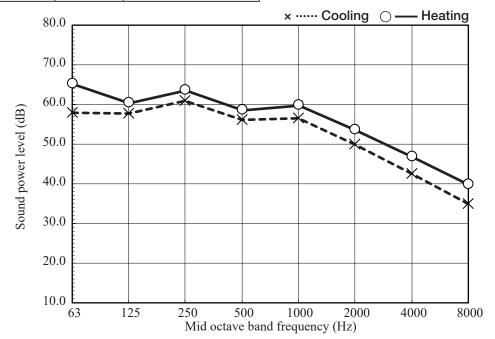

(Outdoor unit)

Model	SRC60ZSX-W3	
Noise	Cooling 65 dB(A)	
level	Heating	65 dB(A)

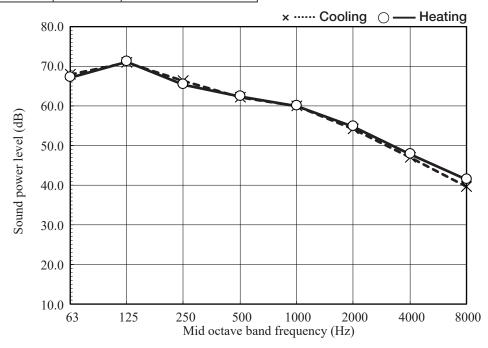


With duct


(Indoor unit)

Model	SRR60ZS-W	
Noise	Cooling	60 dB(A)
level	Heating	63 dB(A)

Condition	ISO5151 T1/H1	
MODE	Rated capacity value (Hi)	

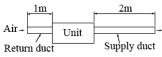

External static pressure : 10Pa

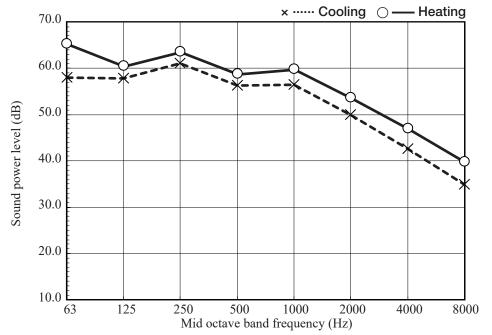

(2) Sound pressure level

(a) Rated capacity value (Hi)

Model SRR50ZS-W


•Sound pressure level ①


(Indoor unit)

Model	SRR50ZS-W	
Noise	Cooling	41 dB(A)
level	Heating	43 dB(A)

Condition	ISO5151 T1/H1
MODE	Hi

Mike position

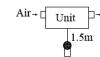


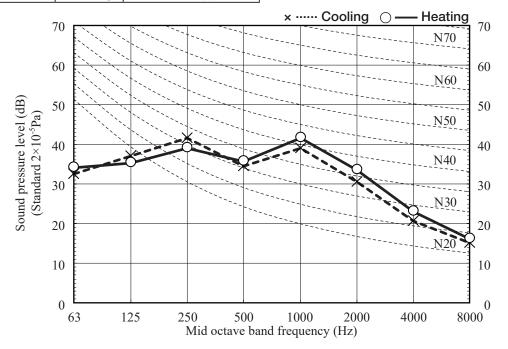


(Outdoor unit)

Model	SRC50ZSX-W3	
Noise	Cooling	51 dB(A)
level	Heating	49 dB(A)

 Mike position: at highest noise level in position as mentioned below
 Distance from front side 1m

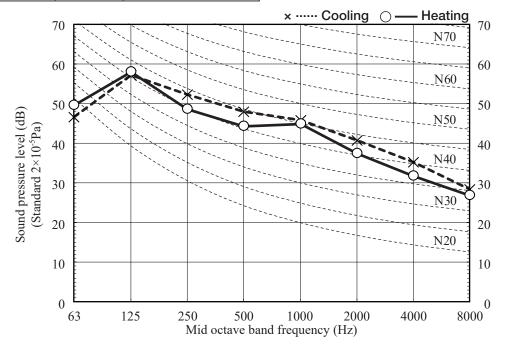

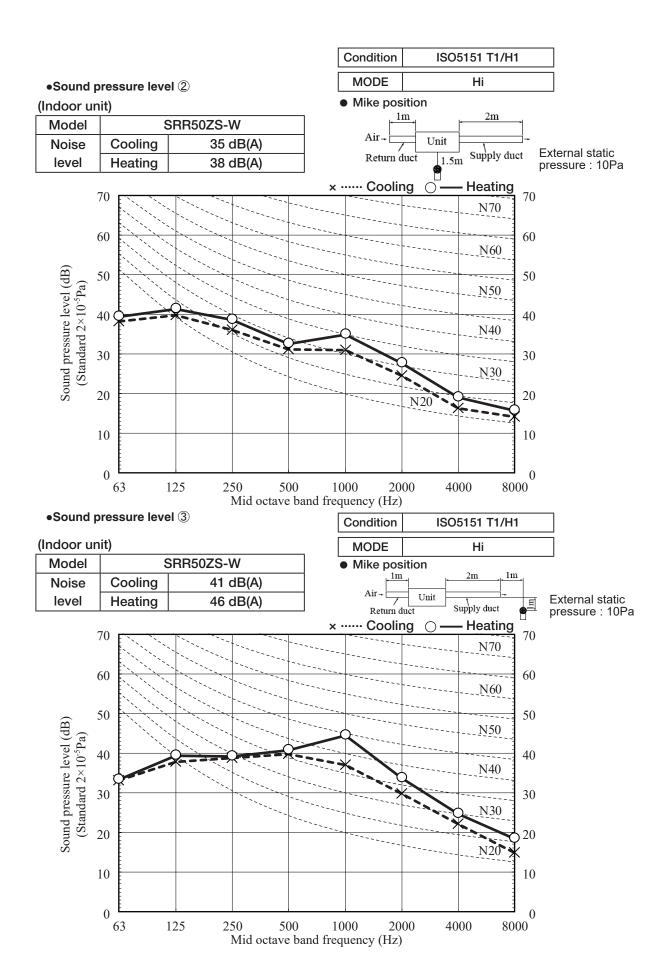

Model SRR60ZS-W


•Sound pressure level ①


(Indoor unit)

Model	SRR60ZS-W	
Noise	Cooling	44 dB(A)
level	Heating	45 dB(A)

Condition	ISO5151 T1/H1
MODE	Hi

Mike position

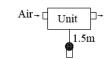


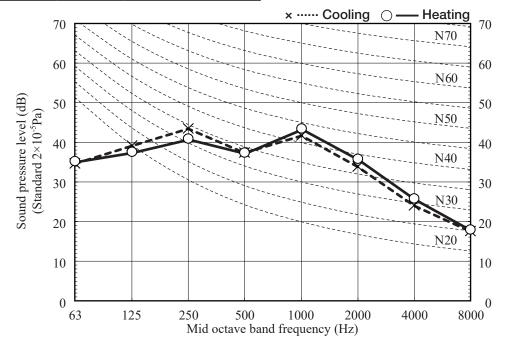


(Outdoor unit)

Model	SRC60ZSX-W3	
Noise	Cooling	52 dB(A)
level	Heating	53 dB(A)

 Mike position: at highest noise level in position as mentioned below
 Distance from front side 1m

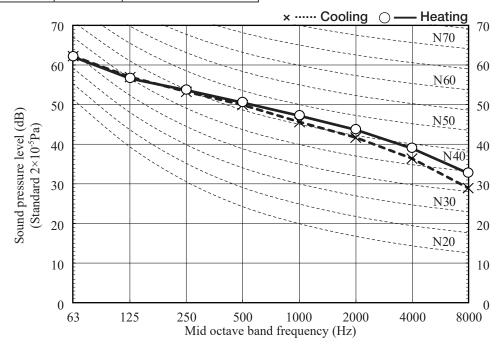

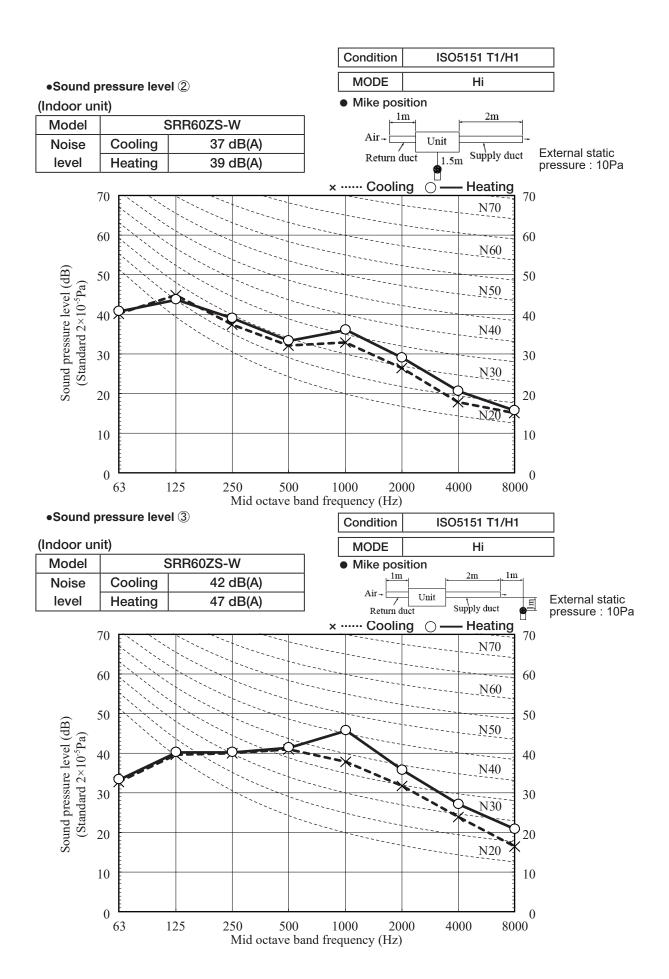


(b) Each fan speed mode Condition ISO5151 T1/H1 Model SRR50ZS-W **MODE** Ме •Sound pressure level ① (Indoor unit) Mike position Model SRR50ZS-W Unit Noise Cooling 37 dB(A) 1.5m 39 dB(A) level Heating x ····· Cooling Heating 70 70 N70 60 60 N60 Sound pressure level (dB) (Standard 2×10-5Pa) 50 50 N50 40 40 30 30 20 20 10 10 0 0 8000 250 500 2000 4000 63 125 1000 Mid octave band frequency (Hz) Condition ISO5151 T1/H1 (Indoor unit) MODE Lo Model SRR50ZS-W Mike position Air → □ Unit Noise Cooling 34 dB(A) 1.5m level Heating 37 dB(A) Heating 70 70 N70 60 60 N60 50 50 Sound pressure level (dB) (Standard 2×10⁻⁵Pa) N50 40 40 N40 30 30 20 20 N20 10 10 0 125 500 1000 2000 8000 63 250 4000


Mid octave band frequency (Hz)

Condition ISO5151 T1/H1 MODE ULo

(Indoor unit)

Model	SRR50ZS-W									
Noise	Cooling	29 dB(A)								
level	Heating	32 dB(A)								

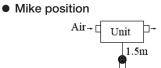

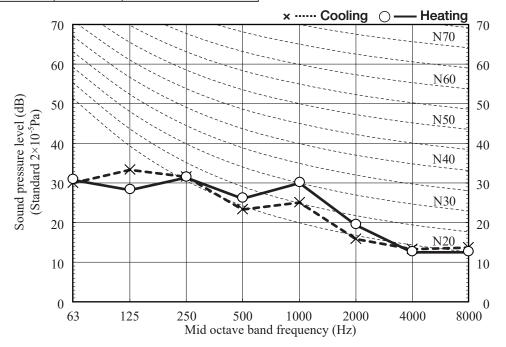



(Outdoor unit)


Model	SRC50ZSX-W3									
Noise	Cooling	42 dB(A)								
level	Heating	43 dB(A)								


Condition	ISO5151 T1/H1
MODE	Silent

 Mike position: at highest noise level in position as mentioned below
 Distance from front side 1m

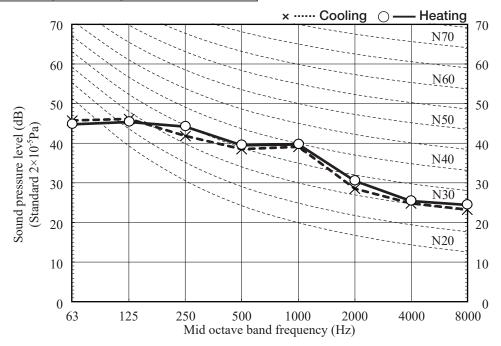

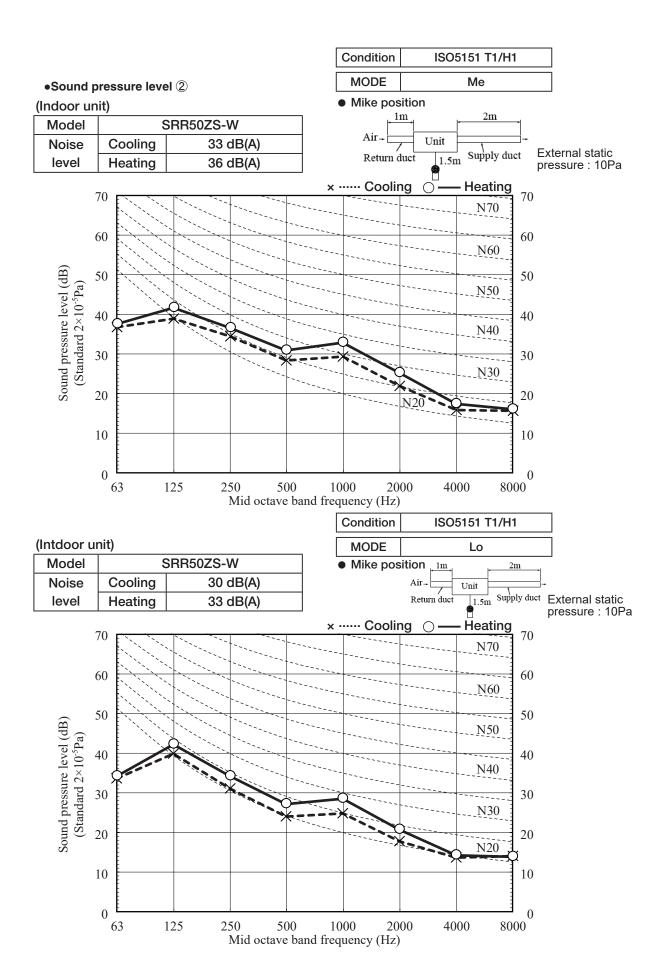

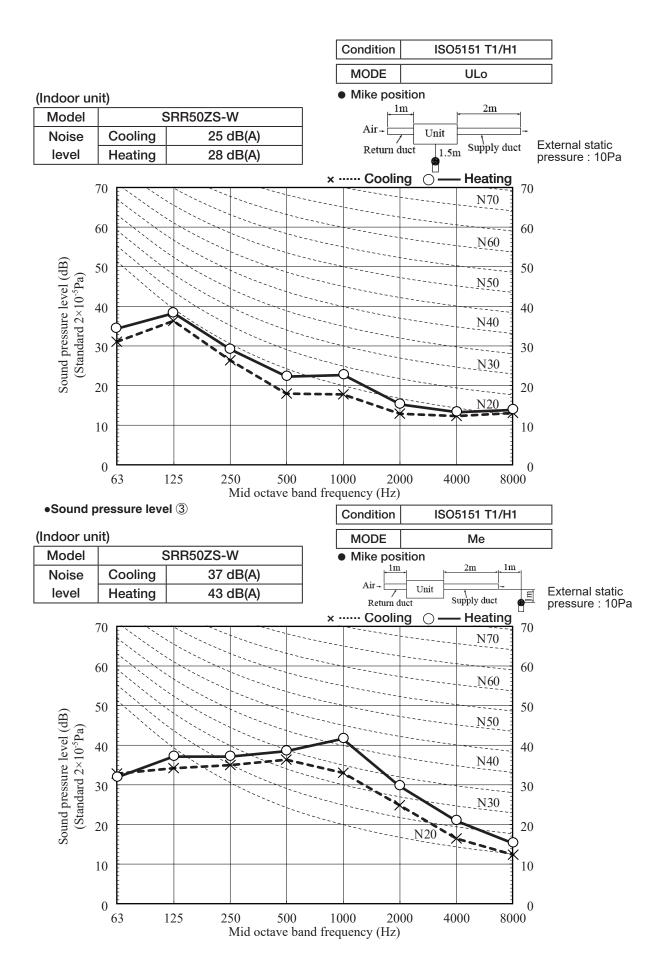

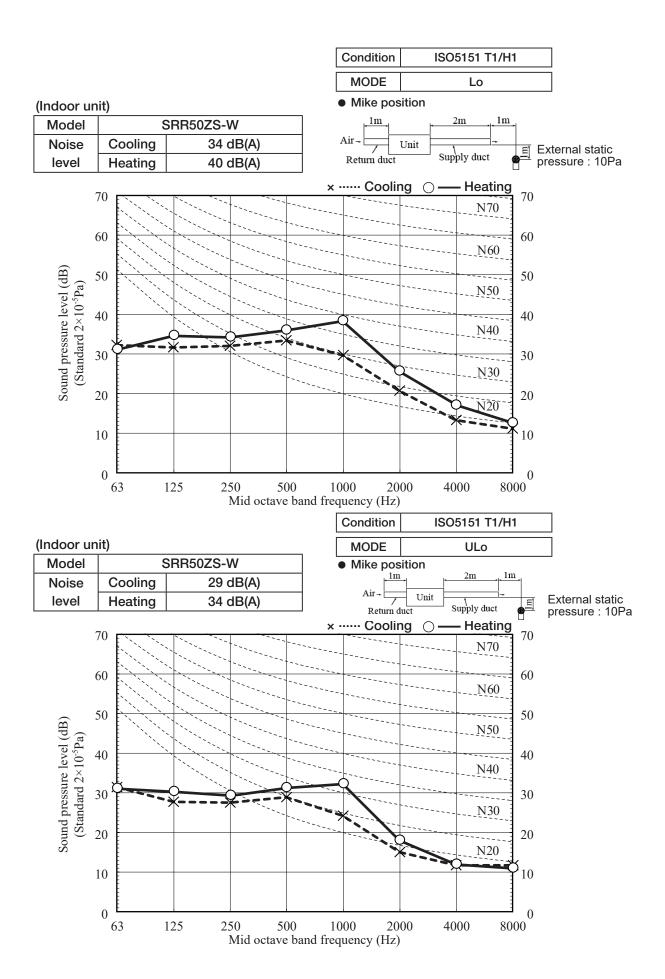



Condition ISO5151 T1/H1 Model SRR60ZS-W MODE Me •Sound pressure level ① (Indoor unit) Mike position Model SRR60ZS-W Air→ Unit Noise Cooling 38 dB(A) 1.5m 41 dB(A) level Heating x ····· Cooling Heating 70 70 N70 60 60 N60 Sound pressure level (dB) (Standard 2×10-5Pa) 50 50 N50 40 40 30 30 N30 20 20 10 10 0 0 8000 250 500 2000 4000 63 125 1000 Mid octave band frequency (Hz) Condition ISO5151 T1/H1 (Indoor unit) MODE Lo Model SRR60ZS-W Air → □ Mike position Unit Noise Cooling 35 dB(A) 1.5m level Heating 38 dB(A) Heating 70 70 N70 60 60 N60 50 50 Sound pressure level (dB) (Standard 2×10⁻⁵Pa) N50 40 40 N40 30 30 20 20 10 10 0 125 500 1000 2000 8000 63 4000 Mid octave band frequency (Hz)

Condition ISO5151 T1/H1 MODE ULo

(Indoor unit)

Model	SRR60ZS-W									
Noise	Cooling	Cooling 30 dB(A)								
level	Heating	33 dB(A)								

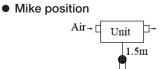

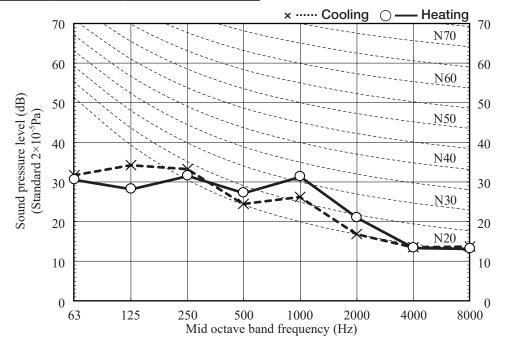



(Outdoor unit)


Model	SRC60ZSX-W3									
Noise	Cooling	42 dB(A)								
level	Heating	43 dB(A)								


Condition	ISO5151 T1/H1
MODE	Silent

 Mike position: at highest noise level in position as mentioned below
 Distance from front side 1m

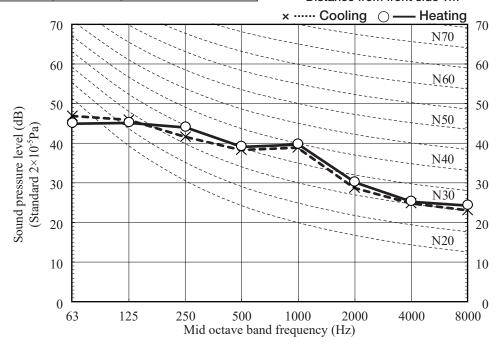

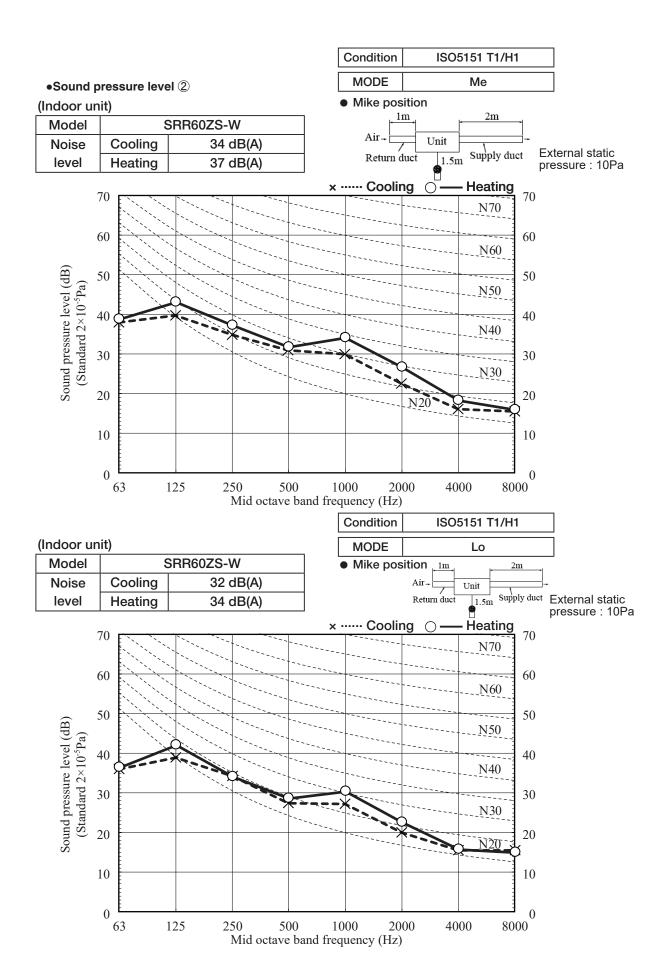

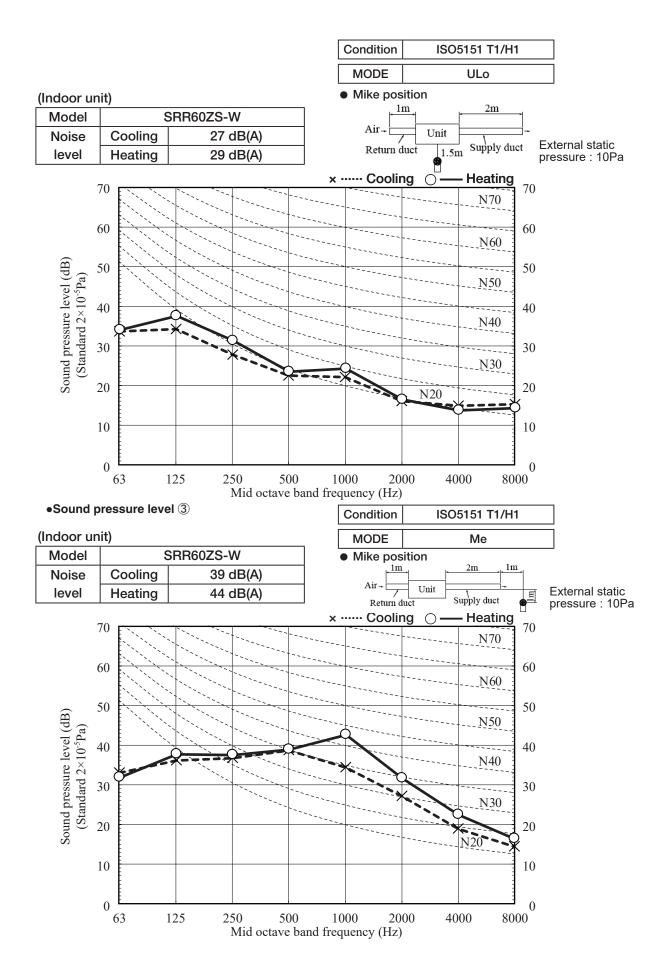

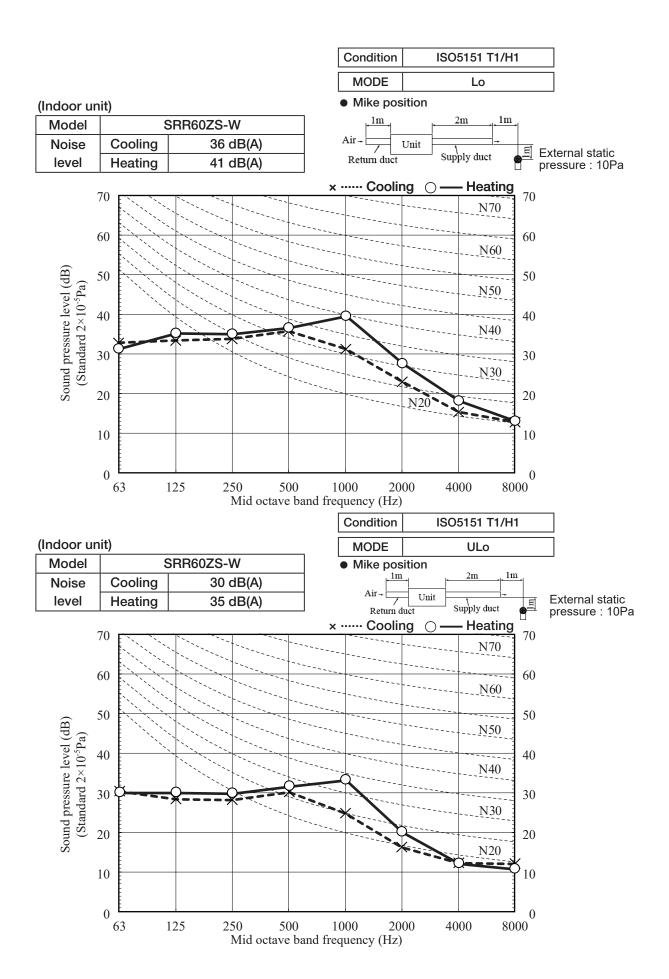

5. CHARACTERISTICS OF FAN

Model SRR50ZS-W

Cooling

(ed) 50

10


Lome Hi

10

50


The state of the s


Air flow (m³/min)

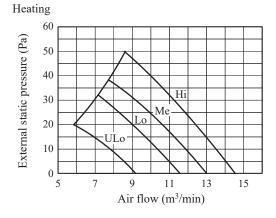

Model SRR60ZS-W


Cooling

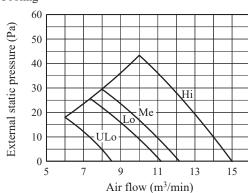

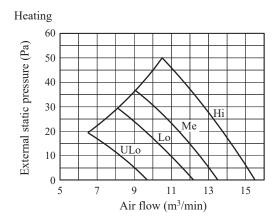

6. PIPNG SYSTEM

Models SRR50ZS-W,60ZS-W

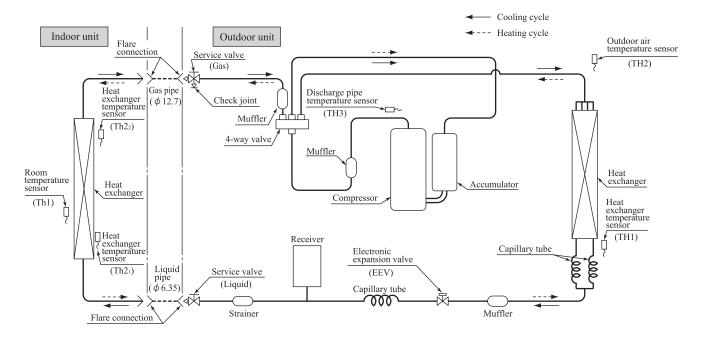

7. RANGE OF USAGE & LIMITATIONS


Model	SRR50ZS-W, 60ZS-W
Indoor return air temperature (Upper, lower limits)	Cooling operation : Approximately 18 to 32°C DB Heating operation : Approximately 10 to 30°C DB (Refer to the selection chart)
Outdoor air temperature (Upper, lower limits)	Cooling operation : Approximately -15 to 46°C DB Heating operation : Approximately -15 to 24°C DB (Refer to the selection chart)
Refrigerant line (one way) length	3-30 m
Vertical height difference between outdoor unit and indoor unit	Max. 20m (Outdoor unit is higher) Max. 20m (Outdoor unit is lower)
Power source voltage	Rating ±10%
Voltage at starting	Min. 85% of rating
Frequency of ON-OFF cycle	Max. 7 times/h (Inching prevention 5-7 minutes)
ON and OFF interval	Min. 3 minutes

Selection chart

Correct the cooling and heating capacity in accordance with the conditions as follows. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown on specification \times Correction factors as follows

(1) Coefficient of cooling and heating capacity in relation to temperatures

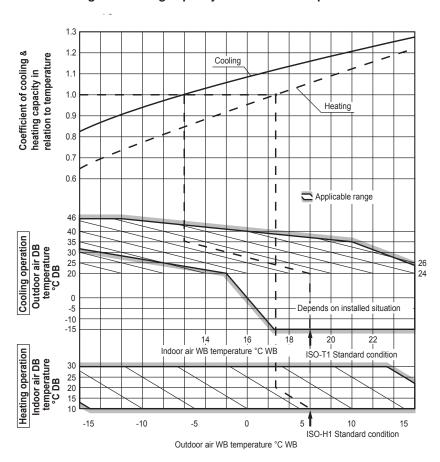

(2) Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way piping length between the indoor and outdoor units.

Piping length [m]	7	10	15	20	25	30
Cooling	1.0	0.99	0.975	0.965	0.95	0.935
Heating	1.0	1.0	1.0	1.0	1.0	1.0


(3) Correction relative to frosting on outdoor heat exchanger during heating

In additions to the foregoing corrections (1), (2) the heating capacity needs to be adjusted also with respect to the frosting on the outdoor heat exchanger.

Air inlet temperature of outdoor unit in °CWB	-15	-10	-9	-7	-5	-3	-1	1	3	5 or more
Adjustment coefficient	0.95	0.95	0.94	0.93	0.91	0.88	0.86	0.87	0.92	1.00

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model SRR50ZS-W with the piping length of 15m, indoor wet-bulb temperature at 19.0° C and outdoor dry-bulb temperature 35° C is

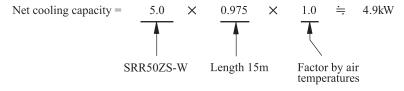

8. CAPACITY TABLES

Model SRR50ZS-W

Cooling mode

	Outdoor						Indo	or air t	empera	ıture					
Air flow	air	21°0	DB	23°C	CDB	26°0	CDB	27°0	DB	28°C	DB	31°0	DB	33°0	CDB
All llow	temperature	14°C	WB	16°C	CWB	18°C	WB	19°C	WB	20°C	WB	22°C	WB	24°C	CWB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	5.63	4.39	5.90	4.31	6.11	4.47	6.22	4.41	6.32	4.35	6.51	4.47	6.69	4.34
	12	5.53	4.34	5.80	4.26	6.03	4.43	6.14	4.38	6.25	4.32	6.44	4.45	6.62	4.32
	14	5.43	4.28	5.70	4.22	5.94	4.39	6.05	4.34	6.16	4.29	6.37	4.42	6.55	4.29
	16	5.32	4.23	5.59	4.17	5.85	4.35	5.96	4.30	6.08	4.25	6.29	4.39	6.48	4.27
	18	5.21	4.17	5.48	4.12	5.75	4.31	5.88	4.27	5.99	4.22	6.21	4.36	6.41	4.25
	20	5.10	4.12	5.37	4.06	5.65	4.27	5.78	4.23	5.90	4.18	6.13	4.34	6.33	4.22
	22	4.98	4.06	5.25	4.01	5.55	4.22	5.69	4.19	5.80	4.14	6.05	4.30	6.25	4.19
	24	4.86	4.00	5.14	3.96	5.45	4.18	5.59	4.15	5.71	4.10	5.96	4.27	6.17	4.17
Hi	26	4.74	3.94	5.01	3.90	5.34	4.13	5.49	4.11	5.61	4.07	5.87	4.24	6.08	4.14
13.5	28	4.61	3.88	4.89	3.84	5.23	4.08	5.39	4.06	5.50	4.02	5.78	4.21	5.99	4.11
(m³/min)	30	4.49	3.82	4.76	3.79	5.11	4.03	5.28	4.02	5.40	3.98	5.68	4.17	5.90	4.08
	32	4.35	3.76	4.63	3.73	5.00	3.99	5.17	3.97	5.29	3.93	5.58	4.14	5.81	4.05
	34	4.22	3.69	4.49	3.67	4.88	3.94	5.06	3.93	5.18	3.89	5.48	4.10	5.71	4.02
	35	4.15	3.66	4.42	3.64	4.82	3.91	5.00	3.90	5.12	3.87	5.43	4.08	5.66	4.00
	36	4.08	3.62	4.35	3.61	4.76	3.88	4.94	3.88	5.06	3.85	5.37	4.06	5.61	3.97
	38	3.94	3.56	4.21	3.54	4.63	3.83	4.82	3.83	4.94	3.80	5.27	4.02	5.50	3.94
	40	3.80	3.49	4.07	3.48	4.50	3.78	4.70	3.79	4.82	3.76	5.16	3.98	5.39	3.91
	43	3.58	3.39	3.84	3.38	4.30	3.70	4.52	3.71	4.63	3.69	4.98	3.92	5.23	3.85
I	46	3.35	3.19	3.61	3.28	4.10	3.62	4.32	3.64	4.44	3.61	4.81	3.86	5.05	3.80

	Heating mode (HC) (kW													
Air flow	Outdoor air temperature		Indoo	or air tempe	rature									
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB								
	-15	3.32	3.25	3.17	3.11	3.04								
	-10	3.76	3.69	3.64	3.55	3.48								
	-5	4.07	4.01	3.93	3.89	3.82								
Hi	0	4.27	4.21	4.13	4.08	4.02								
14.0	5	5.44	5.38	5.35	5.24	5.17								
(m³/min)	6	5.53	5.46	5.40	5.33	5.27								
	10	5.87	5.82	5.78	5.70	5.64								
	15	6.39	6.33	6.29	6.22	6.16								
	20	6.87	6.81	6.78	6.70	6.65								

Model SRR60ZS-W

Cooling mode

(kW)

	Outdoor						Indo	or air t	empera	iture					
Air flow	air	21°C	DB	23°CDB		26°C	DB	27°C	DB	28°C	DB	31°CDB		33°C	DB
Air ilow	temperature	14°C	WB	16°CWB		18°C	18°CWB		19°CWB		WB	22°CWB		24°CWB	
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	6.31	4.86	6.60	4.78	6.85	4.94	6.96	4.87	7.08	4.81	7.29	4.94	7.49	4.78
	12	6.20	4.80	6.49	4.72	6.75	4.90	6.87	4.83	6.99	4.77	7.21	4.91	7.42	4.76
	14	6.08	4.74	6.38	4.67	6.65	4.85	6.78	4.79	6.90	4.73	7.13	4.88	7.34	4.73
	16	5.96	4.68	6.26	4.61	6.55	4.81	6.68	4.75	6.81	4.69	7.05	4.84	7.26	4.70
	18	5.83	4.62	6.14	4.56	6.44	4.76	6.58	4.71	6.71	4.65	6.96	4.81	7.18	4.68
	20	5.71	4.56	6.01	4.50	6.33	4.71	6.48	4.66	6.61	4.61	6.87	4.78	7.09	4.65
	22	5.58	4.49	5.88	4.44	6.22	4.66	6.37	4.62	6.50	4.57	6.77	4.74	7.00	4.62
	24	5.44	4.42	5.75	4.37	6.10	4.61	6.26	4.57	6.39	4.52	6.67	4.71	6.91	4.58
Hi	26	5.31	4.36	5.61	4.31	5.98	4.56	6.15	4.53	6.28	4.48	6.57	4.67	6.81	4.55
14.5	28	5.17	4.29	5.47	4.25	5.86	4.50	6.03	4.48	6.16	4.43	6.47	4.63	6.71	4.52
(m³/min)	30	5.02	4.22	5.33	4.18	5.73	4.45	5.91	4.43	6.04	4.39	6.36	4.59	6.61	4.48
	32	4.88	4.15	5.18	4.11	5.60	4.40	5.79	4.38	5.92	4.34	6.25	4.55	6.50	4.45
	34	4.73	4.07	5.03	4.05	5.46	4.34	5.66	4.33	5.80	4.29	6.14	4.51	6.39	4.41
	35	4.65	4.03	4.95	4.01	5.40	4.31	5.60	4.30	5.73	4.27	6.08	4.49	6.34	4.39
	36	4.57	4.00	4.88	3.98	5.33	4.28	5.54	4.28	5.67	4.24	6.02	4.47	6.28	4.38
	38	4.42	3.92	4.72	3.91	5.19	4.22	5.40	4.22	5.53	4.19	5.90	4.42	6.16	4.34
	40	4.26	3.85	4.55	3.83	5.04	4.16	5.27	4.17	5.40	4.14	5.77	4.38	6.04	4.30
	43	4.01	3.73	4.30	3.72	4.82	4.07	5.06	4.09	5.19	4.06	5.58	4.31	5.85	4.24
	46	3.76	3.57	4.04	3.61	4.59	3.98	4.84	4.00	4.97	3.98	5.38	4.24	5.66	4.18

	Heating mode (HC)										
Air flow	Outdoor air temperature	Indoor air temperature									
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB					
	-15	4.12	4.03	3.94	3.86	3.77					
	-10	4.67	4.58	4.52	4.41	4.31					
	-5	5.05	4.98	4.88	4.83	4.74					
Hi	0	5.30	5.22	5.13	5.07	4.99					
15.0	5	6.75	6.67	6.63	6.50	6.41					
(m³/min)	6	6.86	6.78	6.70	6.61	6.53					
	10	7.29	7.22	7.17	7.07	7.00					
	15	7.93	7.86	7.80	7.72	7.65					
	20	8.52	8.45	8.41	8.32	8.25					

s(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously. These data show the case where the operation frequency of a compressor is fixed.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :5m

Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)

SHC: Sensible heat capacity (kW)

HC: Heating capacity (kW)

ISC19188 🛦

9. APPLICATION DATA

Installation of indoor unit Models SRR50ZS-W, 60ZS-W

RJJ012A003F △

FOR MODEL SRR SERIES R32/R410A REFRIGERANT USED

Awired remote control unit is supplied separately as an optional part. While installing the unit, be sure to check the selection of installation place, power source specifications, usage inflation (piping length, heigh differences between indoor and outdoor units, power source voltage etc.)

s installation manual illustrates the method of installing an indoor unit. electrical wiring work, see instructions set out on the backside. outdoor unit installation and refrigerant piping, refer to Page 38.

SAFETY PRECAUTIONS

reep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user. Before installation, read the "SAETY PRECAUTIONS" carefully and strictly • Keep the installation follow it during the installation work in order to protect yourself. The precautionary llams mentioned below are distinguished into two levels, new user. • Before starting the installation would cause serious consequences such protective clothing, grr.

Before starting the installation work, proper precautions (using suitable protective cothing, groves etc.) should be taken by qualified installer. Pay attention not to fall down the tools, etc. when installing the unit at the high position.

Never do it under any circumstances.

follow them by any means. Be such commissioning after completed Be such conform no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.

depending on droumstances.

• If unusual noise can be heard during operation, consult the dealer.

• Off unusual noise can be heard during operation, consult the dealer.

• Off unusual noise can be here are shown as follows:

as injuries or death.
ACAUTION: Wrong installation might cause serious consequences















☆ WARNING

Installation must be carried out by the qualified installer.

Tighten the first must be carried out by the qualified installer.

Tighten the first must were lightened with excess bringer may observe it in may cause such a warder leaks, electric shocks. The and personal high, sa result of a mort entigenant leakage after a long period, to make the carried out by the qualified system must here arried out by the qualified of the shall also make the size of the system in the system in this accordance with the installation manual. The installation may class bursts, personal high, where leaks.

Incorrect integration may classe outsis, personal muy water reans, recommendation in many classe outsis, personal may water reans, prover source with insufficient capacity and incorrect function done by Be sure to sure outs of the for bluck and the prover before starting electric and an area electric shocks and fail the appliance is installed in inferior environment such as machine shop. Be sure to shur of the power before starting electric alwork. Failure to shur of the power before starting electric shocks, unit failure or

incorrect function of equipment.

Be sure to use the cables conformed to safety standard and cable angacity for power lastifutution work.

Unconformable cables can cause alertin leave an analysis.

production or fire.

- This appliance must be connected to main power source by means
of a circuit breaker or switch (fuse:16A) with a contact separation of
at least 3mm. refrigerant comes into contact with naked flames, poisonous gas is Institution.

If parts other than those prescribed by us are used, it may cause water reacts other than those prescribed by us are used, it may cause water reacts electric shocks, in and presonal injury or.

Install the until in a location with good support.

Unsulable installation locations can cause the unit to fall resulting in

material damage and personal injury.

Ventilate the working area well in the event of refrigerant leakage

• When plugging this appliance, a plug conforming to the norm increased of many and a plugging the second of the conformation of the prescribed cables for electrical connection, tighten the cables secretly the cables secretly to prevent overloading the terminal blocks.

Lose connections or cable mountings can cause anomalous heat production or fine.

Arrange the wirting in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.

Incorrect installation may result in overheating and fire.

— Be sure to switch off the power source in the event of installation, inspection or servicing.

If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start for fam.

— Be sure to ware protective goggles and gloves while at work.

— Earth leakage breaker must be installed. It can cause electric shocks. When installing in small rooms, take prevention measures not to acceed the density limit of refigearum in the event of leakego, cereed the density limit of refigearum in the event of leakego, preferred by the formula (accordance with 1906 149). It is the event of the expension of the limit, consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which A can cause serious accordance, oxygen can occur, which A can cause serious accordance, oxygen can occur, which A can cause serious accordance, oxygen can occur, which A can cause serious accordance, oxygen can occur, which A can cause as serious accordance, and the system in the refigerant leafs in the form in the first oxygen can occur and comes into contact with an overor in other first authrace, placed pipes, flare intuits and tools for R32 or R410A. It is

registerate lass in the from and comes into contact with an oven or other that surface, poisonous gas is produced. Use the prescribed pipes, fare notes and took for R32 or P410.A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to busing susting parts (for R22 or R407C) can cause the unit failure and serious accidents due to busing of the effigerant choid.

• Do not put the drainage pipe directly into drainage channels where he poisonus gases such as sublinking as a con occur.

• Poisonus gases such as sublinking as a con occur.

• Poisonus gases such as sublinking as a con occur.

• The may cause from he freeding the may cause from he may cause from he may cause from the may cause from he may cause from the may cause from any change of procedive device feet for many cause from the may cause from th

0

The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.

Use the circuit breaker of correct capacity. Circuit breaker should be able to disconnect all poles under over current.
 Using the incorrect one could cause the system failure and fire.
 Install solator or disconnect switch on the power source wiring in Install solator or disconnect switch on the power source wiring in

Carry out the electrical work for ground lead with care.
Do nd connect the good dead to the sine, water line, lighthing conductor or telephone line's ground lead. Incorrect grounding can cause unit after that is such as electric shocks due to short-circuit.

CAUTION

d when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.

Dispose of any packing materials correctly.

Any remaining packing materials can cause presonel injury as it contains mails and wood. And to wool damper of sufficiently, besure to keep the plastic wrapper may from children and to dispose after treat it up.

For installation work, be careful not to get injured with the heat exchanger, plaining fare portion or scraws a fut.

Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.

Insulficient insulation can cause condensation, which can lead to mostate confirm and and and an analysis of the state of resears owith the local codes and regulations.

It is so allocation with the color codes and regulations.

It is so allocated the local codes and regulations with the solator should be located to code and regulations.

It is so allocated the local codes and regulations with the local codes and regulations with the local codes and regulations with the local property according to instruction of the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes and the local codes are allocated to the local codes

Do not install the unit in the locations listed below.
 Locations where carbon fiber, metal powder or any powder is floating.
 Locations where any substances that can affect the unit such as sulphide

 Do not install the unit where corrosive gas (such as sulfurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where voiatile combustible substances are handler.

Corrosive gas can cause corrosin or hear exchanger, breakage of plastic parts and etc. And combustible gas can cause fire there was resplashes may occur such as in laundries.

To not use the indoor unit at the place where waster splashes may occur such as in laundries.

Some the modor unit at the place where waster splashes and fre.

Do not install not use the system close to the equipment that generates electromagnetic field for high frequency amonics.

On ond install not use the system closes to the equipment that generates electromagnetic field for high frequency adoptinent sand lescommunication equipments can affect the system, and equipments and lescommunication equipment can also affect medical equipment and telecommunication equipment, and obstruct is function or equipment and telecommunication equipment, and obstruct is function or gas, chloride gas, add and alkaline can occur.

• Vehlides and ships.

• Localdors with direct expensive of oil mist and steam such as kitchen and machine plant.

• Localdors with direct exposure of oil mist and steam such as kitchen and machine plant. are used.

• Locations with salty atmospheres such as coastlines.
• Locations with heavy snow (If installed, be sure to provide base flame and

cates jamming to broth be any variables which will be damaged by getting wet under the indoor unit.

When the relative humidity is higher than 80% or drainage pipe is clogged, concloses alone or drainage water can drop and it can cause the damage of valuables. snow frood mentioned in the meanual.

Locations where the unit is exposed to chimnely strake.

Locations where the unit is exposed to chimnely strake.

Locations with ammonion atmosphered by a organic fertition.

Locations with mannonion atmosphered by a graphic fertition.

Locations with an admost individe (e.g. snown melting agent).

Locations where the admonion from their hast source can affect the unit.

Locations with any observes with on problems with on their hast source can affect the unit.

Locations with any observes with on any observed their and outlet air of the unit.

 Do not install the remote control at the direct sunlight.
It can cause mailtruction or eformation of the remote control.
 Do not use the unit for special purposes such as storting foods, cooling precision instruments and preservation of animals, plants or installation).

Locations where strong air blows against the air outer of outdoor unit.

Locations where something located above the unit could fall.

It can cause remarkable decrease in performance, corroson and damage of

Connecting the circuit with copper wire or other metal thread can cause unit failure and fire. It can cause the damage of the items.

• Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. conconents mallication and first to be controlled and to controlled and the foreign to the controlled and the foreign the fore unit.
• Locations where vibration can be amplified due to insufficient strength of · Locations with any obstacles which can prevent inlet and outlet air of the

During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost It can cause electric shocks.

• Do not touch any refrigerant pipes with your hands when the system · Do not touch any buttons with wet hands. structure.

• Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam (in case of the infrared specification unit). Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 1m).

Do not wash the inside of the air-conditioner. Water leakage and permanent damage may result Electrical hazard exists.

It can affect performance or function and etc.

Do not install the unit near the location where leakage of combustible gases can occur. If leaked gases accumulate around the unit, it can cause fire.

-34 -

If this appliance is installed in inferior environment such as machine s and etc., it can cause maifunction.

Use the original accessories and the specified components for

Check before installation work

- Model name and power source
 Refrigerant piping length
 Piping, wiring and miscellaneous small parts

,	Standard accessories (installation kit) Accessories for indoor unit	Q'ty
Θ	Wireless remote control	1
0	Remote control holder	-
0	Remote control signal receiver	-
⊕	Installation frame (for remote control signal receiver)	-
9	Wood screws (for remote control holder ø3.5 X 16mm)	2
9	Battery [R03 (AAA, Micro) 1.5V]	2
0	Joint (for drain hose)	1
0	Clamp (for drain hose) (big:1, small:1)	2
6	Washer (for suspension bolt M10)	8
9	Flat head machine screw (for remote control signal receiver M3.5x10)	2
(2)	Plate (display)	1
(13)	Pipe cover (big:1, small:1)	2
(3)	Band	4


9	(in the parties of th	
9	Wood screws (for remote control holder ø3.5 X 16mm)	2
9	Battery [R03 (AAA, Micro) 1.5V]	2
0	Joint (for drain hose)	1
0	Clamp (for drain hose) (big:1, small:1)	2
6	Washer (for suspension bolt M10)	8
9	Flat head machine screw (for remote control signal receiver M3.5x10)	2
(2)	Plate (display)	1
1	Pipe cover (big:1, small:1)	2
9	Band	4


	Locally procured parts	Ø't⁄
€	Sealing plate	-
@	Sleeve	-
0	Inclination plate	-
0	Putty	-
(iii	Drain hose (VP25)	1
(E)	Suspension bolts (M10)	4
0	Nuts (M10)	8
⊞	Spring lock washers (M10)	4

Option parts (Separately sold parts)	Á1,Ό
Bottom air inlet kit 25, 35 models : UT-BAT1EF 50, 60 models : UT-BAT2EF	-

	Necessary tools for the installation work
-	Plus headed driver
2	Knife
6	Saw
4	Tape measure
2	Hammer
9	Spanner wrench
7	Torque wrench [14.0~62.0N·m (1.4~6.2kgf·m)]
œ	Hole core drill (65mm in diameter)
6	Wrench key (Hexagon) [4mm]
10	Flaring tool set (Designed specifically for R32 or R410A)
=	Gas leak detector (Designed specifically for R32 or R410A)
12	Gauge for projection adjustment (Used when flare is made by using conventional flare tool)
13	Pipe bender

Seeve (Locally procured	©putly © Duttoor side			Inspection opening (2)	Use	Use	Not Use		Use	Use	Use	Use	Not Use
S Remake control signal receiver	▲ CAUTION Completely seal the hole in the wall with pully, if not sealed property, turniture and other fixtures may be demaged by water leakage or condensation.	(sg	3	Inspection opening (1)	Not Use	Not Use	Use		Not Use	Not Use	Not Use	Not Use	Use
Wireless remote control includer Wood screws	A.C Comy with turnin furnin dama dama	Instruction opening for services	Distriction of Simple Indispose	Service	Clamping of the flare of required and gas refrigerant pipe	Drain pipe connection	Installation and removal of blower	Control box	Connecting wire (between indoor and outdoor)	Unit display section (Remote control signal receiver)	Replace drain pump	Replace heat exch sensor	Replace air filter
© Remote c	t ntake		ш	150(0) or more	The minimum dimensions when used Bottom	shown in			<u></u>	\$100.0	n 10 00	01	Obstacle unit : mm
itting. counds.) s as an	tire of insufficien to either air i anual.)	rol.	ш	270 or more	imensions wh	ion parts) are				Jejou	n site)		
er) distributed, wherele, secured) he street light mages and store fright act of ceiling act ordition and dioner is open	thick for en te the trouble ct connected Technical m	remote con	۵	150(50) or more	he minimum c	air inlet kit (Option parts) are shown in parentheses.		1000 or more	₩ _		Grill (Prepare on site)		
the custom the custom solve celling to slow can be slow can be slow can be slow can be upment. upment. upment. notire inside of 1.80%.	10 to 20mm sure can caus rs straight du e confirm the	the wireless	O	100(80) or more				. 6	Obstaclo	ζ.			E
PN LC proval from the unit or the stri the unit or the stri the unit or the stri the unit or the stri prevent inter prevent inte	insulation of e static press th a few mete essure, pleas	ng operating h as a stove.	В	077	26	Inspection opening (1)		Inspection opening (2)	Indoor Unit	4	<u>,,,,,,</u>	<u></u>	unit: mm ning (1)
ATIC Frighting at gretting at green green or consect and on crouse from trays of the space. The radio (TC equipment 1 st. friet on the principle of the radio (TC equipment 1 st. friet on the principle of the radio (TC equipment 1 st. friet on the principle of the radio (TC equipment 1 st. friet on the principle of the radio (TC equipment 1 st. friet on the principle of the radio (TC equipment 1 st. friet on the principle of the radio (TC equipment 1 st. friet on the principle of the radio (TC equipment 1 st. friet on the principle of the radio (TC equipment 2 st. friet of the radio (TC equipment	ch additional ure. Excessiv e products wi ernal static pr	al surely duri devices suc	۷	750	000								spection ope
TALLI dilitions, after the mind where the not worker, or conduct, to conduct, to conduct, to the direction or 1 ph frequency ph frequency ph frequency after the start in the air at the start in Start is some risk some or and relating the start to start in start in the start is start in the start in start i	bove. Indition, atta ain pipe. Il static press sed to use the	ved the sign nd radio etc. or near heat	Model	25, 35			09	b •			<i>y</i>	[∥] ✓	Ceiling plate removing in
SELECTION OF INSTALLATION LOCATION (Installat cotation that meets the following conditions, after getting approval from the customer) (Installat cotation that meets the following conditions, after getting approval from the customer) (Indoor unit) (Indoor un	under the severer condition than mentioned above. If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire such expensibility to use it under such a condition, attach additional additional and the conditional additional ad	Varieties or entrace control A place where the air-conditioned can be received the signal surely during operating the wireless remote control Races where there is no affected by the TV and radio etc. Do not place where exposed to direct sunlight or near heat devices such as a store.	Space for installation and service	Dedicated Ar Intake direction inspection copering	must be provided. Unan pipe, refriperant gas pipe and refrigerant loud pipe		_	90	Arr blowout direction	460 460 460 A	T S S S S S S S S S S S S S S S S S S S	88%	** Dimensions of the opening on the ceiling after removing inspection opening (1)

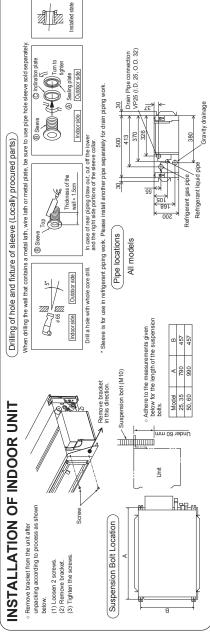

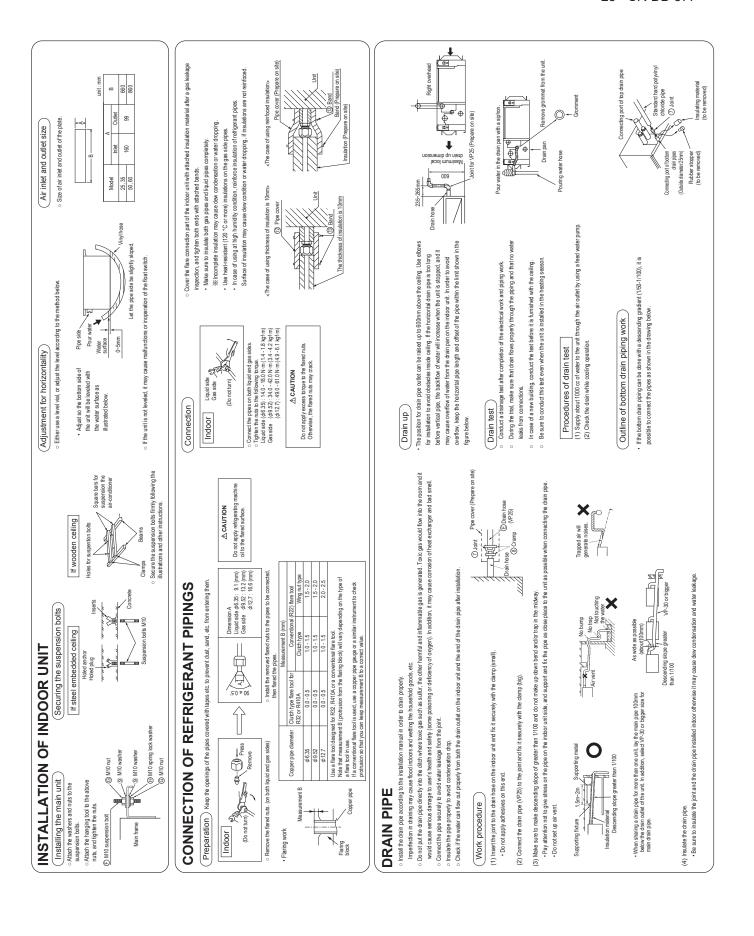



INSTALLING TWO AIR-CONDITIONERS IN THE SAME ROOM When two air-conditioners are installed in the same room, use this setting when the two air-conditioners are not operated with one remote control. Set the remote control and indoor unit.

Setting an indoor unit

 Pull out the cover and take out batteries.
 Disconnect the switching line next to the battery with wire cutters. Setting the remote control

Preparation of indoor unit) o In case of faulty wing connection, indoor unit does not operate. Then, run lamp turns on and timer lamp blinks.

Mounting of connecting wires

- (2) Remove the control ids.

 (3) Commet the swing damp.

 (3) Commet the connecting wire to the terminal block.

 (3) Commet the connecting wire to the terminal block.

 (3) Commet the connection wire sometime that on the terminal block may heat up or next will be port, and it is diagnose as the terminal block may heat up.
- connections.

 (4) Fix the comment by wiring clamp.

 (5) Canned, the comment of the remote control singnal receiver to the relay wiring.

 (6) Attach the control lid.





(1) Open a through-hole on the wall to install the reception face for the

remote control signal receiver (3).

and fix the calking section.

(3) Fix the installation frame 4 on the wall using the flat head machine screws (II).

nachine screws packed together with the plate (display) (II).

TERMINAL CONNECTION FOR AN INTERFACE

(1) Remove the control (I (Remove the screw)
(2) There is a termind (respectively market with CNS) for the indoor control board
(2) There is a termind (respectively market of with CNS) for the indoor control board
(3) There is a termind (respectively market with CNS) for the indoor control board
(4) There is a termind (respectively market by the indoor control board in the indoor control board with the kill.
(5) CNACAE and Issued the connection the protor control board with the kill.
(6) The indoor connection in the indoor control board in the indoor connection in the kill.
(7) The indoor control is a series of the indoor connection in the indoor control in the kill.
(8) The indoor connection is a series of the indoor connection in the

Check the following points again after completion of the installation, and before tuning on the power. Conducta test run again and ensure that the unit operates properly. Explain to the customen how to use the unit and how to take care of the unit following the installation manual. INSTALLATION TEST CHECK POINTS

Power cables and connecting wires are securely fixed to the terminal block. (Both indoor and outdoor) The power source voltage is correct as the rating. The drain hose is fixed securely.

After installation

The pipe joints for indoor and outdoor pipes have been insulated

No gas leaks from the joints of the service valve.

Test run

Service valve is fully open

Protective functions are not working Water drains smoothly.

Operation of the unit has been explained to the customer. (Three-minutes restart preventive timer.) When the air-conditioner is restarted or when changing the operation, the unit will not start operating for approximately 3 minutes. This is to protect the unit and it is not a mafunction. No abnormal noise.

Use cables for interconnection wiring to avoid loose CENELEC code for cables Required field cables.

H05RNR4G1.5 (example) or 245IEC57

- and catch fire.

 2) Take care not to confuse the terminal numbers for indoor and outdoor

Earth wire shall be Yellow/Green (Y/G) in color and longer than other AC wires for safety reason.

Be sure to connect



o In order to protect the environment, to sure b pump clown (recovery of refigerant). Forced cooling operation

- Pump down is the method of recovering defigerant from the indoor unit it bits

- Turn of power source. Turn on power source again after a while. Then, press the

- OWOFF button continuously for at less \$5 seconds. (The operation will start).

OWOFF button continuously for at less \$5 seconds. (The operation will start).

O TIMER OHPONER

Unit ON/OFF button

forced cooling operation.)

(3) After low pressure gauge become 0.01MPa, stop cooling operation and close the gas valve.

(1) Connect charge hase to check joint of outdoor unit.
CL Lajud side: Close the liquid valve with heagon wench key.
Gas side: Fully operation in tigas valve.
Gars valu coding operation. (If indoor temperature is low, operate

<How to pump down>

HOW TO RELOCATE OR DISPOSE OF THE UNIT

At completion of the setting, the indoor unit emits a buzzer sound "Peep", (if no reception tone is emitted, start the setting from the beginning again.) some time. (3) Check that the reception buzzer sound "Peep" is emitted from the

Insert batteries. Close the cover

(((((**(()**

(1) Tunn of the power source and tun it on after 1 minute.
(2) Pour the remote control fast uses set according to the promodure described on the fift she at the unit taggety section man sextual as grained by pressing the ACL switch on the remote control. The sextual resolution are signal as sext in about its seconds after the ACL switch of Shore the signal is sext in about its seconds after the ACL switch or pressed, pointfulle entrole control at the unit display action for

section if it interferes with the wall.

Securing the remote control signal receiver

Wiring Clamp Connecting wire

Terminal block

O 0

Insert the remote control signal receiver (3) in the installation frame (4).

3 Remote control signal receiver

Out off this section if it interferes with the wall.

(4) Fix the plate (display) \oplus on the installation frame \oplus using the flat head

INSTALLATION OF WIRELESS REMOTE CONTROL Fixing to pillar or wall Mounting method of battery

oConventionally, operate the wireless remote control by holding in your hand. Avoid installing it on a clay wall etc. Wireless remote control ⑥ Battery

Pull out the cover and mount the batteries [R03 (AAA, Micro), X 2 pieces] in the body (Fit the poles with the indication marks, ⊕ & ⊝ without fail)
Do not use new and old batteries together

(2) Installation of outdoor unit

RWC012A063D /A

Model SRC20,25,35,40,50,60ZSX-W SRC20,25,35ZSX-WA R32 REFRIGERANT USED

• This installation manual deals with an outdoor unit installation only. For an indoor unit installation, refer to page 34

SAFETY PRECAUTIONS

tion work in order to protect yourself.

The precautionary items mentioned below are distinguished into two levels, AWARNING and AWARNI

jury or property damage

Both mention the important items to protect your health and safety. Therefore, strictly follow them by any means

- Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly follow it during the installa- Be sure to confirm no operation problem on the equipment after completing the installation. If unusual noise can be heard during the test run, consult the dealer

⚠ WARNING

- Be sure to use only for residential purpose.
 If this unit is installed in inferior environment such as machine shop, vehicle (like ship), warehouse, etc., it can malfunction.
- led, it can ination.

 Installation must be carried out by the qualified installer completely in accordance with the installation manual.
- Installation by an unqualified person or incorrect installation can cause serious troubles such as water leak, electric shock, fire and personal injury.

 Be sure to wear protective goggles and gloves while performing installation work. Improper safety measures can result in personal injury.
- Use the original accessories and the specified components for the installation.
 Using parts other than those prescribed may cause water leak, electric shock, fire and personal injury.
 Do not install the unit near the location where leakage of flammable gases can occur.
- If leaked gases accumulate around the unit, it can cause fire resulting in property damage and per-
- When installing the unit in small rooms, make sure that refrigerant density does not exceed the limit (Reference: ISO5149) in the event of leakage.

 If refrigerant density exceeds the limit, consult the dealer and install the ventilation system.
- Otherwise lack of oxygen can occur resulting in serious accident.

 Install the unit in a location where unit will remain stable, horizontal and free of any vibration transmission.

 Unsuitable installation location can cause the unit to fall resulting in material damage and personal injury.
- Unsuitable installation location can cause the unit to fall resulting in material damage and personal injury.

 Do not run the unit with removed panels or protections.

 Touching rotating equipment, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shock.

 This unit is designed specifically for R32.

 Using any other refrigerant can cause unit failure and personal injury.

 Do not vent R32 into atmosphere.

 R32 is a fluorinated greenhouse gas with a Global Warming Potential (GWP) = 675.

 Make sure that no air enters the refrigerant circuit when the unit is installed and removed.

- and removed.
- and removed.

 If air enters the refrigerant circuit, the pressure in the refrigerant circuit will become too high, which can cause burst and personal injury.

 Be sure to use the prescribed pipes, flare nuts and tools for R32 or R410A.

 Using existing parts (for R22 or R407C) can cause refrigerant circuit burst resulting in unit failure and personal injury.

 Be sure to connect both liquid and gas connecting pipes properly before operating the connecses.
- erating the compressor
- Do not open the liquid and gas service valves before completing piping work, and evacuation.

 If the compressor is operated when connecting pipes are not connected and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure resulting in
- Be sure to tighten the flare nuts to specified torque using the torque wrench.

 Tightening flare nuts with excess torque can cause burst and refrigerant leakage after a long period.

- During pump down work, be sure to stop the compressor before closing service valves and removing connecting pipes. If the connecting pipes are removed when the compressor is in operation and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure result-
- ing in burst or personal injury.
- Ing in burst or personal injury.

 In the event of refrigerant leakage during installation, be sure to ventilate the working area properly.

 If the refrigerant comes into contact with naked flames, poisonous gases will be produced.

 Electrical work must be carried out by the qualified electrician, strictly in accordance with national or regional electricity regulations.

 Incorrect installation can cause electric shock, fire or personal injury.

 Make sure that earth leakage breaker and circuit breaker of appropriate caracities are installed.
- pacities are installed.

 Circuit breaker should be able to disconnect all poles under over current. Absence of appropriate breakers can cause electric shock, personal injury or property damage.

 Be sure to switch off the power source in the event of installation, mainte-
- nance or service.
- nance or service.
 If the power source is not switched off, there is a risk of electric shock, unit failure or personal injury.
 Be sure to tighten the cables securely in terminal block and relieve the cables properly to prevent overloading the terminal blocks.
 Loose connections or cable mountings can cause anomalous heat production or fire.
 Do not process, splice or modify the power cable, or share the socket with other power plugs.
 Improper power cable or power plug can cause fire or electric shock due to poor connection, insufficient insulation or overcurrent.
- ficient insulation or over-current
- Do not perform any change in protective device or its setup condition yourself.
- Changing protective device specifications can cause electric shock, fire or burst. Be sure to clamp the cables properly so that they do not touch any internal
- component of the unit.

 If cables touch any internal component, it can cause overheating and fire.

 Be sure to install service cover properly.

 Improper installation can cause electric shock or fire due to intrusion of dust or water.

 Be sure to use the prescribed power and connecting cables for electrical work.

- Be sure to use the prescribed power and connecting cables for electrical work. Using improper cables can cause electric leak or fire.

 This appliance must be connected to main power source by means of a circuit breaker or switch with a contact separation of at least 3 mm. Improper electrical work can cause unit failure or personal injury.

 Be sure to connect the power source cable with power source properly. Improper connection can cause intrusion of dust or water resulting in electric shock or fire.

⚠ CAUTION

Take care when carrying the unit by hand.
If the unit weight is more than 20kg, it must be carried by two or more persons.
Do not carry the unit by the plastic straps. Always use the carry handle.
Do not install the outdoor unit in a location where insects and small animals

- can inhabit. Insects and small animals can enter the electrical parts and cause damage resulting in fire or per-

- Insection of the unit needs to be expressed and some second injury. Instruct the user to keep the surroundings clean.

 If the outdoor unit is installed at height, make sure that there is enough space for installation, maintenance and service.

 Insufficient space can result in personal injury due to falling from the height.

 Do not install the unit near the location where neighbours are bothered by noise or air generating from the unit.
- noise of air generating from the unit.

 It can affect surrounding environment and cause a claim.

 Do not install in the locations where unit is directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty atmosphere.

 It can cause corrosin of heat exchanger and damage to plastic parts.

 Do not install the unit close to the equipment that generates electromagnetic
- waves and/or high-harmonic waves.
- The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming
- Equipment such as inverters, standby generators, medical high frequency equipment and telecommunication equipment can affect the system, and cause malfunctions and breakdowns.

- Do not install the unit in the locations where:
- There are heat sources nearby.
 There is any obstacle which can prevent smooth air circulation from inlet and outlet side of the unit.
- Unit is directly exposed to oil mist and steam such as kitchen.
- Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will generate or accumulate.
- Drain water cannot be discharged properly.
 TV set or radio receiver is placed within 1m.
 Height above sea level is more than 1000m.
- I height above sea level is into that in town.

 It can cause performance degradation, corrosion and damage of components, unit malfunction and fire.

 Dispose of all packing materials properly.

 Packing materials contain nails and wood which can cause personal injury.

 Keep the polybag away from children to avoid the risk of suffocation.

 Do not put anything on the outdoor unit.

- Object may fall causing property damage or personal injury.

 Do not touch the aluminum fin of the outdoor unit.

 Aluminium fin temperature is high during heating operation. Touching fin can cause burn.

 Do not touch any refrigerant pipe with your hands when the system is in operation.

 During operation the refrigerant pipes become extremely hot or extremely cold depending on the operating condition. Touching pipes can cause personal injury like burn (hot/cold).
- Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.

 The isolator should be locked in OFF state in accordance with EN60204-1.

1. ACCESSORIES AND TOOLS

Standard accessories (Supplied with outdoor unit)		Q'ty		Locally procured parts	Tools for installation work			
П	(1) Drain grommet		4	(a)	Anchor bolt (M10-M12) × 4 pcs.	Phillips head driver	Spanner wrench	Vacuum pump*
1 }			H	(b)	Putty	Knife	Torque wrench [14.0-62.0 N•m (1.4-6.2 kgf•m)]	Gauge manifold *
	(2)	Drain elbow	1	(c)	Electrical tape	Saw	Wrench key (Hexagon) [4 mm]	Charge hose *
7	*Not included for SRC20, 25, or 35ZSX-WA. (d) Connecting		Connecting pipe	T	Floring to all and #	Vacuum pump adapter*		
			(e)	Connecting cable	Tape measure	Flaring tool set *	(Anti-reverse flow type)	
			(f)	Power cable	Pipe cutter	Flare adjustment gauge	Gas leak detector *	
				(g)	Clamp and screw (for finishing work)			*Designed specifically for R32 or R410A

2. OUTDOOR UNIT INSTALLATION

Note as a unit designed for R32

- Note as a unit designed for R32

 Do not use any refrigerant other than R32. R32 will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R32 has a light blue indication mark on the top.

 Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.

 In charging refrigerant, always take it out from a cylinder in the liquid phase.

 All indoor units must be models designed exclusively for R32. Check connectable indoor unit models in
- a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

1. Haulage

- Always carry or move the unit with two or more persons.

 The right hand side of the unit as viewed from the front (outlet side) is heavier.

A person carrying the right hand side must take care of this fact. A person carrying the left hand side must hold the handle provided on the front panel of the unit with his right hand and the corner column section of the unit with his left hand.



⚠ CAUTION

When a unit is hauled, take care of its gravity center position which is shifted towards right hand side. If the unit is not hauled properly, it can go off balance and fall resulting in serious injury.

2. Selecting the installation location

- Select the suitable installation location where:

 Unit will be stable, horizontal and free of any vibration transmission.
- There is no obstacle which can prevent smooth air circulation from inlet and outlet side of the unit. There is enough space for service and maintenance of unit. Neighbours are not bothered by noise or air generating from the unit.

- Outlet air of the unit does not blow directly to animals or plants.
- Drain water can be discharged properly.

 There is no risk of flammable gas leakage.

 There are no other heat sources nearby.
- Unit is not directly exposed to oil mist and steam.
- Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will not generate or accumulate.

 Unit is not directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty at-
- mosphere.
- No TV set or radio receiver is placed within 1 m.
- Unit is not affected by electromagnetic waves and/or high-harmonic waves generated by other equip-
- Strong wind does not blow against the unit outlet.
- Heavy snowfalls do not occur (If installed, provide proper protection to avoid snow accumulation).

NOTE

If the unit is installed in the area where there is a possibility of strong wind or snow accumulation, the following measures are required.

(1) Location of strong wind

Place the unit with its outlet side facing the wall.


the outlet gets perpendicular to the wind direc-






- · Install the unit on the base so that the bottom is higher than snow cover surface.

 Install the unit under eaves or provide the roof on

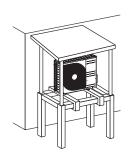

3. Installation space

There must be 1 m or larger space between the unit and the wall in at least 1 of the 4 sides. Walls surrounding the unit from 4 sides is not acceptable. The wall height on the outlet side should be 1200 mm or less. Refer to the following figure and table for details.

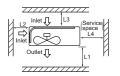

				(111111)
Example installation Size	I	II	III	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

NOTE

When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space

⚠ CAUTION

When more than one unit are installed in parallel directions, provide sufficient inlet space so that shortcircuiting may not occur.

4. Drain piping work (If necessary)

Carry out drain piping work by using a drain elbow and a drain grommet supplied separately as accessories if condensed water needs to be drained out.

(1) Install drain elbow and drain grommet.(2) Seal around the drain elbow and drain grommet with putty or adequate caulking material.

<SRC20/25/35/40/50/60ZSX-W>



Do not put a grommet on this hole. This is a supplementary drain hole to discharge drain water, when a large amount of it is gathered.

↑ CAUTION

Do not use drain elbow and drain grommet if there is a possibility to have several consecutive days of sub zero temperature. (There is a risk of drain water freezing inside and blocking the drain.)


<SRC20/25/35ZSX-WA



Do not block the drain holes when installing the outdoor unit.

5. Installation

- · Install the unit on a flat level base.
- While installing the unit, keep space and fix the unit's legs with 4 anchor bolts as shown in the figure below. The protrusion of an anchor bolt from the foundation surface must be kept within 15mm.

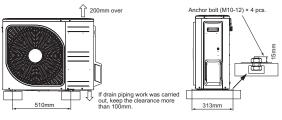


⚠ CAUTION

- Install the unit properly so that it does not fall over during earthquake, strong wind, etc.
 Make sure that unit is installed on a flat level base. Installing unit on uneven base may result in unit

3. PREPARATION FOR WORK


1. Removing service cover

rew. Slide service cover downwards and remove it

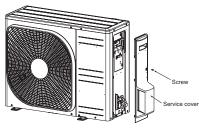

2. Removing terminal cover

Remove the screw and take out terminal cover

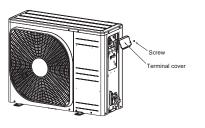


4. CONNECTING PIPING WORK

1. Restrictions on unit installation

Abide by the following restrictions on unit installation.

Improper installation can cause compressor failure or performance.

	Dimensional restrictions		
	Model SRC20/25/35	Model SRC40/50/60	
Connecting pipe length (L)	25m or less	30m or less	
Elevation difference between indoor and outdoor units (H)*	15m or less	20m or less	
* 0 41			

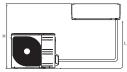

er than the indoor unit installation position.

2. Preparation of connecting pipe

2.1 Selecting connecting pipe
Select connecting pipe according to the following table.

	Model SRC20/25/35	Model SRC40/50/60	
Gas pipe	φ9.52	φ12.7	
Liquid pipe	φ6.35	φ6.35	

Pipe wall thickness must be greater than or equal to 0.8mm.
Pipe material must be O-type (Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30).


NOTE

If it is required to reuse the existing connecting pipe system, refer to 5. UTILIZATION OF EXISTING

- 2.2 Cutting connecting pipe
 (1) Cut the connecting pipe to the required length with pipe cutter.
 (2) Hold the pipe downward and remove the burrs. Make sure that no foreign material enters the pipe.
 (3) Cover the connecting pipe ends with the tape.

3. Piping work

Check that both liquid and gas service valves are fully closed. Carry out the piping work with service valves fully closed

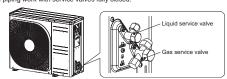

3.1 Flaring pipe

3.1 Flaring pipe (1) Take out flare nuts from the service valves of outdoor unit and engage them onto connecting pipes. (2) Flare the pipes according to table and figure shown below. Flare dimensions for R32 are different from those for conventional refrigerant. Although it is recommended to use the flaring tools designed specifically for R32 or R410A, conventional flaring tools can also be used by adjusting the dimension B with a flare adjustment gauge.



Copper pipe outer diameter	А
φ6.35	9.1
φ9.52	13.2
φ12.7	16.6



Copper pipe	B [Rigid (clutch) type]		
outer diameter	R32 or R410A	Conventional	
φ6.35	0-0.5		
φ9.52		1.0-1.5	
φ12.7			

3.2 Connecting pipes

(1) Connect pipes on both liquid and gas sides.
 (2) Tighten nuts to specified torque shown in the table below

. , .	•
Service valve size (mm)	Tightening torque (N·m)
φ6.35 (1/4")	14-18
φ9.52 (3/8")	34-42
φ12.7 (1/2")	49-61



⚠ CAUTION

- Do not apply refrigerating machine oil to the flared surface. It can cause refrigerant leakage
- Do not apply excess torque to the flared nuts. The flared nuts may crack resulting in refrigerant leakage.

4. Evacuation

- (1) Connect vacuum pump to gauge manifold. Connect charge hose of gauge manifold to service port of outdoor unit.

- of outdoor unit.

 (2) Run the vacuum pump for at least one hour after the vacuum gauge shows -0.1MPa (-76cm Hg),

 (3) Confirm that the vacuum gauge indicator does not rise even if the system is left for 15 minutes or more. Vacuum gauge indicator will rise if the system has moisture left inside or has a leakage point. Check the system for the leakage point. If leakage point is found, repair it and return to (1) again.

 (4) Close the Handle Lo and stop the vacuum pump.

 Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.

 (5) Remove valve caps from liquid service valve and gas service valve.
- (5) Remove valve caps from liquid service valve and gas service valve.

 (6) Turn the liquid service valve's rod 90 degree counterclockwise with a hexagonal wrench key to open
- valve.


 Close it after 5 seconds, and check for gas leakage.
 Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods.

 Wipe off all the water after completing the check.

 (7) Disconnect charging hose from gas service valve's service port and fully open liquid and gas service valves. (Do not attempt to turn valve rod beyond its stop.)

 (8) Tighten service valve caps and service port cap to the specified torque shown in the table below.

Service valve size (mm)	Service valve cap tightening torque (N·m)	Service port cap tightening torque (N·m)	
φ6.35 (1/4")	20-30		
φ9.52 (3/8")	20-30	10-12	
φ12.7 (1/2")	25-35		

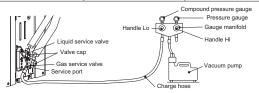

⚠ CAUTION

To prevent vacuum pump oil from entering into the refrigerant system, use a counterflow prevention adapter.

5. Additional refrigerant chargeAdditional refrigerant charge is required only when connecting pipe length exceeds 15m.

5.1 Calculating additional refrigerant charge
Additional refrigerant charge can be calculated using the formula given below.
Additional refrigerant charge (g) = { Connecting pipe length (m) – Factory charged length 15 (m) } x 20 (g/m)

NOTE

- If additional refrigerant charge calculation result is negative, there is no need to remove the refrigerant.
- If refrigerant recharge is required for the unit with connecting pipe length 15m or shorter, charge the factory charged amount as shown in the table below.
- The maximum refrigerant charge amount is designed as shown in the table below.

	Model SRC 20/25/35	Model SRC40/50/60
The factory refrigerant charge amount (kg)	1.20	1.30
The maximum refrigerant charge amount (kg)	1.40	1.60

5.2 Charging refrigerant


- 2.2 charging rerrigerant
 (1) Charge the R32 refrigerant in liquid phase from service port with both liquid and gas service valves shut. Since R32 refrigerant must be charged in the liquid phase, make sure that refrigerant is discharged from the cylinder in the liquid phase all the time.
 (2) When it is difficult to charge a required refrigerant amount, fully open both liquid and gas service valves and charge refrigerant, while running the unit in the cooling mode. When refrigerant is charged with the unit being run, complete the charge operation within 30 minutes.
 (3) Write the additional refrigerant charge calculated from the connecting pipe length on the label attached on the service cover.

⚠ CAUTION

- · Running the unit with an insufficient quantity of refrigerant for a long time can cause unit malfunction.
- Do not charge more than the maximum refrigerant amount. It can cause unit malfunction

5. UTILIZATION OF EXISTING PIPE

(1) Check whether an existing pipe system is reusable or not by using the following flow chart.

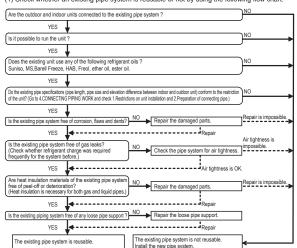

Consult with our distributor in the area, if you need to recover refrigerant and charge it again.

(2) Clean the existing pipe system according to the procedure given below.

(a) Carry out forced cooling operation of existing unit for 30 minutes.

For 'Forced cooling operation' refer to the indoor unit installation manual.

(b) Stop the indoor fan and carry out forced cooling operation for 3 minutes (Liquid return).

(c) Close the liquid service valve of the outdoor unit and carry out pump down operation (Refer to 6. PUMP DOWN).

(d) Blow with nitrogen gas. If discolored refrigeration oil or any foreign matter is discharged by the blow, wash the pipe system or install a new pipe system.

(3) Remove the flare nuts from the existing pipe system. Go back to 4.CONNECTING PIPING WORK and proceed to step 2.2 Cutting connecting pipe.

↑ CAUTION

- · Do not use the old flare nuts (of existing unit). Make sure that the flare nuts supplied with the (new) outdoor unit are used.
- If the flared / compression connection to the indoor unit is located inside the house / room then this pipework can't be reused.
- If the existing piping is specified as liquid pipe ϕ 9.52 or gas pipe ϕ 12.7, refer to the following. (SRC40,50 and 60 only

<Table of pipe size restrictions>


Additional charge	Additional charge amount per meter of pipe	
Pipe size	Liquid pipe	φ9.52
Pipe size	Gas pipe	φ12.7
Maximum one-way	Maximum one-way pipe length	
Length covered wi	thout additional charge	5

Additional charge amount (kg) = {Main pipe length (m) - Length covered without additional charge shown in the table (m)} x Additional charge amount per meter of pipe shown in the table (kg/m)

6. PUMP DOWN

- (1) Connect charge hose of gauge manifold to service port of outdoor unit. (2) Close the liquid service valve with hexagonal wrench key.

- (3) Fully open the gas service valve with hexagonal wrench key.(4) Carry out forced cooling operation (For forced cooling operation procedure, refer to indoor unit installation
- manual).
 (5) When the low pressure gauge becomes 0.01MPa, close the gas service valve and stop forced cooling

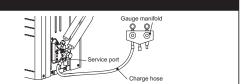

7. ELECTRICAL WIRING WORK

⚠ WARNING

- Make sure that all the electrical work is carried out in accordance with the national or regional electri-cal standards.
- Make sure that the earth leakage breaker and circuit breaker of appropriate capacities are installed

- Refer to the table given below).

 Do not turn on the power until the electrical work is completed.

 Do not turn on condensive capacitor for power factor improvement under any circumstances (It does not improve power factor. Moreover, it can cause an abnormal overheat accident).

Model	Phase	Earth leakage breaker	Circuit breaker
SRC20/25/35		Leakage current: 30mA,	Over current: 16A
SRC40/50/60		0.1 sec or less	Over current: 20A

Main fuse specification

Model	Specification	Parts No.	Code on LABEL, WIRING
SRC20/25/35	250V 15A	SSA564A136	F7
SRC40/50/60	250V 20A	SSA564A136A	F4

1. Preparing cable

(1) Selecting cable

Select the power source cable and connecting cable in accordance with the specifications mentioned below

(a) Power source cable
3 cores* 2.5mm or more, conformed with 60245 IEC57
When selecting the power source cable length, make sure that voltage drop is less than 2%.
If the wire length gets longer, increase the wire diameter.

(b) Connecting cable 4 cores* 1.5mm², conformed with 60245 IEC57

* 1 Earth wire is included (Yellow/Green).

(2) Arrange each wire length as shown below.

Make sure that each wire is stripped 10mm from the end.



(3) Attach round crimp-type terminal to each wire as shown in the below Select the size of round crimp-type terminal after considering the specifications of terminal block and wire



⚠ CAUTION

Power source cable and connecting cable must conform to the specifications mentioned in the manual. Using cables with wrong specifications may result in unit malfunction.

2. Connecting cable

- 2. Connecting cable

 (1) Remove the service cover and the terminal cover.

 (2) Connect the cables according to the instructions and figures given below.

 (a) Connect the earth wire of power source cable.

 An earth wire must be connected before connecting the other wires of power source cable.


 Keep the earth wire longer than the remaining two wires of power source cable.


 (b) Connect the remaining two wires (N and L) of power source cable.

 (c) Connect the wires of connecting cable. Make sure that for each wire, outdoor and indoor side terminal outputs the material.
- minal numbers match.
 (3) Fasten the cables properly with cable clamps so that no external force may work on terminal connection.

Moreover, make sure that cables do not touch the piping, etc. When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection

<Circuit diagram

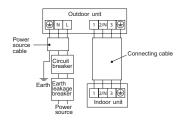

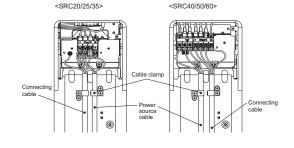


8. FINISHING WORK

1. Heating and condensation prevention

- insulation pad (standard accessory provided with indoor unit).

 (4) Wrap the connecting pipes, connecting cable and drain hose

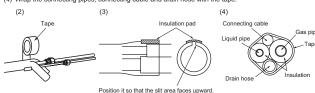

NOTE

Locations where relative humidity exceeds 70%, both liquid and gas pipes need to be dressed with 20mm or thicker heat insulation materials.

⚠ CAUTION

- Improper insulation can cause condensate (water) formation during cooling operation.
- Condensate can leak or drip causing damage to household property.

 Poor heat insulating capacity can cause pipe outer surface to reach high temperature during heating operation. It can cause cable deterioration and personal injury.


2. Finishing work

- (1) Dress the connecting pipes (both liquid and gas pipes) with insulation to prevent it from heating and dew condensation.

 Use the heat insulating material which can withstand 120°C or higher temperature. Make sure that insulation is wrapped tightly around the pipes and no gap is left between them.

 (2) Wrap the refrigerant piping of indoor unit with indoor unit heat insulation using tape.

 (3) Cover the flare-connected joints (indoor side) with the indoor unit heat insulation and wrap it with an

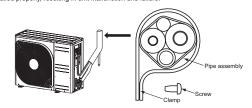

Make sure that the connecting pipes do not touch the components within the unit. If pipes touch the internal components, it may go

9. INSTALLATION TEST CHECK POINTS

After finishing the installation work, check the following points again before turning on the power. Conduct test run (Refer to indoor unit installation manual) and ensure that the unit operates properly

Power source voltage complies with the rated voltage of air-conditioner. Earth leakage breaker and circuit breaker are installed. Power cable and connecting cable are securely fixed to the terminal block Both liquid and gas service valves are fully open

No gas leaks from the joints of the service valves Indoor and outdoor side pipe joints have been insulated. Drain hose (if installed) is fixed properly. Screw of the terminal cover and the service cover are tightened properly.

Safety precautions in handling air-conditioners with flammable refrigerant

RSA012A090D 🚖

R32 REFRIGERANT USED



This equipment uses flammable refrigerants. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.



There is information included in the user's manual and/or installation manual



The user's manual should be read carefully.



A service personnel should be handing this equipment with reference to the installation manual.

- · This safety precaution sheet is for R32 refrigerant. If you want to know the type of refrigerant in the unit, check the label attached to the outdoor unit.
- The precautionary items mentioned below are distinguished into two levels, \(\bar{\text{L}} \) WARNING and \(\bar{\text{L}} \) CAUTION

MARNING: Wrong installation would cause serious consequences such as injuries or death.

⚠ CAUTION: Wrong installation might cause serious consequences depending on circumstances.

⚠ WARNING

- Strict compliance of the domestic laws must be
- observed when disposing the appliance. Do not use means to accelerate the defrost operation process or to clean, other than those recommended by the manufacturer.
- · The appliance shall be stored in a room without continuously operating ignition sources (for example open flames, an operating gas appliance or an operating electric heater).
- · Do not pierce or burn.
- Be aware that refrigerants may not contain an
- The ducts connected to an appliance shall not contain a potential ignition source.

⚠ CAUTION

1. General

- That the installation of pipe-work shall be kept to a
- That pipe-work shall be protected from physical damage.
- That compliance with national gas regulations shall be observed.
- That mechanical connections shall be accessible for maintenance purposes
- Keep any required ventilation openings clear of obstruction.
- Servicing shall be performed only as recommended by the manufacturer.
- Equipment piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service.
- Precautions shall be taken to avoid excessive vibration or pulsation to refrigerating piping
- Protection devices, piping and fittings shall be protected as far as possible against adverse environmental effects, for example, the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris.
- Provision shall be made for expansion and contraction of long runs of piping.
- Piping in refrigerating systems shall be so designed and installed to minimize the likelihood hydraulic shock damaging the system.
- The indoor equipment and pipes shall be securely mounted and guarded such that accidental rupture of equipment cannot occur from such events as moving furniture or reconstruction activities.
- Instructions for wiring to external zoning dampers and/or mechanical ventilation, to ensure that upon detection of a leak, the zoning dampers are driven fully open and additional mechanical ventilation is activated
- For appliances using A2L refrigerants, connected via an air duct system to one or more rooms, the supply and return air shall be directly ducted to the space. Open areas such as false ceilings shall not be used as a return air duct.
- The following information requirements apply for enhanced tightness refrigerating systems using A2L
- Where safety shut off valves are specified, the minimum room area may be determined based on the maximum amount of refrigerant that can be leaked as determined in GG.12.2. (IEC 60335-2-40:2018)
- Where safety shut off valves are specified, the location of the valve in the refrigerating system relative to the occupied spaces shall be as described in GG.12.1.(IEC 60335-2-40:2018)

(2. Unventilated areas

- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- If the refrigerant charge amount in the system is ≥1.84 kg, an unventilated area where the appliance is installed shall be so constructed that should any refrigerant leak, it will not stagnate so as to create a fire or explosion hazard.

(3. Qualification of workers

The staff in servicing operations must hold the national qualification or other relevant qualifications.

(4. Information on servicing)

- 4.1 Checks to the area
- Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised.
- For repair to the refrigerating system, 4.2 to 4.6 shall be completed prior to conducting work on the system.
- 4.2 Work procedure
- Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.
- 4.3 General work area
- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.
- · Work in confined spaces shall be avoided.
- 4.4 Checking for presence of refrigerant
- · The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres.
- Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe
- 4.5 Presence of fire extinguisher
- If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

4.6 No ignition sources

- No person carrying out work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space.
 Prior to work taking place, the area around the
- equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
- "No Smoking" signs shall be displayed.
- 4.7 Ventilated area
- . Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.
- A degree of ventilation shall continue during the period that the work is carried out.
- The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- 4.8 Checks to the refrigerating equipment
- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification.
- At all times the manufacturer's maintenance and service guidelines shall be followed
- If in doubt consult the manufacturer's technical department for assistance
- The following checks shall be applied to installations using flammable refrigerants:
- the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed:
- the ventilation machinery and outlets are
- operating adequately and are not obstructed; if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

⚠ CAUTION

- 4.9 Checks to electrical devices
- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.
- If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate
- temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.
- · Initial safety checks shall include:
- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding

5. Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.
- If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected.
 - This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- Ensure that the apparatus is mounted securely.
- Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres
- Replacement parts shall be in accordance with the manufacturer's specifications

(6. Repair to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.

 The test apparatus shall be at the correct rating.
- Replace components only with parts specified by the manufacturer.
- Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them

Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans

(8. Detection of flammable refrigerants

- Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.
- A halide torch (or any other detector using a naked flame) shall not be used.
- Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
- Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used
- Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.
- Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

NOTE

Examples of leak detection fluids are

- bubble method.
- fluorescent method agents.
- If a leak is suspected, all naked flames shall be removed/extinguished.
- If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak
- Removal of refrigerant shall be according to Item 9.

9. Removal and evacuation

- When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration.
 The following procedure shall be adhered to:
- - remove refrigerant;
 - purge the circuit with inert gas (option for A2L);
- evacuate (option for A2L);
- purge with inert gas (option for A2L);
- open the circuit by cutting or brazing.
 The refrigerant charge shall be recovered into the
- correct recovery cylinders.
- For appliances containing flammable refrigerants other than A2L refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants.
- This process may need to be repeated several times Compressed air or oxygen shall not be used for
- purging refrigerant systems.
- For appliances containing flammable refrigerants, other than A2L refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system.
- When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.
- Ensure that the outlet for the vacuum pump is not close to any ignition sources and that ventilation is

(10. Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed.
 - Ensure that contamination of different refrigerants does not occur when using charging equipment Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in
 - Cylinders shall be kept in an appropriate position according to the instructions
 - Ensure that the refrigerating system is earthed
 - prior to charging the system with refrigerant. Label the system when charging is complete (if not already).
 - Extreme care shall be taken not to overfill the refrigerating system.
- Prior to recharging the system, it shall be pressure-
- tested with the appropriate purging gas.

 The system shall be leak-tested on completion of charging but prior to commissioning
- A follow up leak test shall be carried out prior to leaving the site.

(11. Decommissioning)

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant.
- It is essential that electrical power is available before the task is commenced.
- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure ensure that:
- mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- all personal protective equipment is available and being used correctly;
- the recovery process is supervised at all times by a competent person;
- recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
 g) Start the recovery machine and operate in
- accordance with instructions
- h) Do not overfill cylinders. (No more than 80 %volume liquid charge).

 Do not exceed the maximum working pressure of
- the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigerating system unless it has been cleaned and checked.

(12. Labelling)

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed.
- For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

A CAUTION

13. Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
 Ensure that the correct number of cylinders for
- Ensure that the correct number of cylinders for holding the total system charge is available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants.

- In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition.
- Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.
 Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.
 Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- refrigerant does not remain within the lubricant.

 The evacuation process shall be carried out prior to returning the compressor to the suppliers.
- Only electric heating to the compressor body shall be employed to accelerate this process.
- When oil is drained from a system, it shall be carried out safely.

14. Other safety precautions

- A brazed, welded, or mechanical connection shall be made before opening the valves to permit refrigerant to flow between the refrigerating system parts.
- Flammable refrigerant used, refrigerant tubing protected or enclosed to avoid mechanical damage (IEC/EN 60335-2-40).
- Tubing protected to extent that it will not be handled or used for carrying during moving of product (IEC/EN 60335-2-40).
- Flammable refrigerant used, low temperature solder alloys, such as lead/tin alloys, not acceptable for pipe connections (IEC/EN 60335-2-40).
- Do not use flare nut indoor which is locally procured.

Selection of installation location for the indoor unit

• Minimum installation area for indoor unit

⚠ CAUTION

The indoor unit shall be installed in a room with minimum installation area or more according to the refrigerant charge amount (factory refrigerant charge + additional refrigerant charge).

For factory refrigerant charge, refer to the outdoor unit label model name or installation sheet.

For additional refrigerant charge, refer to the outdoor unit installation sheet.

- If the refrigerant charge amount in the system is < 1.84 kg, there are no additional minimum floor area requirements.
- If the refrigerant charge amount in the system is \geqq 1.84 kg, you need to comply with additional minimum floor area requirements as described in the following table.
- For further details regarding the installation location of indoor unit, refer to technical manual.

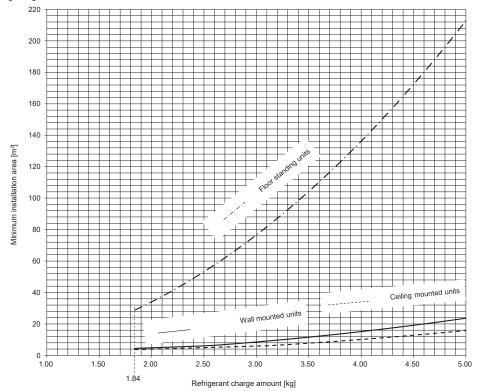


Figure 1. Minimum installation area (A min) graph

Table 1. Minimum installation area (A min) table

	Minimum installation area [m²]					
Refrigerant charge amount [kg]	Wall mounted units H=1.8 m	units units				
1.00						
1.10						
1.20						
1.30						
1.40		No requirements				
1.50	1.50					
1.60						
1.70						
1.80						
1.84	4.44	3.64	28.82			
1.90	4.59	3.76	30.73			
2.00	4.83	3.95	34.05			
2.10	5.07	4.15	37.54			
2.20	5.31	4.35	41.20			
2.30	5.55	4.55	45.03			
2.40	5.80	4.74	49.03			
2.50	6.04	4.94	53.20			
2.60	6.40	5.14	57.54			
2.70	6.90	5.34	62.05			
2.80	7.42	5.53	66.73			
2.90	7.96	5.73	71.58			

	Minimum installation area [m²]						
Refrigerant charge amount [kg]	Wall mounted units H=1.8 m	Ceiling mounted units H=2.2 m	Floor standing units H=0.6 m*				
3.00	8.52	5.93	76.60				
3.10	9.09	6.12	81.79				
3.20	9.69	6.49	87.16				
3.30	10.30	6.90	92.69				
3.40	10.94	7.32	98.39				
3.50	11.59	7.76	104.26				
3.60	12.26	8.21	110.31				
3.70	12.95	8.67	116.52				
3.80	3.80 13.66		122.90				
3.90	14.39	9.63	129.45				
4.00	15.14	10.13	136.18				
4.10	15.90 10.65 143		143.07				
4.20	16.69	11.17	150.14				
4.30	17.49	11.71	157.37				
4.40	18.31	12.26	164.77				
4.50	19.15	12.82	172.35				
4.60	20.01	13.40	180.09				
4.70	20.89	13.99	188.01				
4.80	21.79	14.59	196.09				
4.90	22.71	15.20	204.35				
5.00	23.65	15.83	212.78				

*For floor standing units, the value of installation height (H) is considered 0.6 m to comply to IEC 60335-2-40:2018 Clause GG.2.

10. OPTION PARTS

(1) Wired remote control (RC-EX3A, RC-E5)
(a) Model RC-EX3A

PJZ012A171 🛕

1) Safety precautions

●Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.

∆ WARNING	Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.			
∴ CAUTION	Failure to follow these instructions properly may cause injury or property damage.			

It could have serious consequences depending on the circumstances.

The following pictograms are used in the text.



Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

^WARNING

- Consult your dealer or a professional contractor to install the unit.

 Improper installation made on your own may cause electric shocks, fire or dropping of the unit.
- Installation work should be performed properly according to this installation manual.

Improper installation work may result in electric shocks, fire or break-down.

- Be sure to use accessories and specified parts for installation work.
 Use of unspecified parts may result in drop, fire or electric shocks.
- Install the unit properly to a place with sufficient strength to hold the weight.

If the place is not strong enough, the unit may drop and cause injury.

Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient and improper work can cause electric shock and fire.

Shut OFF the main power source before starting electrical work.
Otherwise, it could result in electric shocks, break-down or malfunction.


Do not modify the unit.


It could cause electric shocks, fire, or break-down.

Be sure to turn OFF the power circuit breaker before repairing/ inspecting the unit.


Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.

↑ WARNING

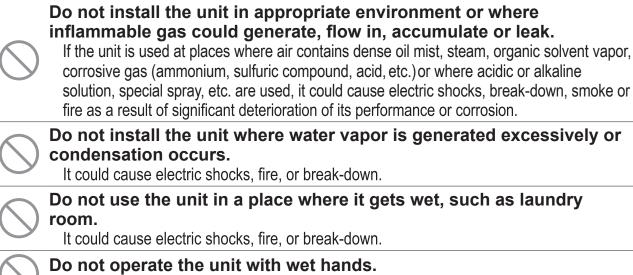

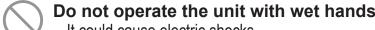

It could cause electric shocks.

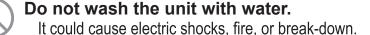

Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.

Improper connections or fixing could cause heat generation, fire, etc.

Seal the inlet hole for remote control cable with putty.

If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

If dew or water enters the unit, it may cause screen display anomalies.

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication. equipment could disrupt medical activities, video broadcasting or cause noise interference.

Do not leave the remote control with its upper case removed. If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

ACAUTION

Do not install the remote control at following places.

- (1) It could cause break-down or deformation of remote control.
 - Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0°C or below, or 40°C or above
 - Where the surface is not flat
 - · Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
 - Place with high humidity where condensation occurs on the remote control
 - · Where the remote control gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
 - · Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large

To connect to a personal computer via USB, use the dedicated software.

Do not connect other USB devices and the remote control at the same time.

It could cause malfunction or break-down of the remote control/personal computer.

2) Accessories & prepare on site

Following parts are provided.

Accessories R/C main unit, wood screw (ø3.5 x 16) 2 pcs., Quick reference

Following parts are arranged at site. Prepare them according to the respective installation procedures.

Item name	Q'ty	Remark
Switch box For 1 piece or 2 pieces (JIS C 8340 or equivalent)	1	
Thin wall steel pipe for electric appliance directly on a wall. (JIS C 8305 or equivalent)	As required	These are not required when installing directly on a wall.
Lock nut, bushing (JIS C 8330 or equivalent)	As required]
Lacing (JIS C 8425 or equivalent)	As required	Necessary to run R/C cable on the wall
Putty	Suitably	For sealing gaps
Molly anchor	As required	
R/C cable (0.3mm ² x 2 pcs.)	As required	See right table when longer than 100m.

When the cable length is longer than 100m, the max size for wires used in the R/C case is 0.5mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≦ 200m	0.5mm ² x 2 cores
≦ 300m	0.75mm ² x 2 cores
≦ 400m	1.25mm ² x 2 cores
≦ 600m	2.0mm ² x 2 cores

3) Installation place


Secure the installation space shown in the figure.

For the installation method, "embedding wiring" or "exposing wiring" can be selected.

For the wiring direction, "Backward", "Upper center" or "Upper left" can be selected.

Determine the installation place in consideration of the installation method and wiring direction.


Installation space

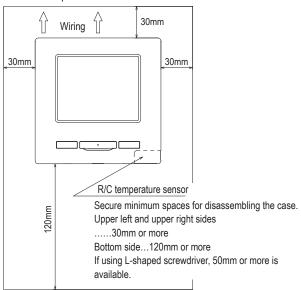

4) Installation procedure

Perform installation and wiring work for the remote control according to the following procedure.

Dimensions (Viewed from front)

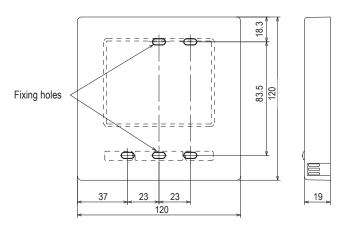

To disassemble the R/C case into the upper and lower pieces after assembling them once


 \cdot Insert the tip of flat head screwdriver or the like in the recess at the lower part of R/C and twist it lightly to remove. It is recommended that the tip of the screwdriver be wrapped with tape to avoid damaging the case.

Take care to protect the removed upper case from moisture or dust.

In case of embedding wiring


(When the wiring is retrieved "Backward")

① Embed the switch box and the R/C wires beforehand. Seal the inlet hole for the R/C wiring with putty.

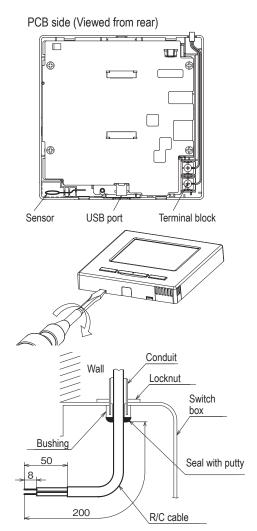


② When wires are passed through the bottom case, fix the bottom case at 2 places on the switch box.

Switch box for 1 pc.

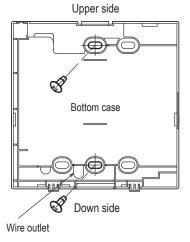

Switch box for 2 pcs.

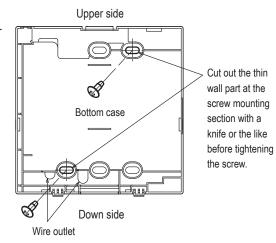


- ③ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- 4 Install the upper case with care not to pinch wires of R/C.

Cautions for wire connection

Use wires of no larger than 0.5mm² for wiring running through the remote control case. Take care not to pinch the sheath.

Tighten by hand $(0.7N\cdot m \text{ or less})$ the wire connection. If the wire is connected using an electric driver, it may cause failure or deformation.

O X

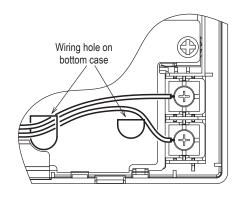


In case of exposing wiring


(When the wiring is taken out from the "upper center" or "upper left" of R/C)

1) Cut out the thin wall sections on the cases for the size of wire.


When taking the wiring out from the upper center, open a hole before separating the upper and bottom cases. This will reduce risk of damaging the PCB and facilitate subsequent work.


When taking the wiring out from the upper left, take care not to damage the PCB and not to leave any chips of cut thin wall inside.

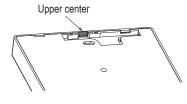

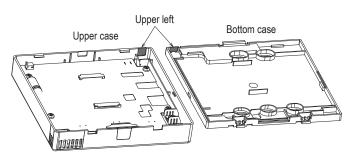

- ② Fix the bottom R/C case on a flat surface with two wood screws.
- ③ In case of the upper center, pass the wiring behind the bottom case. (Hatched section)
- (4) Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- (5) Install the top case with care not to pinch wires of R/C.
- 6 Seal the area cut in 1 with putty.

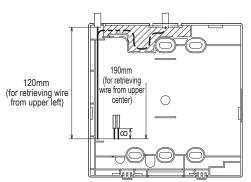

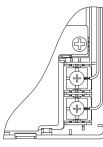


5) Main/Sub setting when more than one remote control are used

Up to two units of R/C can be used at the maximum for 1 indoor unit or 1 group.

One is main R/C and the other is sub R/C.

Operating range is different depending on the main or sub R/C.

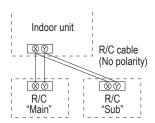

R/C operation	ns		Main	Sub
Run/Stop, Change set temp., Change flap direction, Auto swing, Change fan speed operations				0
High power of	peration, En	ergy-saving operation	0	0
Silent mode	control		0	×
Useful	Individual f	ap control	0	×
functions	Anti draft se	Anti draft setting		×
	Timer		0	0
	Favorite se	tting	0	0
	Weekly tim	er	0	×
	Home leave	e mode	0	×
	External ve	ntilation	0	0
	Select the language		0	0
	Silent mode control			
Energy-saving setting				×
Filter	Filter sign reset		0	0
User setting	Initial settin	gs	0	0
	Administrator settings	Permission/ Prohibition setting	0	×
		Outdoor unit silent mode timer	0	×
		Setting temp. range	0	×
		Temp increment setting	0	×
		Set temp. display	0	0
		R/C display setting	0	0
		Change administrator password	0	0
		F1/F2 function setting	0	0

Installation setting	○ : operable ×: not operable					
Settings Company information O O			Main	Sub		
Test run Static pressure adjustment Change auto-address Address setting of main IU IU back-up function Motion sensor setting R/C function settings R/C sensor setting R/C sensor adjustment Operation mode C/oF Fan speed External input Upper/lower flap control Left/right flap control Left/right flap control Ventilation setting X Auto-restart Auto temp. setting X Auto-festart Auto fan speed Service & Maintenance Next service date Operation data Error display Display/erase anomaly data Reset periodical check Settings Service Setting CPU reset Restore of default setting X Restore of default setting X Restore of default setting X Restore of default setting X Touch panel calibration C X Ventilation X X X X X X X X X X X X X			Installati	on date	0	×
Static pressure adjustment	setting	settings	Compan	y information	0	0
Change auto-address			Test run		0	×
Address setting of main IU IU back-up function Motion sensor setting R/C function Settings R/C function Settings Main/Sub of R/C Return air temp. R/C sensor R/C sensor adjustment Operation mode C / °F Fan speed External input Upper/lower flap control Left/right flap control Ventilation setting Auto-restart Auto temp. setting Auto-restart Auto temp. setting X X X X X X X X X X X X			Static pr	essure adjustment	0	×
IU back-up function			Change	auto-address	0	×
Motion sensor setting R/C function settings Return air temp. R/C sensor R/C sensor adjustment Operation mode C o F Fan speed External input Upper/lower flap control Left/right flap control Ventilation setting Auto-restart Auto temp. setting Auto fan speed IU settings Service & Maintenance U settings U settin			Address	setting of main IU	0	×
R/C function settings Main/Sub of R/C			IU back-	up function	0	×
Return air temp.			Motion s	ensor setting	0	×
R/C sensor			Main/Su	b of R/C	0	0
R/C sensor adjustment		settings	Return a	nir temp.	0	×
Operation mode OC / °F Fan speed External input Upper/lower flap control Ventilation setting Auto-restart Auto temp. setting Auto fan speed Service & Maintenance IU settings Service & Maintenance Error display Error history Display/erase anomaly data Reset periodical check Saving IU settings Service & CPU reset Restore of default setting × Restore of default setting × National Service A setting Auto temp. setting Auto			R/C sens	sor	0	×
Fan speed			R/C sens	sor adjustment	0	×
Fan speed			Operation	n mode	0	×
External input Upper/lower flap control Left/right flap control Ventilation setting Auto-restart Auto temp. setting Auto fan speed Service & Maintenance IU address Next service date Operation data Error display Error history Display/erase anomaly data Reset periodical check Saving IU settings Saving IU settings Service & Next service date Operation data Error display Error history Display/erase anomaly data Reset periodical check Saving IU settings CPU reset Restore of default setting X Touch panel calibration O ×			°C/°F		0	×
Upper/lower flap control			Fan spe	ed	0	×
Upper/lower flap control			External input			×
Left/right flap control Company						×
Auto-restart				0	×	
Auto temp. setting			Ventilation	0	×	
Auto fan speed			Auto-restart		0	×
U settings			Auto temp. setting		0	×
U settings			Auto fan	0	×	
Maintenance Next service date Operation data Error display Display/erase anomaly data Reset periodical check Saving IU settings Special Erase IU address Settings CPU reset Restore of default setting Touch panel calibration × × × × × × × × × × × ×		IU settings		0	×	
Operation data Fror display Error history Operation data Error history Operation Operation data Error history Operation Operation Operation Operation Error history Operation		Service &	IU addre	ess	0	0
Error display Error history		Maintenance	Next service date		0	×
display Display/erase anomaly data Reset periodical check			Operation data		0	×
Saving IU settings × Special Erase IU address × Settings CPU reset CPU reset Touch panel calibration ○					0	0
Saving IU settings			display	Display/erase anomaly data	0	×
Special Erase IU address Settings CPU reset Restore of default setting Touch panel calibration Touch panel calibration				Reset periodical check	0	0
Settings CPU reset O Nestore of default setting X Touch panel calibration O Nestore Nestore O Nestore			Saving I	U settings	0	×
Restore of default setting x Touch panel calibration c			Special	Erase IU address	0	×
Touch panel calibration			settings	CPU reset	0	0
Touch panel calibration				Restore of default setting	0	×
Indoor unit capacity display O ×					0	0
			Indoor u	nit capacity display	0	×

Advice: Connection to personal computer


It can be set from a personal computer via the USB port (mini-B).

Connect after removing the cover for USB port of upper case.

Replace the cover after use.

Special software is necessary for the connection.


For details, view the web site.

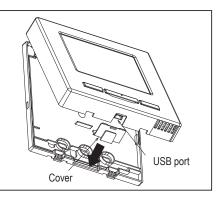

Advice: Initializing of password

Administrator password (for daily setting items) and service password (for installation, test run and maintenance) are used.

- The administrator password at factory default is "0000". This setting can be changed (Refer to User's Manual).
 - If the administrator password is forgotten, it can be initialized by holding down the [F1] and [F2] switches together for five seconds on the administrator password input screen.
- Service password is "9999", which cannot be changed.
 When the administrator password is input, the service password is also accepted.

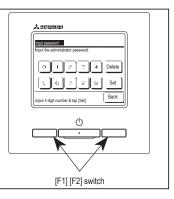

(b) Model RC-E5

PJA012D730∕€

Read together with indoor unit's installation manual.

MARNING

Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.

Loose connection or hold will cause abnormal heat generation or fire.

Make sure the power source is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur.



ACAUTION

- Do not install the remote control at the following places in order to avoid malfunction.
 - (1) Places exposed to direct sunlight
- (4) Hot surface or cold surface enough to generate condensation
- (2) Places near heat devices
- (5) Places exposed to oil mist or steam directly
- (3) High humidity places
- (6) Uneven surface



Do not leave the remote control without the upper case.

In case the upper cace needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust.




Accessories	Remote control, wood screw (ϕ 3.5×16) 2 pieces
Prepare on site	Remote control cord (2 cores) the insulated thickness in 1mm or more.
	[In case of embedding cord] Erectrical box, M4 screw (2 pieces)
	[In case of exposing cord] Cord clamp (if needed)

Installation procedure


- Open the cover of remote control, and remove the screw under the buttons without fail.
- Remove the upper case of remote control. Insert a flat-blade screwdriver into the dented part of the upper part of the remote control, and wrench slightly.





3 Embed the erectrical box and remote control cord beforehand.

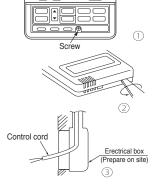

Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to erectrical box. Choose either of the following two positions in fixing it with screws.

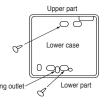

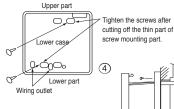


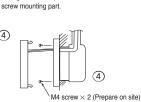

- S Connect the remote control cord to the terminal block. Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)
- Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.

[In case of exposing cord]


- ③ You can pull out the remote control cord from left upper part or center upper part. Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.
- ④ Install the lower case to the flat wall with attached two wooden screws.

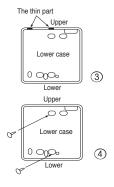

5 Connect the remote control cord to the terminal block.

Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)

Wiring route is as shown in the right diagram depending on the pulling out direction.

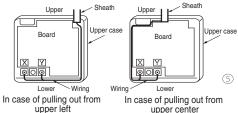

The wiring inside the remote control case should be within 0.3mm² (recommended) to 0.5mm². The sheath should be peeled off inside the remote control case.

The peeling-off length of each wire is as below.

Pulling out from upper left	Pulling out from upper center
X wiring : 215mm	X wiring : 170mm
Y wiring: 195mm	Y wiring: 190mm



- Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.
- In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

Installation and wiring of remote control


- ① Wiring of remote control should use 0.3mm² × 2 cores wires or cables. (on-site configuration)
- ② Maximum prolongation of remote control wiring is 600m.

If the prolongation is over 100m, change to the size below.

But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

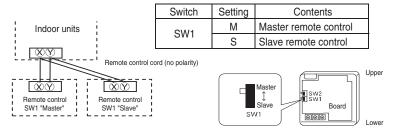

Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment.

Note: The setting "Remote control sensor enabled" is only selectable with the master remote control in the position where you want to check room temperature.

The air-conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.

The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.

At the same time, a mark or a number will be displayed for two seconds first.

This is the software's administration number of the remote control, not an error cord.



When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear

Check wiring of the indoor unit and the outdoor unit etc.



The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating: 16-30°C (55-86°F)

Except heating (cooling, fan, dry, automatic): 18-30°C (62-86°F)

●Upper limit and lower limit of set temperature can be changed with remote control.

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30°C (68 to 86°F). Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 79°F).

When you set upper and lower limit by this function, control as below.

 When @TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting), [If upper limit value is set]

During heating, you cannot set the value exceeding the upper limit.

[If lower limit value is set]

During operation mode except heating, you cannot set the value below the lower limit.

2. When ② TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE" [If upper limit value is set]

During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

[If lower limit value is set]

During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

How to set upper and lower limit value


1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for over three seconds .

The indication changes to "FUNCTION SET ▼".

- 2. Press ▼ button once, and change to the "TEMP RANGE ▲ " indication.
- 3. Press (SET) button, and enter the temperature range setting mode.
- 4. Select "UPPER LIMIT \blacktriangledown " or "LOWER LIMIT \blacktriangle " by using $\boxed{\blacktriangle}$ $\boxed{\blacktriangledown}$ button.
- 5. Press (SET) button to fix.
- 6. When "UPPER LIMIT ▼" is selected (valid during heating)
 - (1) Indication: " $\begin{cal} \begin{cal} \begin{cal$

 - ③ Press ◯ (SET) button to fix. Indication example: "UPPER 26°C" (Displayed for two seconds)

 After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".
- 7. When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)
 - ① Indication: " \bigcirc $\lor \land$ SET UP" \rightarrow "LOWER 18°C \land "
 - ② Select the lower limit value with temperature setting button ☑ △. Indication example: "LOWER 24°C ∨ ∧" (blinking)
 - ③ Press (SET) button to fix. Indication for example: "LOWER 24°C" (Displayed for two seconds)
 After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT ▼".
- 8. Press ON/OFF button to finish.

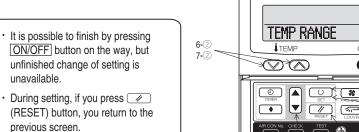

The functional setting

●The initial function setting for typical using is performed automatically by the indoor unit connected, when remote control and indoor unit are connected.

As long as they are used in a typical manner, there will be no need to change the initial settings. If you would like to change the initial setting marked "O", set your desired setting as for the selected item. The procedure of functional setting is shown as the following diagram.

[Flow of function setting]

Record and keep the settina

End : Press ON/OFF button.

It is possible to finish above setting on the way, and unfinished change of setting is unavailable

": Initial settings " * " : Automatic criterion Consult the technical data etc. for each control details

Stop air-conditioner and press

(SET) + (MODE) buttons at the same time for over three seconds.

FUNCTION SET 🔻 To next page ■ RINCTION ▼ (Remote control function) Function setting Validate setting of ESP:External Static Pressure Invalidate setting of ESP 02 | AUTO RUN SE AUTO RUN ON AUTO RUN OFT automatical operation is impossible 03 MIZIZITEMPSW Temperature setting button is not working 04 EE MODE SW 은데 YALID 은데 INVALII Mode button is not working 05 ON/OFF SW കര WALID ⊕@ IMVALID On/Off button is not working 06 MED FAN SPEED SW eee inwalid Fan speed button is not working 07 EZ LOUVER SW &⊠ WALIO O INVALID ouver button is not working 08 @ TIMER SW 는 VALID 는 INVALID Timer button is not working 09 ESENSOR SET I⊜SENSOR OFF ESENSOR ON
ESENSOR +3.0%
ESENSOR +2.0% Remote sensor is working. Remote sensor is working, and to be set for producing +3.0°C increase in temperature. Remote sensor is working, and to be set for producing +2.0°C increase in temperature. Remote sensor is working, and to be set for producing +1.0°C increase in temperature. Remote sensor is working, and to be set for producing -1.0°C increase in temperature. SBNSOR - 1.0%
SBNSOR - 1.0%
SBNSOR - 2.0% Remote sensor is working, and to be set for producing -2.0°C increase in temperature ■SBNSOR -3.0 Remote sensor is working, and to be set for producing -3.0°C increase in temperature 10 AUTO RESTART INVALID VALID 11 VENTLINK SET NO VENT In case of Single split series, by connecting ventilation device to CnT of the indoor printed circuit board (in case of VRF series, by connecting it to CnD of the indoor printed circuit board), the operation of ventilation device is linked with the VENT LINK operation of indoor unit.

In case of Single split series, by connecting ventilation device to CnT of the indoor printed NO VENT LINK circuit board (in case of VRF series, by connecting it to CnD of the indoor printed circuit board), you can operate /stop the ventilation device independently by (VENT) button. 12 TEMP RANGE SET If you change the range of set temperature, the indication of set temperature will vary following the control. If you change the range of set temperature, the indication of set temperature TADA CHANGE NO INDIN CHANG will not vary following the control, and keep the set temperature 13 II/UFAN Air flow of fan becomes of * 1- * 1 or the four speed of * 1- * 1. Air flow of fan becomes of * - * 1.
Air flow of fan becomes of * - * 1. Air flow of fan is fixed at one speed If you change the remote control function "14 与PISITION", you must change the indoor function "04 与PISITION" accordingly. You can select the louver stop position in the four. ♦ 14 32 POSITION 4POSITION STO FREE STOP The louver can stop at any position. 15 MODEL TYPE HEAT PUMP COOLING ONLY 16 EXTERNAL CONTROL SET If you input signal into CnT of the indoor printed circuit board from external, the INDIVIDUAL indoor unit will be operated independently according to the input from external. If you input into CnT of the indoor printed circuit board from external, all units which connect to the same remote control are operated according to the input from external. FOR ALL UNIT: 17 ROOM TEMP INDICATION SET INDICATION OFF In normal working indication, indoor unit temperature is indicated instead of air flow. (Only the master remote control can be indicated.) 18 🐲 INDICATION INDICATION ON INDICATION OF Heating preparation indication should not be indicated 19 c/°FSET Temperature indication is by degree C Temperature indication is by degree F To next page

Note *The mark cannot use SRR series

ON/OFF button (finished)

Note 1: The initial setting marked "%" is decided by connected indoor and outdoor unit, and is automatically defined as following table.

Function No.	Item	Default	Model
Remote control	AUTO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.
function02		AUTO RUN OFF	Indoor unit without "Auto-RUN" mode
Remote control	ESEIFAN SPEED S₩	6절 VALID	Indoor unit with two or three step of air flow setting
function06		িজ্ঞ INVALID	Indoor unit with only one of air flow setting
Remote control EZI LOUYER SW		⊕ © VALID	Indoor unit with automatically swing louver
function07		&© INVALID	Indoor unit without automatically swing louver
Remote control	1/U FAN	HII-MBD-LO	Indoor unit with three step of air flow setting
function13		нт⊣ш	Indoor unit with two step of air flow setting
		HI-MED	
		1 FAIN SPEED	Indoor unit with only one of air flow setting
Remote control	MODEL TYPE	HEAT PUMP	Heat pump unit
function15	1	COOLING ONLY	Exclusive cooling unit

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit.

But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION/PROHIBISHION".

n previous page	Indiana and Nie and South Co. C. C.	Lane.		Note2: Fan setting of "I-				
(ladear m + f + i) Y	Indoor unit No. are indicated only w	vnen		Fan tap		loor unit air flow se		- Marcel - Marcel
(Indoor unit function) [170 HJM	plural indoor units are connected. Function							
L	I/U000 ▲	setting		FAN STANDAR	UH-Hi-Me-Lo	Hi-Me-Lo	Hi - Lo	Hi - Me
	I/U001 =	STANDARD	*	SPEED HIGH	UH-UH-Hi-Me	UH - Hi - Me	UH-Me	UH-Hi
	I/U002÷ I/U003÷	HIGH SPEED 1 HIGH SPEED 2	*	SPEED1,	4		OI 1- IVIE	OI I-I II
	1/U004 ≑	THUIT OF ELLO Z	-	Initial function setting of 4 speed is not able to b	some indoor unit is "HIGH e set with wireless remote of	SPEED".		
		INDICATION OFF						
		TYPE 1 TYPE 2			after running for 180 hours. after running for 600 hours.			
	door unit, press	TYPE 3			after running for 1000 hours			
AIR CON No.		TYPE 4			after running for 1000 hours	s, then the indoor ur	it will be stop	ped by
	go back to the indoor 04 3-POSITION			compulsion after 24 hours				
unit selection s (for example: I	ociocii				nction "04 ॐPOSITION te control function "14 ॐ		nalv	
(ioi example. i	70 000 a).	4POSITION STOP	0	You can select the louver	stop position in the four.	accordi	9.).	
	05 EXTERNAL INPUT	FREE STOP	1	The louver can stop at any	position.			
	00 2112 211 31	LEVEL INPUT	0					
	OO LOOMAN THE WARRANT	PULSE INPUT						
	O6 OFFRITON FERMISSON/FERMINITION	INVALID	10					
		VALID	_	Permission/prohibition cor	trol of operation will be vali	d.		
	* O7 IPMER6ENCY STOP							
		INVALID VALID	-	Milh the VDF	and to atom all to do on the	annantal		e conside income of
		METO			sed to stop all indoor units d from remote on-off termin			
				on stop styrial is inpute	aam romoto orr-on tellilli	a. On o , an induc	, anno are st	oppou mimeu
		OFFSET +3.0°C		To be seemed as 1 1	.000	to an about the state of		
		0H3ET+2.0%			+3.0 C increase in tempera +2.0 C increase in tempera			
	* <mark>08 ※ SP OFFSET</mark>	OFFSET +1.0%			+1.0 C increase in tempera			
		NO OFFSET	10					
		OFFSET +2.0%		To be reset producing +2	C increase in return air te	morati ire of indoor	unit	
		0FSET + 1.5%			6 C increase in return air te			
	* 09 RETURN AIR TEMP	OFFSET +1.0%	\perp	To be reset producing +1.	C increase in return air te	mperature of indoor	unit.	
		NO OFFSET OFFSET - 1.0%	0	To be recet and since 10	Cincrease in return air ter	annanati wa afiinalaan		
		OFFSET-1.5%			Cincrease in return air ter			
	- Lucius courrou	OFFSET -2.0%			C increase in return air ter			
	* 10 ※ FAN CONTROL	LOW FAN SPEED		When heating thermostat	s OFF, fan speed is low sp	and		
					s OFF, fan speed is low spi s OFF, fan speed is set spe			
		SET FAN SPEED		-				
		INTERNITTENCE Fan Off		When heating thermostat	s OFF, fan speed is operate s OFF, the fan is stonned	ed intermittently.		
		in the second	•	When the remote sensor is	working, "FAN OFF" is se			
				Do not set "FAN OFF" who	n the indoor unit's sensor i	s working.		
	* 11 FROST PREVENTION TEMP			Change of indoor heat eve	hanger temperature to star	frost prevention on	ntrol	
	THE THE SEVENT AND THE TENT	TEMP HIGH		Change of Indoor recal Co.	nanga tampatatare to star	i ilosi prova ilia i	ili Oi.	
		TEMP LOW	0					
	* 12 FROST PREVENTION CONTROL			Maddan anh	a anlik aasiaa			
	± I∑ Immunerment mushr	FAN CONTROL ON		Working only with the sing To control frost prevention	e split series. the indoor fan tap is raised	Í.		
		FAN CONTROL OFF			masor rail tup to raiset			
	* 13 DRAIN PUMP LINK	la.	10	Dania as san in a sa d	anline and do :			
		参り 参りAND※		Drain pump is run during o Drain pump is run during o				
		念○AND 沒AND註		Drain pump is run during o	ooling, dry, heating and far	ı.		
	A A LOS CAM DEMANDES	 Ø O AND ■	\perp	Drain pump is run during o	ooling, dry and fan.			
	* 14 \$\times FAN REMAINING	NO REMAINING		After cooling is stonged th	e fan does not perform exti	a operation		
		0.5 HOLR			e fan perform extra operati			
		1 HOLR		After cooling is stopped, the	e fan perform extra operati	on for an hour.		
	* 15 X FAN REMAINING	6 HOUR		After cooling is stopped, the	e fan perform extra operati	on for six hours.		
	T JO INTERNATION	NO REMAINING	0	After heating is stopped or	heating thermostat is OFF	the fan does not be	erform extra o	peration.
		Q5 HOLR		After heating is stopped or	heating thermostat is OFF	the fan perform extr	ra operation for	or half an hou
		2 HOUR 6 HOUR			heating thermostat is OFF heating thermostat is OFF			
	* 16 * FAN INTERMITTENCE	OTION		nua neaung is stopped of	ricading unerintustatus OFF	u e iai i periori i ext	a upetalion i	ioi six flours.
		NO REMAINING	0	Data base :	- beath at the second	T #	· t · · · · · · · · · · · · · · · · · ·	
		20minOFF SwinON		During heating is stopped with low fan speed after to	or heating thermostat is OF enty minutes' OFF	r, the tan perform in	ntermittent op	peration for fiv
					or heating thermostat is OF	F, the fan perform i	ntermittent op	eration for fiv
		Münime Flünime		with low fan speed after fiv				
	* 17 PRESSURE CONTROL	STANDARD	*					
		IOINNUMU	- A:					
		TYPE1	*	Connected "OA Proceein	g" type indoor unit, and is a	utomatically defined	I	

Note * The mark cannot use SRR series.

How to set function

Stop air-conditioner and press (SET) (MODE) buttons at the same time for over three seconds, and the "FUNCTION SET ▼" will be displayed.




- 2. Press (SET) button.
- Make sure which do you want to set, "☐ FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function)
- 4. Press ▲ or ▼ button. Selecct "■ FUNCTION ▼" (remote control function) or "I/U FUNCTION A" (indoor unit function).




5. Press O (SET) button.

- 6. [On the occasion of remote control function selection]
 - ① "DATA LOADING" (Indication with blinking) Display is changed to "01 ₺\\ ESP SET".
 - ② Press ▲ or ▼ button. "No. and function" are indicated by turns on the remote control function table, then you can select from them. (For example)

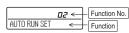

③ Press (SET) button. The current setting of selected function is indicated. (for example) "AUTO RUN ON" \leftarrow If "02 AUTO RUN SET" is selected

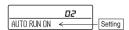

④ Press ▲ or ▼ button. Select the setting.




⑤ Press ◯ (SET)

"SET COMPLETE" will be indicated, and the setting will be completed.

Then after "No. and function" indication returns, Set as the same procedure if you want to set continuously ,and if to finish, go to 7.



7. Press ON/OFF button. Setting is finished.

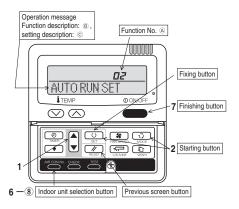

[On the occasion of indoor unit function selection]

① "DATA LOADING" (Blinking for 2 to 23 seconds to read the data) Indication is changed to "02 FAN SPEED SET". Go to ②.


[Note]

(1) If plural indoor units are connected to a remote control, the indication is "I/U 000" (blinking) ← The lowest number of the indoor unit connected is indicated.




- (2) Press ▲ or ▼ button. Select the number of the indoor unit you are to set If you select "ALL UNIT ▼", you can set the same setting with
- (3) Press (SET) button.
- ② Press ▲ or ▼ button.

"No. and function" are indicated by turns on the indoor unit function table, then you can select from them. (For example)

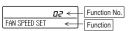

③ Press O (SET) button.
The current setting of selected function is indicated. (For example) "STANDARD" ← If "02 FAN SPEED SET" is

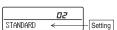

- ④ Press ▲ or ▼ button. Select the setting
- S Press (SET) button.
 "SET COMPLETE" will be indicated, and the setting will be completed.

Then after "No. and function" indication returns, set as the same procedure if you want to set continuously , and if to finish, go to 7.



When plural indoor units are connected to a remote control, press the AIR CON No. button, which allows you to go back to the indoor unit selection screen. (example "I/U 000 \(\bigsize \)")

- It is possible to finish by pressing ON/OFF button on the way, but unfinished change of setting is
- During setting, if you press (//)(RESET) button, you return to the previous screen.
- Setting is memorized in the control and it is saved independently of power failure.

[How to check the current setting]

When you select from "No. and funcion" and press set button by the previous operation, the "Setting" displayed first is the current setting.

(But, if you select "ALL UNIT ▼ ", the setting of the lowest number indoor unit is displayed.)

(2) Interface kit (SC-BIKN2-E)

RKZ012A099

Accessories included in package

Be sure to check all the accessories included in package.

No.	Part name	Quantity
1	Indoor unit's connection cable (cable length: 1.8m)	1
2	Wood screws (for mounting the interface: φ4x 25)	2
3	Tapping screws (for the cable clump and the interface mounting bracket)	3
4	Interface mounting bracket	1
⑤	Cable clamp (for the indoor unit's connection cable)	1
6	CnT terminal connection cable (total cable length: 0.5m)	1

Safety precautions

Before use, please read these Safety precautions thoroughly before installation.

• All the cautionary items mentioned below are important safety related items to be taken into consideration, so be sure to observe them at all times.

⚠Warning Incorrect installation could lead to serious consequences such as death, major injury or environmental destruction.

Symbols used in these precautions



Always go along these instruction.

After completed installation, carry out trial operation to confirm no anomaly, and ask the user to keep this installation manual in a good place for future reference.

$\dot{\mathbb{N}}$

Warnings



●Installation must be carried out by a qualified installer.

If you install it by yourself, it may cause an electric shock, fire and personal injury, as a result of a system malfunction.

● Install it in full accordance with the installation manual.

Incorrect installation may cause an electric shock, fire and personal injury.

Electrical work must be carried out by a qualified electrician in accordance with the technical standard for electrical equipment, the
indoor wiring standard and this installation manual.

Incorrect installation may cause an electric shock, fire and personal injury.

● Use the specific cables for wiring. And connect all the cables to terminals or connectors securely and clamp them with cable clamps in order for external forces not to be transmitted to the terminals directly.


Incomplete connection may cause malfunction, and lead to heat generation and fire.

• Use the original accessories and specified components for installation.


If the parts other than those prescribed by us are used, it may cause an electric shock, fire and sersonal injury.

Connecting the indoor unit's connection cable to the interface

- ①Remove the upper case of the interface.
 - Remove 2 screws from the interface casing before removal of upper casing.
- ②Connect the indoor unit's connection cable to the interface.
 - Connect the connector of the indoor unit connection cable to the connector on the interface's circuit board.
- ③Fix the indoor unit's connection cable with the cable clamp.
 - Cable can be brought in from the top or from the back.
 - Cut out the punch-outs for the connection cables running into the casing with cutter.
- (4) Connect the indoor unit's connection cable to the indoor control PCB.
 - Connect the indoor unit's connection cable to the indoor control PCB securely.
 - Clamp the connection cable to the indoor control box securely with the cable clamp provided as an accessory.
 - Regarding the cable connection to the indoor unit, refer to the installation manual for indoor unit.

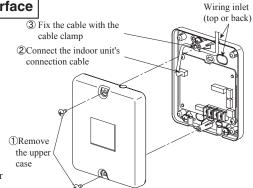

Name of each part of the interface

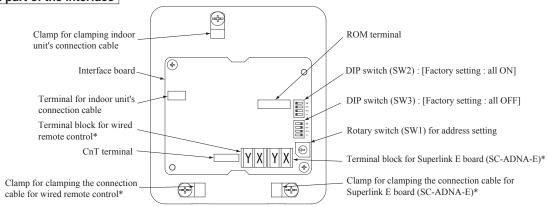

*Either the connection cables of Superlink E board (SC-ADNA-E) or of wired remote control is connectable.

			,		
Switch	Setting	Function	Switch	Setting	Function
SW2-1	ON**	CnT level input	SW2-3	ON**	External input (CnT input)
SW2-1	OFF	CnT pulse input	3 W 2-3	OFF	Operation permission/prohibition (CnT input)
SW2-2 ON**		Wired remote control : Enable	SW2-4	ON**	Annual cooling : Enable***
3 W 2-2	OFF	Wired remote control : Disable	3 W Z-4	OFF	Annual cooling : Disable***

^{**} Factory setting

*** Indoor fan control at low outdoor air temperature in cooling


Wiring inlet

Installation of the interface

- Install the interface within the range of the connection cable length (approximately 1.3m) from the indoor unit.
- Be sure not to extend the connection cable on site. If the connection cable is extended, malfunction may occur.
- Fix the interface on the wall, pillar or the like.
- Don't install the interface and wired remote control at the following places.
 - OPlaces exposed to direct sunlight
 - OPlaces near heating devices
 - OHigh humidity places
 - OSurfaces where are enough hot or cold to generate condensation
 - OPlaces exposed to oil mist or steam directly
 - OUneven surface


Mounting the interface directly on a wall

- ①Mount the lower casing of the interface on a flat surface with wood screws provided as standard accessory.
- 2 Mount the upper casing.

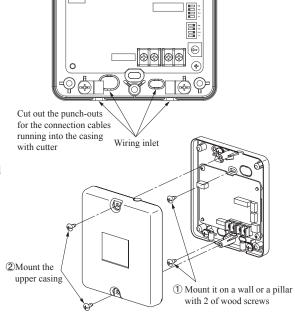


Recessing the interface in the wall

- ①Recess the electrical box (procured locally) and connection cables in the wall.
- ②Mount the lower casing of the interface to the electrical box with M4 screws (procured locally).
- 3 Mount the upper casing.

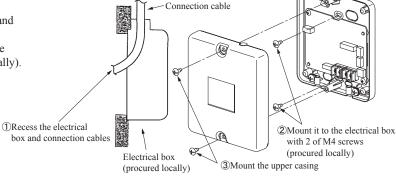

Mounting the interface with the mounting bracket

- ①Mount the upper casing.
- ②Mount the mounting bracket to the interface with tapping screws provided as standard accessory.
- 3Mount the mounting bracket on wall or the like with wood screws provided as standard accessory.

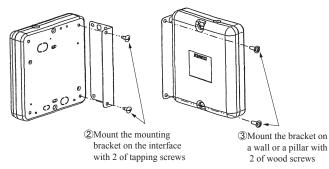

Installation check items

- ☐ Are the connection cables connected securely to the terminal blocks and connectors?
- ☐ Are the thickness and length of the connection cables conformed with the standard?

Functions of CnT connector

Function

Output 1 Operation output

Output 4 Malfunction output

Output 3 Compressor operation output

Output 2 | Heating output

Input/ Output

It is available to operate the air-conditioner and to monitor the operation status with the external control unit (remote display) by sending the input/output signal through CnT connector on the indoor control PCB.

During heating operation

During anomalous stop

During compressor running

- ①Connect a external remote control unit (procured locally) to CnT terminal.
- ②In case of the pulse input, switch OFF the DIP switch SW2-1 on the interface PCB.
- 3When setting operation permission/prohibition mode, switch OFF the DIP switch SW2-3 on the interface PCB.

Output signal

Relay

XR₁

XR₂

XR3

XR₄


ON/OFF

ON

ON

ON

ON

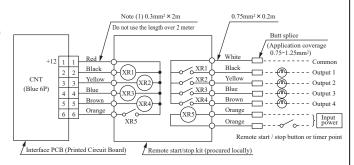


	۱ '
Content	
During air-conditioner operation	1 '
During heating operation	1

- ■XR₁₋₄ are for the DC 12V relay ■XR5 is a DC 12/24V or AC 220-240V relay
 - ●CnT connector (local) maker, model

Connector	Molex	5264-06
Terminals	Molex	5263T

Input/ Output		SW2-1 Setting				SW2-3	Air-	Operation by remote control	
	Function			g:	Input signal		Combont		conditioner
Output				Setting	Level/Pulse	XR5	Content	Conditioner	Temote control
			N* Level input	ON*	Level	OFF→ON		ON	
	External control input	External ontrol				ON→OFF		OFF	Allowed
				OFF		OFF→ON	Operation permission	OFF	
						ON→OFF	Operation prohibition	OFF	Not allowed
				ON*	Pulse	OFF→ON	External input	OFF→ON	
			OIV.	Pulse	OFF-ON	1	ON→OFF	Allowed	
			1 alse input	OFF	Level	$OFF {\rightarrow} ON$	Operation permission	ON	
				OFF	Level	$\text{ON} {\rightarrow} \text{OFF}$	Operation prohibition	OFF	Not allowed
	* Factory setting								

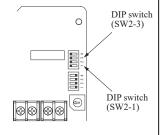

In case of the remote control (RC-EX3 or later model), the external outputs (1-4) and the external input can be changed using the function setting of remote control. For the setting method, refer to the installation manual. Also refer to the technical manual to know how it is adapted to the function setting for the external outputs and input, at the indoor unit side.


Connection of Superlink E board

Regarding the connection of Superlink E board, refer to the installation manual of Superlink E board.


For electrical work, power source for all of units in the Superlink system must be turned OFF.

①Switch ON the DIP switch SW2-2 (Factory setting: ON) on the interface PCB.

Caution: Wireless remote control attached to the indoor unit can be used in parallel, after connecting the wired remote control. However, some of functions other than the basic functions such as RUN/STOP, temperature setting, etc. may not work properly and may have a mismatch between the display and the actual behavior.

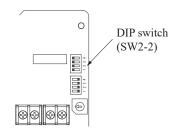

②Wiring connection between the interface and the Superlink E board.

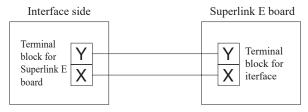

Shielded wire 1 2 Vinyl cabtyre round cord Vinyl cabtyre round cable Vinyl insulated wire vinyl sheathed cable for control

Names of recommended signal wires

Within 200m 0.5mm² \times 2 cores Within 300m 0.75mm² × 2 cores

Within 400m 1.25mm² × 2 cores

Within $600m \quad 2.0mm^2 \times 2 \text{ cores}$

No.

3Clamp the connection cables with cable clamps.

DIP suitch

(SW2-2)

0

Connection of wired remote control

Regarding the connection of wired remote control, refer to the installation manual of wired remote control.

①Switch ON the DIP switch SW2-2 (Factory setting: ON) on the interface PCB.

Caution: Wireless remote control attached to the indoor unit can be used in parallel, after connecting the wired remote control. However, some of functions other than the basic functions such as RUN/STOP, temperature setting, etc. may not work properly and may have a mismatch between the display and the actual behavior.

②Wiring connection between the interface and the wired remote control.

Installation and wiring of wired remote control

- (A) Install the wired remote control with reference to the attached installation manual of wired remote control.
- $\bigcirc 0.3$ mm² \times 2 cores cable should be used for the wiring of wired remote control.
- © Maximum length of wiring is 600m.

If the length of wiring exceeds 100m, change the size of cable as mentioned below.

100m-200m: 0.5mm² × 2 cores, 300m or less: 0.75mm² × 2 cores, 400m or less: 1.25mm² × 2 cores, 600m or less: 2.0mm² × 2 cores However, cable size connecting to the terminal of wired remote control should not exceed 0.5mm². Accordingly if the size of connection cable exceeds 0.5mm², be sure to downsize it to 0.5mm² at the nearest section of the wired remote control and waterproof treatment should be done at the connecting section in order to avoid contact failure.

- Don't use the multi-core cable to avoid malfunction.
- (E) Keep the wiring of wired remote control away from grounding (Don't touch it to any metal frame of building, etc.).
- © Connect the connection cables to the terminal blocks of the wired remote control and the interface securely (No polarity).
- (3) Clamp the connection cables with cable clamps.

Control of multiple units by a single wired remote control

Multiple units (up to 16) can be controlled by a single wired remote control. In this case, all units connected with a single wired remote control will operate under the same mode and same setting temperature.

- ①Connect all the interface with 2 cores cables of wired remote control line.
- ②Set the address of indoor unit for remote control communication from "0" to "F" with the rotary switch SW1 on the interface PCB.
- 3 After turning the power ON, the address of indoor unit can be displayed by pressing AIR CON No. button on the wired remote control. Make sure all indoor units connected are displayed in order by pressing or
 button.

Master/Slave setting wired when 2 of wired remote control are used

Maximum two wired remote control can be connected to one indoor unit (or one group of indoor units)

①Set the DIP switch SW1 on the wired remote control to "Slave" for the slave remote control. (Factory setting: Master)

O Caution: Remote control sensor of the slave remote control is invalid.


• When using the wireless remote control in parallel with the wired remote control; Since temperature setting range of wired remote control is different from that of wireless remote control, please adjust the setting range of wired remote control to be the same setting range of wireless remote control by following procedure. (The set temperature may not be displayed correctly on the wireless remote control, unless change of temperature setting range is done.) Changing procedure of temperature setting range is as follows.

How to set upper and lower limit of temperature setting range

- 1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for 3 seconds or more.
 - The indication changes to "FUNCTION SET▼"
- Press wbutton once, and change to the "TEMP RANGE ▲" indication.
- Press (SET) button, and enter the temperature range setting mode.
- Confirm that the "Upper limit ▼" is shown on the display.
- Press (SET)button to fix.
- ①Indication: " $\textcircled{6} \lor \land SET UP" \rightarrow "UPPER 28^{\circ}C \lor \land "$
 - ②Select the upper limit value 30° C with temperature setting button \square ."UPPER 30° C \vee " (blinking)
 - ③Press (SET) button to fix. "UPPER 30°C" (Displayed for two seconds) After the fixed upper limit value displayed for two seconds, the indication will returm to"UPPER LIMIT ▼
- 7. Press **\substitute** button once, "LOWER LIMIT **△**" is selected, press **○** (SET) button to fix. ①Indication: " $\bigcirc \lor \land SETUP" \rightarrow "LOWER\ 20°C \lor \land"$
 - ②Select the lower limit value 18°C with temperature setting button ☑."LOWER18°C∧"
 - ③Press (SET) button to fix. "LOWER 18°C" (Displayed for two seconds) After the fixed lower limit value displayed for two seconds, the indication will returm to"LOWER LIMIT
- 8. Press ON/OFF button to finish.

Temperature setting range

Mode	Temperature setting range
Cooling, Heating, Dry, Auto	18-30°C

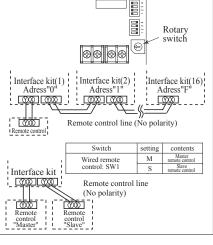


• It is possible to quit in the middle by pressing ON/OFF button, but the

Previous button

IIIIII

(RESET) button, it returns to the previous screen.

TEMP RANGE

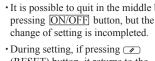

(3) Superlink E board (SC-ADNA-E)

PJZ012D029K

- Read and understand the instructions completely before starting installation.
- Refer to the instructions for both indoor and outdoor units.

Safety precautions

- Carefully read "Safety precautions" first. Follow the instructions for installation.
- Precautions are grouped into "Warning 🗥 and "Caution 🗥". The "Warning 🗥 group includes items that may lead to serious injury or death if not observed. The items included
- in the "Caution A" group also may lead to serious results under certain conditions. Both groups are crucial for safety installation. Read and understand them carefully.

 After installation, conduct the test operation of the device to check for any abnormalities. Describe how to operate the device to the customer following the installation instruction manual. Instruct the customer to keep this installation instruction for future reference.

∕.\Warning

- This device should be installed by the dealer where you purchase the device or a licensed professional shop. If the device is incorrectly installed by the
- customer, it may result in electric shock or fire.

 Install the device carefully following the installation instruction. If the device is incorrectly installed, it may result in electric shock or fire.
- Use the accessory parts and specified parts for installation. If any parts that do not match the specifications are used, it may result in electric shock or fire.
- A person with the electrical service certification should conduct the service based on the "Technical standards for electrical facilities", "Electrical Wiring Code", and the installation instruction. If the work is done incorrectly, it may result in electric shock or fire
- Wiring should be securely connected using the specified types of wire. No external force on the wire should be applied to any terminals. If a secure connection is not achieved, it may result in electric shock or fire.

1 Application

Indoor-to-outdoor three core communication specification type 3 (since

Accessories

SL E board	Metal box	Metal cover	Screw for ground
	[0]	· ·	M4×8 2 pieces
Pan head screws	Locking supports	Binding band	Grommet
ø4×8 2 pieces	To secure the print board and the metal box Made of nylon 4 pieces	68	

3 Function

Allowing the central control SL1N-E, SL2NA-E, and SL4-AE3/BE3 to control and monitor the commercial air-conditioner unit.

4 Control switching

Settings can be changed by the DIP switch SW3 on the SL E board as in the following.

Switch	Symbol	Switch	Remarks
		ON	Master
		OFF (default)	Slave
		ON	Fixed previous protocol
	2	OFF (default)	Automatic adjustment of Superlink protocol
SW3	3	ON	Indicates the forced operation stop when abnormality has occurred.
	3	OFF (default)	Indicates the status of running/stop as it is, when abnormality has occurred.
	4	ON	The hundredth address activated "1"
		OFF (default)	The hundredth address activated "0"

∴Caution


- Provide ground connection.
- The ground line should never be connected to the gas supply piping, the water supply piping, the lightning conductor rod, nor the telephone ground. If the grounding is improper, it may result in electric shock.
- Do not install the device in the following locations.
 - 1.Where there is mist/spray of oil or steam such as kitchens. 2.Where there is corrosive gases such as sulfurous acid gas.

 - 3. Where there is a device generating electromagnetic waves These may interfere with the control system resulting in the device becoming uncontrollable.
 - 4.Where flammable volatile materials such as paint thinner and gasoline may exist or where they are handled. This may cause a fire.

5 Connection outline

Note for setting the address

- Set the address between 00 and 47 for the previous Superlink connection and between 000 and 127 for the new Superlink connection. (*1)
- Do not set the address overlapping with those of the other devices in the network. (The default is 000)

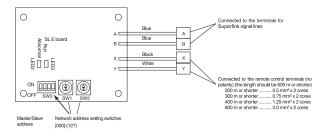


(*1) Whether the actual link is either the new Superlink or the previous Superlink depends on the models of the connected outdoor and indoor units. Consult the agent or the dealer.

Signal line specification

Communication method	Previous Superlink	New Superlink
Line type	MVVS	MVVS
Line diameter	0.75 - 1.25mm ²	0.75/1.25mm ²
Signal line (total length)	up to 1000m	up to 1500/1000m (*2)
Signal line (maximum length)	up to 1000m	up to 1000m

- (*2) Up to 1500m for 0.75mm², and up to 1000m for 1.25mm². Do not use 2.0mm2. It may cause an error.
- (*3) Connect grounding on both ends of the shielding wire. For the grounding method, refer to the section "6 Installation".


- Set the Superlink network address with SW1 (tens place), SW2 (ones place), and SW3 (hundreds place).
- (2) Set the SL E board SW3-1 to be ON (Master) when using this without any remote control (no wired remote controller nor wireless remote control).
- (3) Set up the plural master/slave device using the DIP switches on the indoor unit board.
- (4) Set up the remote control master/slave device using the slide switch on the remote control board.
- (5) Set up "0" to "F" using the address rotary switch on the indoor unit board when controlling the indoor unit with the multiple remote control.

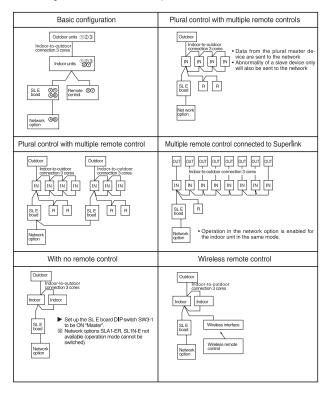

6 Installation

- 1. When using the metal box (mounted on the indoor unit / mounted on the back of the remote control):
- (1) Mount the SL E board in the metal box using the locking supports.
- (2) Wiring should go through the provided grommet since then through the wiring to the hole on the Metal box.


Secure the grommet after inserting the grommet into the Metal box as shown in below figure, then tie the wiring at the outlet of the unit using a binding band.

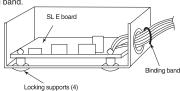


▲ When installed outside the indoor unit, put the metal cover on.




▲ When installed on the back of the remote control, mount it directly on the remote control bottom case.

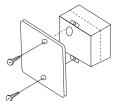

Connect grounding. Connect grounding for the power line to Ground ①, and grounding for the signal line to Ground ② or to the Ground on the indoor unit control box.

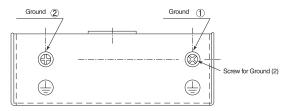

- 2. When connecting to the indoor unit control box (ceiling-concealed type and FDT type only):
 - (1) Mount the SL E board in the control box using the locking supports.
 - (2) Remove 6 bands from the box and put the wiring through the bands to be secured.

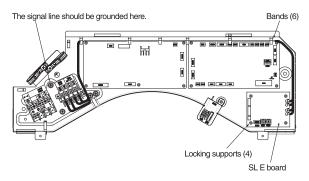

Electrical shock hazard make sure to turn the power off for servicing. Be cautious so that no abnormal force should be applied to the wiring. Do not let the SL E board hung by the wiring. Do not damage the board with a screwdriver.

The board is sensitive to static electricity. Release the static electricity of your body before servicing.

(You can do this by touching the control board which is grounded).

Location of installation

Install the device at the location where there are no electromagnetic waves nor where there is water and dust. The specified temperature range of the device is 0 to 40° C. Install the device at the location where the ambient temperature stays within the range. If it exceeds the specification, make sure to provide solution such as installing a cooling fan. When used outside of the range, it may cause abnormal operation.

7 Indicator display

Check the LED 3 (green) and LED 2 (red) on the SL E board for flashing.

SL E boa	ard LEDs		Display on the
Red	Green	Inspection mode	integrated network control device
Off	Flashing	Normal communication	
Off	Off	Disconnection in the remote control communication line (X or Y) Short-circuit in the remote control communication line (between X and Y) Faulty indoor unit remote control power Faulty remote control communication circuit Faulty CPU on SL E board	No corresponding unit number
One flash	Flashing	Disconnection in the Superlink signal line (A or B) Short-circuit in the Superlink signal line (between A and B) Faulty Superlink signal circuit	
Two flashes	Flashing	Faulty address setting for the SL E board (Set up the address for previous SL E board : more than 48 new SL E board : more than 128)	
Three flashes	Flashing	SL E board parent not set up when used without a remote control Faulty remote control communication circuit	E1
Four flashes	Flashing	Address overlapping for the SL E board and the Superlink network connected indoor unit	E2
Off	Flashing	Number of connected devices exceeds the specification for the multiple indoor unit control	E10

(4) Bottom air inlet kit (UT-BAT2EF)

This manual contains installation points for BOTTOM AIR INLET KIT manufactured by MHI. Carry out the work following the instructions below.

Keep this manual properly with USER'S MANUAL provided with the indoor unit.

CAUTION

- After unpacking, carry out this work on the ground.
- Do not carry out the work during operation, or there is a danger of being entangled in the rotating parts and getting injured.
- Be sure to cut off the power and stop the unit before maintenance.

(a) Applicable model of unit and type of BOTTOM AIR INLET KIT

BOTTOM AIR INLET KIT		UT-BAT1EF	UT-BAT2EF	UT-BAT3EF
Model	for FDUT	15,22,28,36	45,56	71
iviodei	for SRR	25,35	50,60	


(b) Parts list of BOTTOM AIR INLET KIT

Rear panel	Fan guard	Parts set (Tapping screw)
1 pc.	1 pc.	4mm(diameter)×12mm(length) UT-BAT1EF 12 pcs. UT-BAT2EF 12 pcs. UT-BAT3EF 14 pcs.

(c) Installation Points

(Figure shows the state that the unit is placed on a floor. Top and bottom are inverted after installing the unit.)


- (i) Place the unit as shown below.
- (ii) Remove the bottom plate and duct flange plate of rear from the unit. Keep the removed tapping screws to reuse later.

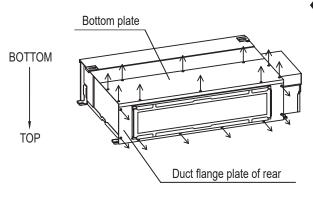

◆The number of tapping screws to be removed

	Model	Bottom	Rear
FDUT	15,22,28,36	10 pcs.	8 pcs.
	45,56	10 pcs.	9 pcs.
	71	12 pcs.	8 pcs.
SRR	25,35	10 pcs.	8 pcs.
	50,60	10 pcs.	9 pcs.

(iii) Install rear panel by using removed tapping screws in process(ii). Install fan guard by using tapping screws in parts set.

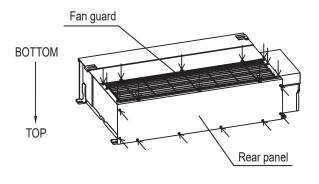

◆The number of tapping screws to be tightened

Model		Fan guard	Rear panel	
	15,22,28,36	12 pcs.	8 pcs.	
FDUT	45,56	12 pcs.	9 pcs.	
	71	14 pcs.	8 pcs.	
SRR	25,35	12 pcs.	8 pcs.	
OIXIX	50,60	12 pcs.	9 pcs.	

(5) Remote sensor kit (SC-THB-E3)

Sensor for return air temperature detection is located in the air inlet of the indoor unit.

Use the remote sensor kit SC-THB-E3, and install it on the suitable wall so the temperature of the room can be accurately detected.

This remote sensor kit is to be used as an alternative to the pre-installed sensor of the indoor unit.

(a) Accessory parts

No.	Part name	Q'ty	No.	Part name	Q'ty
1	Sensor box	1	4	Band	1
2	Cable (8m)	1	⑤	Screw (4×16)	2
3	Tape (Double -stick)	1			


*Installation manual in the SC-THB-E3 is not it for SRR_ZM-S.

(b) Selection of installation position


- •The thermistor for detecting room temperature is located inside the remote sensor box.
- •Do not install the remote sensor in places where.
- Average room temperature can not be detected.
- A heat source is located nearby.
- The wall temperature is different from average room temperature.
- Affected by the outdoor air when opening / closing the door, etc.
- The discharge air from indoor unit blows directly.
- Covered by curtains or other obstacles.
- Exposed to the sun.
- Exposed to water, humidity or dew.
- •Mount the remote sensor vertically on the wall surface, etc.
- •Run the sensor cable in a place where the power cable or electrical noise will not cause any abnormal operation.

(c) Installation procedure


- (i) Insert the tip of slotted screwdriver to the gap between the cover and base of the sensor box (①), and twist it to disassemble.
- (ii) Fix the base to the wall with screws (5).
- (iii) Connect the cable (2) to the terminal block in the base. (No polarity)

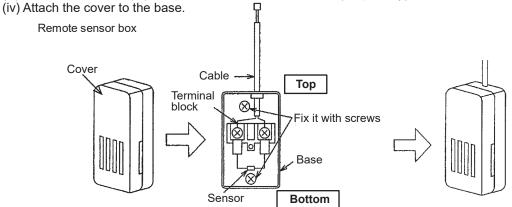

(v) Remove the control lid of the indoor unit. Take off CnG connector from PCB of the indoor unit .

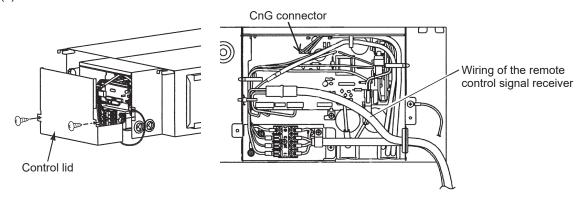


(vi) Cut wiring from 1 & 2 pins of CnG connector. (wiring length: about 100 mm from the connector) If the pre-installed return air temperature sensor ASSY is not removed, the end of the sensor wiring should prevent a short circuit by insulating tape etc.

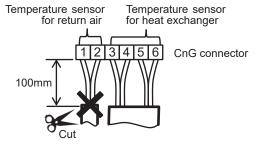

- (vii) Insert the cable from remote sensor box to the control box of the indoor unit through the grommet of the remote control signal receiver side.
- (viii) Adjust the length of the cable and cut it off. (Connector cable is not need.)
- (ix) Connect the cable from remote sensor box and the cut wiring (procedure (vi)) of CnG connector. (No polarity)

Be sure to connect the wirings by solder separately. Then, wirings should prevent a short circuit separately by insulating tapes etc. In case of faulty wiring connection, it can cause electrical shock and fire.

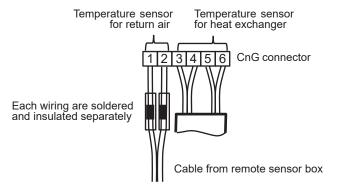

- (x) Put CnG connector back on the indoor unit PCB.
- (xi) Attach the control lid of the indoor unit.

11. TECHNICAL INFORMATION

Model SRR50ZS-W

Information to identify the mod	al(a) to which the info	rmation relates to:	I If function includes bacting, Indicate	the heating accept the
Information to identify the mod Indoor unit model name	SRR50ZS		If function includes heating: Indicate information relates to. Indicated value	
Outdoor unit model name	SRC50ZS		- 1	t least the heating season 'Average'.
- I I I I I I I I I I I I I I I I I I I	15.155520			Secon / Wordyo
Function(indicate if present)			Average(mandatory)	Yes
cooling	Yes		Warmer(if designated)	Yes
heating	Yes		Colder(if designated)	No
	•			•
Item	symbol	value unit	Item	symbol value class
Design load	D		Seasonal efficiency and energy efficiency	
cooling	Pdesignc	5.00 kW	cooling	SEER 6.50 A++
heating / Average	Pdesignh	4.50 kW	heating / Average	SCOP/A 4.40 A+
heating / Warmer heating / Colder	Pdesignh Pdesignh	6.00 kW - kW	heating / Warmer heating / Colder	SCOP/W 5.40 A+++ SCOP/C
rieating / Colder	Fuesigiiii	-	rieating / Colder	unit
Declared capacity at outdoor t	emperature Tdesignh		Back up heating capacity at outdoor	
heating / Average (-10°C)	Pdh	4.50 kW	heating / Average (-10°C)	elbu - kW
heating / Warmer (2°C)	Pdh	6.00 kW	heating / Warmer (2°C)	elbu - kW
heating / Colder (-22°C)	Pdh	- kW	heating / Colder (-22°C)	elbu - kW
		•		•
Declared capacity for cooling,	at indoor temperature	27(19)°C and	Declared energy efficiency ratio, at	indoor temperature 27(19)°C and
outdoor temperature Tj			outdoor temperature Tj	
Tj=35°C	Pdc	5.00 kW	Tj=35°C	EERd 3.52 -
Tj=30°C	Pdc	3.68 kW	Tj=30°C	EERd 5.37 -
Tj=25°C	Pdc	2.37 kW	Tj=25°C	EERd 7.61 -
Tj=20°C	Pdc	1.49 kW	Tj=20°C	EERd 11.70 -
Declared capacity for heating	Average season at i	indoor	Declared coefficient of performance	e / Average season at indoor
temperature 20°C and outdoor			temperature 20°C and outdoor temp	
Tj=-7°C	Pdh	3.98 kW	Tj=-7°C	COPd 2.90 -
Tj=2°C	Pdh	2.42 kW	Tj=2°C	COPd 4.39 -
Tj=7°C	Pdh	1.56 kW	Tj=7°C	COPd 5.50 -
Tj=12°C	Pdh	1.25 kW	Tj=12°C	COPd 6.90 -
Tj=bivalent temperature	Pdh	4.50 kW	Tj=bivalent temperature	COPd 2.20 -
Tj=operating limit	Pdh	4.50 kW	Tj=operating limit	COPd 2.20 -
Declared capacity for heating		ndoor	Declared coefficient of performance	
temperature 20°C and outdoor		0.00	temperature 20°C and outdoor temp	
Tj=2°C	Pdh	6.00 kW	Tj=2°C	COPd 2.59 -
Tj=7°C Tj=12°C	Pdh Pdh	3.86 kW 1.71 kW	Tj=7°C Tj=12°C	COPd 4.76 - COPd 6.90 -
Tj=12 C Tj=bivalent temperature	Pdh	6.00 kW	Tj=12 C	COPd 6.90 -
Tj=blvalent temperature Tj=operating limit	Pdh	6.00 kW	Tj=blvalent temperature Tj=operating limit	COPd 2.59 -
ry operating in the	1 dii	0.00	T) operating in in	2.00
Declared capacity for heating	Colder season, at inc	door	Declared coefficient of performance	/ Colder season, at indoor
temperature 20°C and outdoor	temperature Tj		temperature 20°C and outdoor temp	perature Tj
Tj=-7°C	Pdh	- kW	Tj=-7°C	COPd
Tj=2°C	Pdh	- kW	Tj=2°C	COPd
Tj=7°C	Pdh	- kW	Tj=7°C	COPd
Tj=12°C	Pdh	- kW	Tj=12°C	COPd
Tj=bivalent temperature	Pdh	- kW	Tj=bivalent temperature	COPd
Tj=operating limit	Pdh	- kW	Tj=operating limit Ti=-15°C	COPd
Tj=-15℃	Pdh	- kW	1j=-15 C	COPd
Bivalent temperature			Operating limit temperature	
heating / Average	Tbiv	-10 °C	heating / Average	Tol -10 ℃
heating / Warmer	Tbiv	2 ℃	heating / Warmer	Tol 2 °C
heating / Colder	Tbiv	- °C	heating / Colder	Tol - °C
Cycling interval capacity	D	11.3.47	Cycling interval efficiency	EEDaw .
for cooling	Pcycc	- kW	for cooling	EERcyc
for heating	Pcych	- kW	for heating	COPcyc
Degradation coefficient			Degradation coefficient	
cooling	Cdc	0.25 -	heating	Cdh 0.25 -
	•		-	
Electric power input in power r			Annual electricity consumption	
off mode	Poff	6 W	cooling	Qce 270 kWh/a
standby mode	Psb	6 W	heating / Average	Qhe 1431 kWh/a
thermostat-off mode	Pto(cooling)	23 W	heating / Warmer	Qhe 1557 kWh/a
crankcase heater mode	Pto(heating)	20 W	heating / colder	Qhe - kWh/a
crankcase neater mode	Pck	0 W		
Capacity control(indicate one	of three options)		Other items	
Tarasin, seria original data one o			Sound power level(indoor)	Lwa 59 dB(A)
1			Sound power level(outdoor)	Lwa 61 dB(A)
fixed	No		Global warming potential	GWP 675 kgCO2eq
staged	No		Rated air flow(indoor)	- 810 m ³ /h
variable	Yes		Rated air flow(outdoor)	- 2340 m³/h
Contact details for obtaining			or of its authorised representative.	
more information	(EU)MHIAE SERVICES		MA American Method - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 -	000 4400 DW A
			CM Amsterdam, Netherlands. P.O.Box 233	93 TIUU DW Amsterdam, Netherlands
	(UK)Mitsubishi Heavy 5 The Square, Stock		bring Europe, Lta liddlesex, UB11 1ET,United Kingdom	
	J The Square, Oloce	, I aik, Oxbilage, IV	aa.eesa, ob 11 121,0111tod Kingdofff	DWA0007000 A

Model SRR60ZS-W

Model SRR60ZS-W				
Information to identify the mode		ation relates to:	If function includes heating: Indicat	
Indoor unit model name Outdoor unit model name	SRR60ZS-W SRC60ZSX-V	N3	information relates to. Indicated va	at least the heating season 'Average'
Cutador ariit moder name	OROUZOX-V	10	I liceating season at a time. Include a	at least the fleating season Average
Function(indicate if present)			Average(mandatory)	Yes
cooling	Yes		Warmer(if designated)	Yes
heating	Yes		Colder(if designated)	No
Itom	symbol val	ue unit	Item	symbol value class
Item Design load	Symbol val	ue unit	Seasonal efficiency and energy eff	
cooling	Pdesignc	5.60 kW	cooling	SEER 6.20 A++
heating / Average	Pdesignh	5.20 kW	heating / Average	SCOP/A 4.30 A+
heating / Warmer		6.80 kW	heating / Warmer	SCOP/W 5.30 A+++
heating / Colder	Pdesignh	- kW	heating / Colder	SCOP/C
Declared capacity at outdoor to	mporaturo Tdosianh		Back up heating capacity at outdoo	unit
heating / Average (-10°C)		5.20 kW	heating / Average (-10°C)	elbu - kW
heating / Warmer (2°C)		6.80 kW	heating / Warmer (2°C)	elbu - kW
heating / Colder (-22°C)	Pdh	- kW	heating / Colder (-22°C)	elbu - kW
			7 5	
Declared capacity for cooling, a	at indoor temperature 27	′(19)℃ and	Declared energy efficiency ratio, at	t indoor temperature 27(19)°C and
outdoor temperature Tj Tj=35°C	Pdc	5.60 kW	outdoor temperature Tj Tj=35°C	EERd 3.29 -
Tj=30°C		4.12 kW	Tj=30°C	EERd 4.93 -
Tj=25℃		2.65 kW	Tj=25°C	EERd 7.40 -
Tj=20°C		1.47 kW	Tj=20°C	EERd 10.80 -
	<u> </u>	•		
Declared capacity for heating /		oor	Declared coefficient of performance	
temperature 20°C and outdoor Tj=-7°C		4.60 kW	temperature 20°C and outdoor tem	nperature Tj COPd 2.80 -
Tj=2°C	<u> </u>	2.80 kW	Ti=2°C	COPd 2.80 - COPd 4.28 -
Tj=7°C	<u> </u>	1.80 kW	Tj=7°C	COPd 5.48 -
Tj=12°C	<u> </u>	1.20 kW	Tj=12°C	COPd 6.37 -
Tj=bivalent temperature	Pdh	5.20 kW	Tj=bivalent temperature	COPd 2.15 -
Tj=operating limit	Pdh !	5.20 kW	Tj=operating limit	COPd 2.15 -
			15	
Declared capacity for heating /		oor	Declared coefficient of performance	
temperature 20°C and outdoor Tj=2°C		6.80 kW	temperature 20°C and outdoor tem	COPd 2.55 -
Tj=7°C		4.37 kW	Tj=7°C	COPd 4.60 -
Tj=12℃		1.94 kW	Tj=12°C	COPd 6.86 -
Tj=bivalent temperature	Pdh	6.80 kW	Tj=bivalent temperature	COPd 2.55 -
Tj=operating limit	Pdh	6.80 kW	Tj=operating limit	COPd 2.55 -
			1 =	
Declared capacity for heating /		r	Declared coefficient of performance	
temperature 20°C and outdoor Tj=-7°C	Pdh	- kW	temperature 20°C and outdoor tem	COPd
Tj=2℃	Pdh	- kW	Tj=2°C	COPd
Tj=7°C	Pdh	- kW	Tj=7°C	COPd
Tj=12℃	Pdh	- kW	Tj=12°C	COPd
Tj=bivalent temperature	Pdh	- kW	Tj=bivalent temperature	COPd
Tj=operating limit	Pdh	- kW	Tj=operating limit	COPd
Tj=-15℃	Pdh	- kW	Tj=-15°C	COPd
Bivalent temperature			Operating limit temperature	
heating / Average	Tbiv	-10 ℃	heating / Average	Tol -10 °C
heating / Warmer	Tbiv	2 °C	heating / Warmer	Tol 2 °C
heating / Colder	Tbiv	- °C	heating / Colder	Tol - °C
Cycling interval capacity	Daves	IL/A/	Cycling interval efficiency	EERoya
for cooling for heating	Pcycc Pcych	- kW - kW	for cooling for heating	EERcyc COPcyc
ioi nealing	FCYCII	- \	lor realing	
Degradation coefficient			Degradation coefficient	
cooling	Cdc	0.25 -	heating	Cdh 0.25 -
Electric power input in power n			Annual electricity consumption	O00 246 LAME !-
off mode standby mode	Poff Psb	6 W 6 W	cooling heating / Average	Qce 316 kWh/a Qhe 1692 kWh/a
thermostat-off mode	PSD Pto(cooling)	25 W	heating / Warmer	Qhe 1797 kWh/a
	Pto(cooling)	20 W	heating / volder	Qhe - kWh/a
crankcase heater mode	Pck	0 W		
	<u>'</u>	•	7.5	
Capacity control(indicate one of	f three options)		Other items	
			Sound power level(indoor)	Lwa 60 dB(A)
fixed	No		Sound power level(outdoor) Global warming potential	Lwa 63 dB(A) GWP 675 kgCO2ed
staged	No		Rated air flow(indoor)	- 870 m ³ /h
variable	Yes		Rated air flow(indoor)	- 2490 m³/h
Contact details for obtaining		ne manufacturer	or of its authorised representative.	2300 111:711
more information	(EU)MHIAE SERVICES B.			
			M Amsterdam, Netherlands. P.O.Box 23	393 1100 DW Amsterdam, Netherlands
	(UK)Mitsubishi Heavy Indu			
	5 The Square, Stockley	Park, Uxbridge, N	liddlesex, UB11 1ET,United Kingdom	

12. REFERENCE

(1) Outline

1-1) R32 as the alternative refrigerant for residential air-conditioners

As for the R410A refrigerant which we have been usually using for air-conditioners, in case of emissions into the atmosphere, we have been adopting the collection of refrigerant etc. in order to restrain the world from global warming.

Based on the 4th basic ecological plan, it is said that the amount of emission of the green house effect gases including the refrigerants which are being used for air-conditioners shall be reduced 80% by 2050, emissions of any kind of freon gases which have especially high global warming coefficient must be reduced much more.

Hence, it is required to converted the freon gases we are using for air-conditioners into the refrigerants which have lower global warming even though they are exhausted into the atmosphere.

On the other hand, the refrigerants for air-conditioners, lower effect of global warming, to secure its performance and high energy efficiency and safety are required, however, the refrigerants which satisfy all of them have not been announced yet.

For this purpose, we have been studying to make use of the refrigerant like R32 which has short life in the atmosphere, even though it has low global warming but low combustibility under the practical use for safety.

In 2004, IEC, international electrical safety for air-conditioners had been corrected, the regulation for safety of air-conditioners which use the combustible refrigerant have been issued, in 2010, the regulation adopting the degree which is considered to be damaged slightly because of difficulty of ignition due to its low combustion speed was issued in ANSI/ASHRAE34 regulations.

R32 has been approved as the refrigerant whose combustion speed degree is lower than 10cm/sec, the standardization for safety use is being proceeded so that R32 can be used more widely.

Although all the air-conditioners which use R32 have been designed with deep consideration in order to guarantee the safety, some cautions which are mandatory to be kept during its installation and services are shown as follows.

1-2) Chemical characteristics of R32

(i) Chemical charactaristic

R32 is one of an ingredient which composes R410A, without toxicity, the chemically stable compound which consists of carbon and fluorine.

Life of R32 after diffusing in the atmosphere is very short, approximately 4.9 years, as a result, although the effect to global warming can be reduced, there are little combustible due to large ratio of hydrogen.

	R32	R410A	R22
Chemical formation	CH_2F_2	CH ₂ F ₂ /CHF ₂ CF ₃	CHCLF ₂
Composition (Mixture ratio weight%)	Single composition	R32/R125 (50/50 weight%)	Single composition
Boiling point	-51.7℃	-51.5℃	-40.8℃
Pressure at 50°C	3.14	3.07	1.94
Performance at 0/50°C	160	141	100
COP at Te/Tc/SC/SH=5/50/3/0°C	95	91	100
ODP(Ozone Depletion Potential)	0	0	0.055
GWP(Global Warming Potential)	675	2090	1810
Combustible charactaristic	A2L	A1	A1
Toxicity	No	No	No

Table1 Chemical charactaristic

(ii) Pressure charactaristic

As mentioned in table 2, vapor pressure of R32 is almost same as R410A under the identical refrigerant temperature, and it has 1.6 times of high performance comparision with R22.

Therefore, tool and apparatus which are intended to be used under high pressure condition shall be required same as R410A when service and installation are implemented.

Table2 Comparison of saturated vapour pressure (MPa)

Refrigerant Temperature [°C]	R32	R410A	R22
-20	0.30	0.30	0.14
0	0.71	0.70	0.40
20	1.37	1.35	0.81
40	2.38	2.32	1.43
60	3.84	3.73	2.33
65	4.29	4.17	2.60

1-3) Combustion characteristic

R32 is possible to combust slightly when following conditions (gas density and ignition energy) coincide.

a) Combustible gas density by mixture with the air

In the event that if the ignition source which is possible to ignite is within the gas density mentioned in table 3, R32 might combust.

However, the combustible gas density of R32 is higher than that of propane's one.

In addition, since the combustible gas density condition of R32 is possible to cause hypoxia (density of oxygen in the air is less than 18%), this is not the environment where people can work normally.

Table3 Combustible density range

	R32	Propane (Reference)
Density upper limit (vol%)	29.3	9.5
Density lower limit (vol%)	13.3	1.8

b) Energy necessary for ignition.

It is said that R32 is less combustible gas than propane, since the energy which enables to combust is big, for example, static electricity around the human body and electric lighter (few mJ) can not make it ignite.

Table4 Minimum energy to ignite

	R32	Propane
Minimum energy to ignite (mJ)	15	0.246

c) Combustion speed

Since the combustion speed of R32 is low, it never combusts explosively like propane.

Table5 Combustion speed

	R32	Propane
Combustion speed (cm/s)	6.7	38.7

Consequently, although the ignition never happens under the conditions of usual use and work, however, in the event of the ignition, please handle with great care because the fire might extend once the ignition occurs.

1-4) Refrigerant oil for R32

The refrigerant oil for R32 differs from the mineral oil which is being used for R22, since it is based on the synthetic oil for R32, please ensure to use the designated one.

(2) Cautions for safety

2-1) Transport of equipment containing flammable refrigerants

It is necessary to follow the applicable transport regulations during the transportation with respect to equipment containing flammable gas.

2-2) Marking of equipment using signs

All required signs are to be maintained and employers should ensure that employees receive suitable and sufficient instruction and training on the meaning of appropriate safety signs and the actions that need to be taken in connection with these signs.

2-3) Disposal of equipment using flammable refrigerants

National Regulations shall be followed.

2-4) Symbols

The following symbols and the information of the warning marking shall be provided as follows:



Symbol ISO 7010-W021 (2011)

Warning; Risk of fire / Flammable materials



A2L symbol

Warning; Low burning velocity material



Symbol ISO 7000-1641 (2004-01)

Operator's manual; operating instructions



Symbol ISO 7000-1659 (2004-01)

Service indicator; read technical manual

(a) WARNING

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

- (b) The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.
- (c) Do not pierce or burn.
- (d) Be aware that refrigerants may not contain an odour.

(3) General

- 3-1) The following information shall be specified in the manual where the information is needed for the function of the manual and as applicable to the appliance:
 - (a) Information for spaces where refrigerant pipes are allowed, including statements
 - that the installation of pipe-work shall be kept to a minimum;
 - that pipe-work shall be protected from physical damage and, in the case of flammable refrigerants, shall not be installed in an unventilated space, if that space is smaller than Amin in Annex GG;
 - that compliance with national gas regulations shall be observed;
 - that mechanical connections made in accordance with 22.118 shall be accessible for maintenance purposes;
 - that, for appliances containing flammable refrigerants, the minimum floor area of the room shall be mentioned in the form of a table or a single figure without reference to a formula;
 - (b) The maximum refrigerant charge amount (M);
 - (c) The minimum rated airflow, if required by Annex GG;
 - (d) Information for handling, installation, cleaning, servicing and disposal of refrigerant;
 - (e) The minimum floor area of the room or the special requirements for the room in which an appliance containing flammable refrigerants can be located as defined in Annex GG, except where the refrigerant charge (M) is less than or equal to m1 (M ≤ m1);
 - (f) A warning to keep any required ventilation openings clear of obstruction;
 - (g) A notice that servicing shall be performed only as recommended by the manufacturer.

3-2) Qualification of workers

Every working procedure that affects safety means shall only be carried out by competent persons according to Annex HH. Examples for such working procedures are:

- Breaking into the refrigerating circuit;
- Opening of sealed components;
- Opening of ventilated enclosures.

► Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised.

For repair to the refrigerating system, following precautions shall be taken prior to conducting work on the system.

► Work procedure

Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

► General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.

Work in confined spaces shall be avoided.

The area around the workspace shall be sectioned off.

Ensure that the conditions within the area have been made safe by control of flammable materials.

► Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres.

Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

▶ Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

► No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion.

All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space.

Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.

"No Smoking" signs shall be displayed.

► Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out.

The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

► Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants including R32:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

► Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.

If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.

If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used

This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

▶ Repairs to sealed components

During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.

If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

▶ Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected.

This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure that the apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres.

Replacement parts shall be in accordance with the manufacturer's specifications.

► Repair to intrinsically safe components

(1) Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

► Cabling

(1) Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

▶ Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

► Leak detection methods

The following leak detection methods are deemed acceptable for all refrigerant systems.

- (1) Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
 - Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
 - Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.
- (2) Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
- (3) If a leak is suspected, all naked flames shall be removed/extinguished.
- (4) If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak.
 - For appliances containing flammable refrigerants, oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

► Removal and evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration.

The following procedure shall be adhered to:

- remove refrigerant;
- purge the circuit with inert gas;
- evacuate;
- purge again with inert gas;
- open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders.

For appliances containing flammable refrigerants, the system shall be "flushed" with OFN to render the unit safe.

This process may need to be repeated several times.

Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.

This process shall be repeated until no refrigerant is within the system.

When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and that ventilation is available.

► Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas.

The system shall be leak-tested on completion of charging but prior to commissioning.

A follow up leak test shall be carried out prior to leaving the site.

▶ Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure ensure that:
 - · mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturer's instructions.
- h) Do not overfill cylinders. (No more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

► Labelling

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.

The label shall be dated and signed.

For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

► Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.

Ensure that the correct number of cylinders for holding the total system charge are available.

All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).

Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.

Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants.

In addition, a set of calibrated weighing scales shall be available and in good working order.

Hoses shall be complete with leak-free disconnect couplings and in good condition.

Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.

Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.

Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.

The evacuation process shall be carried out prior to returning the compressor to the suppliers.

Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

INVERTER CEILING CONCEALED TYPE RESIDENTIAL AIR-CONDITIONERS



MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

2-3, Marunouchi 3-chome, Chiyoda-ku, Tokyo, 100-8332, Japan http://www.mhi-mth.co.jp/en/